



FACTOR

150mm
PARLATMA MAKİNESİ

KULLANMA KILAVUZU

OBP150



ÖNEMLİ:

Kendi güvenliğiniz için, bu ürünü kullanmadan önce tüm Güvenlik Talimatlarını ve Kullanım Kılavuzunu okuyup uygulayın.

ÖZELLİKLER

TEKNİK ÖZELLİKLER

Güç	230-240V/50Hz, S1 250W
Hız	2980 dev/dak
Disk Boyutu	150x8x12.7mm

GÜVENLİK TALİMATLARI

PARLATICI GÜVENLİK UYARILARI

Kendi güvenliğinizi için, parlatıcıyı kullanmadan önce kullanım kılavuzunu okuyun.

Göz koruması takın.

Parlatıcı hızına uygun parlatma diski kullanın.

Parlatmayı diskin yan yüzeyiyle yapmayın.

Bu parlatıcıda taşlama taşı veya başka amaç dışı aksesuarlar kullanmayın.

Eldiven, kravat veya bol giysi giymeyin.

Koruyucu kapağı devre dışı bırakılmış, hasar görmüş veya çıkarılmış halde cihazı çalıştırmayın.

Üretici tarafından tavsiye edilmeyen aksesuarların kullanımı, kişisel yaralanma riski oluşturabilir.

Servis sırasında yalnızca orijinal ve aynı özellikte yedek parçalar kullanın.

Sadece ilgili standartlarca onaylanmış koruyucu ekipman kullanın. Onaysız ekipman yeterli koruma sağlamayabilir. Göz koruması ANSI-onaylı, solunum koruması ise çalışılan alandaki risklere uygun NIOSH-onaylı olmalıdır.

Dikkatli olun, ne yaptığınıza odaklanın ve sağduyulu davranın. Yorgun, ilaç, alkol veya uyuşturucu etkisi altındayken elektrikli alet kullanmayın. Anlık dikkatsizlik ciddi yaralanmalara yol açabilir.

Endüstriyel kullanımlarda OSHA (İş Sağlığı ve Güvenliği Kurumu) yönergelerine uyun.

Cihaz üzerindeki etiket ve isim plakalarını koruyun. Bunlar önemli güvenlik bilgileri içerir. Okunmaz veya eksiğe, yetkili servis ile iletişime geçin ve yenisini talep edin.

Kazara çalıştırmayı önleyin. Cihazı açmadan önce çalışmaya hazır olun.

Kalp pili kullananlar, kullanımdan önce doktorlarına danışmalıdır. Elektromanyetik alanlar kalp pilinde arızaya neden olabilir.

UYARI: Zımparalama, kesme, taşlama, delme ve benzeri inşaat faaliyetleri sırasında oluşan tozlar, ciddi akciğer hastalıklarına neden olduğu bilinen kimyasallar içerebilir. Bu kimyasallardan bazıları:

Kurşun içeren boyalar

Tuğla, çimento veya diğer yapı malzemelerinden silikon dioksit (kristalin silica (SiO₂))

Kimyasal işlem görmüş keresteden arsenik ve krom

Bu tür işlerle ne sıklıkla uğraştığınıza bağlı olarak riskiniz değişir.

Bu kimyasallara maruziyeti azaltmak için iyi havalandırılan yerlerde çalışın ve özel olarak mikroskobik parçacıkları filtreleyen toz maskeleri gibi onaylı koruyucu ekipman kullanın. (California Sağlık ve Güvenlik Yasası § 25249.5)

UYARI: Bu ürünün kablolu, kurşun ve/veya di-(2-etilheksil) plastikleri sertleştiren katkı maddesi (DEHP) içerebilir. Bu kimyasallar, Kaliforniya Eyaleti tarafından kansere, doğum kusurlarına veya üreme sistemi üzerindeki zararlı etkilerine neden olabileceği bilinen maddeler arasında yer almaktadır. Kullanımdan sonra ellerinizi yıkayın. (California Sağlık ve Güvenlik Yasası § 25249.5)

Bu kılavuzdaki uyarılar, önlemler ve talimatlar, oluşabilecek tüm durumları kapsamayabilir. Operatörün sağduyu ve dikkatli davranması gerekir; bunlar ürüne dahil edilemeyen, ancak operatör tarafından sağlanması gereken faktörlerdir.

TİTREŞİM GÜVENLİĞİ

Bu cihaz kullanılırken titreşim oluşturur. Tekrarlayan veya uzun süreli titreşim maruziyeti, özellikle eller, kollar ve omuzlarda geçici veya kalıcı fiziksel zararlar verebilir. Titreşim kaynaklı yaralanma riskini azaltmak için:

Titreşimli cihazları düzenli veya uzun süre kullanan herkes önce doktor kontrolünden geçmeli ve sonrasında düzenli sağlık kontrolleri yaptırmalıdır. Kan dolaşımı bozukluğu, geçmişte el yaralanmaları, sinir sistemi hastalıkları, diyabet veya Raynaud hastalığı olanlar ile hamile kadınlar bu cihazı kullanmamalıdır. Titremeyle ilişkili (karıncalanma, uyuşma, parmaklarda beyazlık veya mavilik gibi) herhangi bir belirti hissederseniz, en kısa sürede doktora başvurun.

Kullanım sırasında sigara içmeyin. Nikotin, eller ve parmaklara olan kan akışını azaltarak titreşim kaynaklı yaralanma riskini artırır.

Farklı işlemler arasında seçim yaparken, en düşük titreşim oluşturan aleti tercih edin.

Her iş günü içinde titreşimsiz dinlenme süreleri planlayın.



Cihazın işi yapmasına izin verin, aşırı güç uygulamaktan kaçının.

Bu kılavuzda açıklandığı şekilde cihazın bakımını yaparak titreşimi azaltın. Anormal titreşim oluşursa kullanımı hemen durdurun.

PAKET İÇERİĞİ

Nakliye sırasında oluşabilecek hasarları kontrol edin. Tüm parça ve aksesuarların eksiksiz olup olmadığını hemen kontrol edin. Tezgah tipi parlatıcı (bench buffer) kendisi, bir bütün olarak monte edilmiş şekilde teslim edilir. Aşağıda listelenen ek parçalar ise şunlardır:

No.	Açıklama	Ad.
1	Parlatma Makinesi (görselde yok)	1
2	Sert parlatma disk	1
3	Flanel parlatma disk	1
4	Distansiyel (Ara Parça)	2
5	Altıgen somun	2
6	Tekerlek Flanşı	4

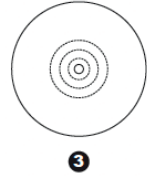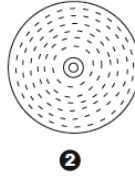

PARLATMA DİSKLERİNİN TAKILMASI

Tezgah tipi parlatıcıya parlatma diskini takmak için:

1. Güç kablosunun prizden çıkarıldığından emin olun.

2. Altıgen somunu (5) sökün.

3. Distansiyelleri (1) mile takın.

NOT: Mil üzerine birden fazla disk/tekerlek takarken distansiyel kullanmaya gerek yoktur.

4. İç tekerlek flanşını (2) mile kaydırarak takın.


5. Parlatma diskini (3) mile kaydırın ve iç tekerlek flanşına dayanacak şekilde yerleştirin.

6. Dış tekerlek flanşını (4) kaydırın ve flanşın düz tarafını parlatma diskine dayayın.

7. Altıgen somunu (5) mile takarak sıkın. Parlatma diskinin sağlam şekilde yerleştiğinden ve somunun dış tekerlek flanşına tam temas ettiğinden emin olun. Gerekirse ek distansiyeller (tedarik edilmez) kullanın.

8. Sağdaki parlatma diskini de yukarıdaki adımları takip ederek takın.


NOT: "Sağ" ve "sol" ifadesi, parlatıcının önünden, açma-kapama düğmesine bakarken konumlandırmayı ifade eder.

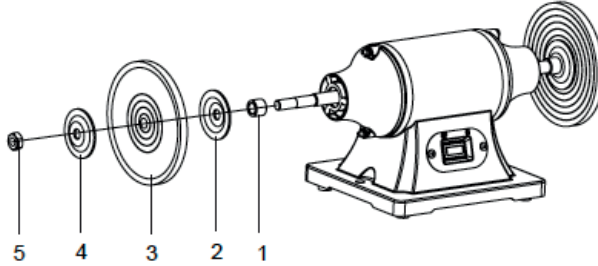

AÇ/KAPA BUTONU

Parlatma makinesini açmak için, güç anahtarının "ON" (AÇIK) olarak işaretlenmiş tarafına basınız.

Parlatma makinesini kapatmak için, güç anahtarının "OFF" (KAPALI) olarak işaretlenmiş tarafına basınız.

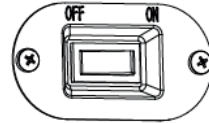

PARLATMA DİSKLERİNİN KULLANIMI

1. Aç/Kapa butonunun kapalı konumunda olduğundan emin olun, ardından cihazı prize takın.

2. Cihazı açın.

3. Her iki elinizle iş parçasını sıkıca tutun ve yavaşça parlatma diskine değdirin. Geri tepme ve diğer tehlikeleri önlemek için, sadece diskin alt çeyreği ile parlatma yapın. Parlatıcının önündeki yön oklarına dikkat edin.

4. İş parçasını diskin dönüş yönünde, orta ile sert arasında bir basınç uygulayarak hareket ettirin.

NOT: En iyi yüzey kalitesini elde etmek için iş parçasına uygun miktarda baskı uygulanmalıdır. Yetersiz baskı, iş parçasında belirgin bir değişiklik yaratmaz. Aşırı baskı ise parlatma diskinin hızını yavaşlatabilir ve iş parçasında düzensiz izler oluşturabilir.


5. Her birkaç dakikada bir, parlatma disklerinin durumunu ve aşınmasını kontrol edin. Aşınmış veya hasar görmüş diskleri değiştirin.

6. Parlatma işlemi tamamlandığında, parlatıcıyı kapatmadan önce iş parçasını parlatma diskinden uzaklaştırın.

7. Kazaları önlemek için, kullanımdan sonra cihazı kapatın ve elektrik prizinden çıkarın. Temizleyin ve çocukların ulaşamayacağı bir yerde muhafaza edin.

Dikkat!

İş parçasını yalnızca, parlatma diskinin iş parçasından uzağa doğru dönen kısmına temas ettirin. Aksi takdirde, parlatma diski nesneleri yüksek hızla fırlatabilir ve bu ciddi yaralanmalara yol açabilir. Parlatıcının ön yüzündeki yön oklarına dikkat edin ve yalnızca parlatma diskinin alt çeyrek bölümünde çalışın.

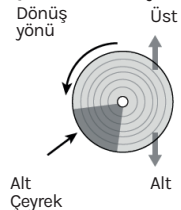

BAKIM

Uyarı!

Herhangi bir montaj veya ayarlama yapmadan önce, her zaman AÇMA/KAPAMA butonunu KAPALI konuma getirin ve güç kablosunu prizden çekin. Bu adımın atlanması, cihazın kazara çalışmasına ve ciddi yaralanmalara neden olabilir.

Uyarı!

Cihaz arızasından kaynaklanabilecek ciddi yaralanmaları önlemek için hasarlı ekipman kullanmayın. Olağan dışı ses veya titreşim fark ederseniz, kullanıma devam etmeden önce sorunu gidirin.

TEMİZLİK, BAKIM VE YAĞLAMA

HER KULLANIMDAN ÖNCE, cihazın genel durumunu kontrol edin. Aşağıdaki durumlara dikkat edin:

- Gevşek bağlantı elemanları,
- Hareketli parçalarda hizasızlık veya sıkışma,
- Çatlak veya kırık parçalar,
- Hasarlı elektrik kabloları ve güvenli çalışmayı etkileyebilecek diğer durumlar.

KULLANIMDAN SONRA, cihazın dış yüzeylerini temiz, kuru bir bezle silin.

Parlatma disklerini temizlemek için yalnızca hafif deterjan kullanarak elde yıkayın ve hava ile kurutun. Cihazın hiçbir parçasını sıvıya batırmayın.

Parlatma diskisi fazla sertleşmişse, sert telli bir fırça (ürüne dahil değildir) ile diskin tüylerini kabartın. Belirli aralıklarla, ANSI onaylı koruyucu gözlük ve NIOSH onaylı solunum koruması kullanarak, motor menfezlerindeki (havalandırma deliklerindeki) tozu kuru basınçlı hava ile temizleyin.

UYARI! Bu elektrikli cihazın güç kablosu hasar görmüşse, yalnızca yetkili bir servis teknisyeni tarafından değiştirilmelidir.

YETKİLİ SERVİSLER

ADANA

ÖZİŞİKLAR ELEK-AÇK MEKANİK
KARASOKU MH.28010 SK.N:4/1
SEYHAN 0322 359 13 33

OMSER TEKNİK / MURAT YILMAZ
YESİLOBA MAH.46023 SOK.NO:11/A
SEYHAN-ADANA
0322 428 92 22-23-24

DEMİR ELEKTRİK
BEKTAŞ DEMİR
KARASOKU MAH. KIZILAY CAD.
28010 SK. NO:4-D-1 SEYHAN
0322 352 97 95

ADİYAMAN
EMEK TEKNİKMAKİNA
REİS SERVİS
ABDULMUSA AKASLAN BOBİNAJ
CUMHURİYET MAH. MUFTULUK CAD.
NO:43 ÇEVREYOLU ÜZERİ MERKEZ
0545 402 02 21

AFYON
EMEK-İŞ BOBİNAJ
ERMAN MANAP
CUMHURİYET MAH. MENDERES CD.
KARAHİSAR APT. 0272 212 11 32

KATAR BOBİNAJ / MUSTAFA
KATAR
SANAİY SİTESİ 6. BLOK NO:27
0272 214 48 64

AĞRI
MAK-TEK SERVİSE EL ALETLERİ
YUSUF TOKA
KACIZMAN CAD. BÜLBÜL SK. NO:52
MERKEZ 0554 006 98 97 - 0537 649
41 70

AKSARAY
MERT ELEKTRİK BOBİNAJ
ZEKİ GÜZÜYURDU
BAHÇESARAY MAH. 8637 NOLU
SOK. K6
0382 215 68 33

AMASYA
AKOTEK BOBİNAJ
GÜMÜŞLÜ MAH. SARAYDÜZÜ CAD.
NO:13 0358 218 71 19

ANKARA
GELİŞİM EL ALETLERİ
MUSTAFA ÖVEZ
31.SK. BAŞI TİCARET HAN NO:5
YENİMAHALLE 0312 385 90 98

AYDINER BOBİNAJ ELEKTRİK
SAN.VE TİC. / HÜSEYİN AYDEMİR
REİS SERVİS
1178. CAD. (2.SOK.) NO:89
OSTİM 0312 354 29 28

ANTALYA
GÖKLER MAKİNA / REİS SERVİS
GÖKHAN GÖKLER
CUMHURİYET MAH.ESKİ SAN.SİT.682
SOK.NO:37 MERKEZ 0242 343 21 29

ABALIOĞLU BOBİNAJ
MEHMET ABALI
CUMHURİYET MAH. ASAĞI SAN.
YOLU ÜZERİ ÇARŞI SİTİNO:9/A
ALANYA 0242 512 63 18

AKTİF BOBİNAJ / REİS SERVİS
HÜSEYİN SARI
SANAİY MAH. 2005 SOK. NO:25/201
MANAVGAT 0242 742 56 29

TEKNİK BOBİNAJ / AHMET KAFALI
YUKARIHİSAR MAH. HASTANE CAD.
NO:12 / A MANAVGAT
0242 746 48 57

AYDIN
KİLCİOĞLU BOBİNAJ
ERCÜMENT KİLCİOĞLU
ATA MAH. ALT. SAN. SİT. 1 CAD.
N:6 MERKEZ 0256 214 30 32

ÖZDE OTOMOTİV MAKİNA
YAŞAR AYDIN
ZEYBEK MAH. 1521 SK. NO:4-6D
EFELEİ
0546 453 78 12

ENERJİ TEKNİK BOBİNAJ
EKREM KARABULUT
YENİ MAHALLE 819 SOKAK
BİDAN APARTMANI NO:2-B
DİDİM 0256 811 43 70

AKDENİZ TEKNİK BOBİNAJ
AŞKIN AKDENİZ
CUMHURİYET MH.ALBAĞRAK CD.
N:134/ SÖKE 0256 512 63 44

BALIKESİR
TEZGER BOBİNAJ / REİS SERVİS
EREN TESSER
YENİ SANAİY SİTESİ CUMHURİYET
CAD.NO:198/6 MERKEZ
266 246 23 01

SUNAY BOBİNAJ / AHMET SUNAY
YENİ SAN.SİT.19-AĞUSTOS CAD.
NO:28
0266 246 52 70

İLGİN BOBİNAJ / REİS SERVİS
HÜSEYİN İLGİN
17 EYLÜL MAH-HACI ALI SOK.
NO:31/C BANDIRMA
0266 714 51 99

BATMAN
AKTİF BOBİNAJ / REİS SERVİS
HİKMETYAR BİLGE
YENİ MAHALLE 16.CAD. 1008 SOK.
NO:8 0488 214 56 64

BİNGÖL
ÜMİT BOBİNAJ
ABDULMELİK SUNA
ŞEHİT MUSTAFA GÜNDOĞDU
MH.BAYINDIRLIK CD.SS ESNAF
TUCC. KOOP.GALERİCİLER SİT.
NO:38 MERKEZ 0544 842 58 00

BOLU
GARANTİ BOBİNAJ
YUNUS ZAFER AKTAŞ
SANAİY SİTESİ 28/2 MERKEZ
0374 215 51 23

BURDUR
ÇEVİKLER BOB. / ÜMİT ÇEVİK
AYDINLIKEVLER MH.KSS.2.SK.15
MERKEZ
0248 252 94 37

BURSA
CANTÜRKLER BOBİNAJ
REİS SERVİS
ADEM CANTÜRK
K-SANAİY SİTESİ YEDEK PARÇ.SİTİ.Çİ
48.CAD.NO:77 NİLÜFER
0224 253 15 50

TOKER MERT TEKNİK
İBRAHİM TOKER
SAKARYA MAH.1.GÜVEN SOK.
NO:12/A ÇOMUĞAZI
0224 273 54 18

ÇAĞ TEKNİK BOBİNAJ
REİS SERVİS
CENGİZ ESGİN
MAH.MULDEY MAH.ERTUĞRULGAZI-
CAD.ARMAĞAN SOK.NO:21 İNEĞÖL
0224 715 57 37

ÇANAKKALE
KISAÇIK BOBİNAJ / SAMİ KISAÇIK
KAMIK KEMAL MAH.KAYNAK SOK.
NO:1-C MERKEZ 0286 217 96 71

ŞAHİN BOBİNAJ / HASAN ŞAHİN
İSTİKLAL CAD. NO:154 BIGA
0286 316 11 71

ÇANKIRI
GENÇLER ELEKTRİK&BOBİNAJ
AHMET ALABAY
BUGDAY PAZARI MAH.TALAT ONAY
BULVARI A- BLOK NO:11/2 MERKEZ
0376 213 60 33

ÇORUM
ÖZKAN BOBİNAJ
ÖZKAN SÖYLEYEN
GÜLABİBEY MAH. KUBBELİ CAD.
NO:77
0364 224 75 97

DENİZLİ

ÖRSLER BOBİNAJ
SANİM ÖRSÖĞLU
AHI SINAN CAD.SEDEF CARŞISI
NO:9-10 0258 261 42 74

DİYARBAKIR
İKRA BOBİNAJ / REİS SERVİS
SALİH SÜREN
1.SAN.SİT.B/5 BLOK NO.6
0412 237 60 21

DÜZCE
MOTOR MEKANİK BOBİNAJ
ZAFER ÜNAL
ESKİ SANAİY ÇARŞISI TAHIR ALTIN
SOK NO:27 0380 523 87 03

BERKE MAKİNA
AYDIN ÇETİNKAYA
KÜLTÜR MAH.793 SOKAK NO:10
MERKEZ 0380 524 83 83

ERİRNE
ERAY BOBİNAJ / M. ERAY TUĞRUL
KUÇUK SANAİY SİTESİ 4.BLOK
NO:14
MERKEZ 0284 225 26 92

ELAZIĞ
TEKSER TEKNİK
MUAMMER ATALAY
SANAİY SİT. 10. SOK. NO:4
0424 224 83 14

ERZİNCAN
BAKIRIOĞLU ELEK. MAK. HIRD.
İNŞ. NAK. SAN. VE TİC. LTD. ŞTİ.
HARUN SUDAŞ / REİS SERVİS
GÜLABİBEY MAH.ŞEHİT KENAN
ARDIÇ CAD.NO:44/A MERKEZ
0446 223 09 59

ERZURUM
TEKNİK MAKİNA BOBİNAJ
MÜKREMIN SEVİNDİ
REİS SERVİS
SANAİY DEMİRCİLER SİTESİ 1.BLOK
NO.46 YAKUTİYE
0442 243 17 34

ESKİŞEHİR
TEPEBAŞI TEKNİK SANAİY VE
TİC.LTD. ŞTİ.
TUNALI MAH. SEMT. SAKARYA-2
CAD. NO:96 D TEL:0222 323 59 80

GAZİANTEP
YILDIZ BOBİNAJ / REİS SERVİS
MEHMET KOÇYİĞİT
İSMETPAŞA MAH.1. NOLU CAD.
NO:23/F ŞAHİNBEY
0342 221 15 74

ÇALIKOĞLU BOBİNAJ
TOLGA ÇALIKOĞLU
KÜŞGET SAN.MAH.SEMT 60031
NOLU CD.1 ŞEHİTKAMİL
0342 235 63 09

PARLADI ELK. BOBİNAJ
2.ORGANİZE SAN. BÖLG.SOSYAL
TESİSLER B BLOK NO:4 BAŞPINAR
0342 337 74 87

GİRESUN
ÖZCAN TEKNİK BOBİNAJ
DENİZ ÖZCAN
GEDİKİYE MAHALLESİ SANAİY
SİTESİ 6.SOKAK NO:5 MERKEZ
0454 212 17 35

HATAY

PAK İŞ ELEKTRİK
REİS SERVİS
MUZAFFER PAK
HARAPARASI MAH.
2.CAD.NO:7 ANTAKYA
0326 215 64 73 - 0326 221 15 45

PAK İŞ ELEKTRİK&ŞUBE
YENİ SANAİY SİTESİ 6.İNİŞ 4. CAD.
GÜZELBURÇ NO.10 ANTAKYA
0323 215 64 73

KAR BOBİNAJ / REİS SERVİS
ABDULLAH KAR
GÜZELBURÇ MAH. 6. İNİŞ CAD. NO:12C
ANTAKYA 0246 223 70 11

ULUSAL TEKNİK
ESREF EZBER
MURADİYE MH. 324/1 SOK. NO:29
İSKENDERUN 0326 616 09 31

İSPARTA
İZMİR BOBİNAJ / REİS SERVİS
EMİN ÖZSÖY
YENİ SANAİY SİTESİ
6.BLOK NO.28 0246 223 70 11

İSTANBUL-ANADOLU
AYKUT ELEKTRİK
REİS SERVİS
ERTAN KESKİNOĞLU
KARLIKTEPE MAH.SOĞANLIK CAD.
KESKİNOĞLU APPT.NO:78/B KARTAL
216 488 04 56/42-68

ERMAK GRUP TEK. SERVİS
REİS SERVİS
İSKENDER KÖSE
ALTINŞEHİR MAH. ALEMDAĞ CAD.
NO:626 ÜMRANİYE
216 540 46 28

PRATİK ELEKTROMEKANİK
REİS SERVİS
S. ALİ TUĞANLI
ALEMDAG CAD. RUZGARLI SOK.
NO:9/2 ÜMRANIYE
0216 344 03 50

SÖNMEZ ELEKTROMEKANİK
REİS SERVİS
NIHAT ÇELİK
AYDINTEPE MAH. YAVUZ CAD.KÖŞE
SOK.NO:5/3 TUZLA
0216 493 72 41

İSTANBUL-AVRUPA
DEMİRHAŞ MAKİNA / REİS SERVİS
SAİM DEMİRHAŞ
PERPA TİC.MERKEZİ B BLOK KAT:8
NO:995 ŞİŞLİ 0212 320 22 61

ERMAK MAKİNA / REİS SERVİS
DAVUT KÖSE
PERŞEMBE PAZARI CAD.ÖMER AĞA
SOK.NO:11 KARAKÖY
0212 252 33 95

EVREN ELEKTRİK
MUSTAFA MERSİN
TERSAANE CAD HOCA HANIM SOK
NO:23/1 KARAKÖY
0212 254 56 77

YILMAZLAR ELEKTRİK
YILMAZ ÖMERÖĞLU
TERSAANE CAD.ABDÜLSERRAH SOK
NO:8 KARAKÖY 0212 297 15 02

KARDEŞLER BOBİNAJ
REİS SERVİS
MURAT DEMİRHAŞ
GURSEL MAH. KAĞITHANE CAD.
NO:34/A
0212 224 97 54

YETKİLİ SERVİSLER

TEZCAN BOBİNAJ / REİS SERVİS
MEHMET TEZCAN
İKTELLİ ORGANİZE SANAYİ BÖLGESİ
ESKOOP SAN. SİTESİ B2 BLOK
NO:116 BAŞAKŞEHİR
0212 671 20 93/94

NUR TEKNİK BOBİNAJ
ABDULLAH ERKAN
PIRİ MEHMETPAŞA MAH.
BURHAN SOYSALAN SOK.NO:21
SİLİVRİ
0212 727 32 03

İZMİR
İRFAN BOBİNAJ / REİS SERVİS
İRFAN MAKİNACI
1310 SOK. NO.41/B ÇANKAYA
0232 425 35 49

ÇATALSU ELEKTRİK
NURAY ŞAHBUDAK
HİRDAVATÇILAR CARŞISI
1145/11 SOK.NO:9 YENİŞEHİR
0232 459 58 29

YILMAZ BOBİNAJ
2822 SOK.NO:2 1. SAN. SİT.
KONAK 0232 433 80 51

KENT BOBİNAJ
ÖMER KÖMÜRCÜ
8780/33 SOK.NO:50 ATA SAN. SİT.
ÇİĞLI 0232 328 10 33

MY TEKNİK SERVİS HİZM.
İNAL ÖZER
YEDİ EYLÜL MAH.5542 SOK.NO:39
İÇ KAPİ NO:1 TORBALI
0232 856 35 34

K.MARAS
KAHRAMAN HİRDAVAT BOBİNAJ
MESUT KURU
YENİ SANAYİ SİTESİ 25. CARŞI NO:68
DULKADIRIOĞLU 0344 236 29 68

ONURSEL ELEKTRİK ELEKTRONİK
BOB.TA.IT.İH.SN.TIC.LTD.ŞTİ
YENİ SANAYİ SİTESİ 5.CARŞI NO:99
MERKEZ 0344 236 10 24

ÜSTÜN BOBİNAJ
TUĞRUL ÜSTÜN
YENİ SANAYİ SİTESİ 9.BLOK NO:14
ELBİSTAN 0344 413 64 93

KARABÜK
DAMLAL ELEKTRİK
ABDULLAH ERDOĞAN
HURİYET MAH.İNÖNÜ CAD. AKTAŞ
SOK.17/B 370 412 77 00

KARAMAN
UZUN ELEKTRİK BOBİNAJ
RAMAZAN UZUN
HAMİDİYE MAH. YENİ SANAYİ SİT.
1866 SK. NO:15 MERKEZ
0338 213 70 79

MECHANİC ELEK. BOBİNAJ
DURMUŞ PANCAR
HAMİDİYE MAH. 735 SOK. NO:2
0338 213 10 20

KASTAMONU
NUR BOBİNAJ / MUSTAFA SAKAR
SAN.SİT.CAMI CAD.NO:29/A MERKEZ
0366 214 61 18

TABAKOĞLU BOBİNAJ
ALAEETTİN TİFTİK
METAL SANAYİ SİT.AZZİYE SOK.
N:1/3 TOSYA 0366 313 04 31

KAYSERİ
AKIN ELEKTRİK / REİS SERVİS
AHMET VAROL
SANAYİ BÖLGESİ
5. CAD. NO:8 0352 311 41 74

AKIN ELEKTRİK / REİS SERVİS
MEHTAP AYBEY
SANAYİ MAH.6005 CAD.8 D
KOCAŞINAN
0352 336 41 23

KIRKLARELİ
YALÇIN SOĞUTMA HAV.BOB.
MESUT YALÇIN
GÜNDOĞU MAH.FATİH CAD NO 95
LÜLEBURGAZ 0288 412 01 49

VATAN ELEKTRİK / ERTAN VATAN
KOCAŞINAN MAH.ÇAKMAK SOK.
ÇERİ APRT.NO:22/C LÜLEBURGAZ
0288 412 91 90

KOCAELİ
ÇETİNKAYA ELEKTROMEKANİK
REİS SERVİS
NECMETTİN ÇETİNKAYA
SANAYİ MAH. İZMİT SAN.SİT.12
CAD. 11.BLOK NO:1 İZMİT
0262 335 13 20

İNCE MOTOR BOBİNAJ
REİS SERVİS
ERSİN İNCE
MUSTAFA KEMALPAŞA MAH. 712 SOK.
NO:26 GEBZE
0262 646 46 15

KONYA
TEKYAMAN BOBİNAJ
REİS SERVİS
ETHEM YAMAN
FEVZİ ÇAKMAK MAHALLESİ 10563
SOK.NO:7 KARATAY
0332 342 68 50

YAVUZHAN BOBİNAJ
ADEM YAVUZ
KARATAY SANAYİ ÇOBANDEDE SOK.
NO:20 SELÇUKLU
0332 233 29 60

UĞUR SONDAJ BOB. SAN. TİC.
ZYA GÖKALP MAH. TÜRKMEN KÖYÜ
CAD. NO:36 EREĞLİ
0332 710 07 77

KÜTAYHA
KÜDRET BOBİNAJ
YENİ SAN. SİT. 19. SOK. NO: 28
MERKEZ 0274 230 00 14

MALATYA
KAPLAN BOBİNAJ
MEHMET KAPLAN
ÇAUSOĞLU MAH.YENİ SANAYİ SİTESİ
İMALAT SOK. NO:4 YEŞİLİYURT
0422 336 92 67

MANİSA
İRFAN BOBİNAJ
HAKAN MAKİNACI
GÜZELYURT MAH. M. AKİF ERSOY
CAD. 20. SK. BLOK NO:86/A
0236 236 22 96

KARDEŞLER ELEKTRİK BOBİNAJ
SANAYİ SİTESİ 4 NOLU SOK.
NO:2 ALAŞEHİR 0236 6543435

MARDİN
TENSEN BOBİNAJ / REİS SERVİS
ERSEN-ERTEN ÇELİK
YENİŞEHİR M.H.RAVZA CD.49.SK.
N:7/15 ARTUKLU
0482 213 37 62

MERSİN
COŞKUN BOBİNAJ / REİS SERVİS
SEDAT COŞKUN
SİTELER M.H.SANAYİ SİTESİ 5678 SK.
G31 BLOK N:4/K AKDENİZ
0536 940 06 93

MUĞLA
HIZIR BOBİNAJ
MURAT HIZIR
SANAYİ SİTESİ DEMİRÖZ SOKAK
NO:20 BODURUM
0252 313 61 69

MERKEZ BOBİNAJ İNŞ. LTD. ŞTİ.
TUZLA MAH. İNÖNÜ (TSY) BLV.
NO:7/B İÇ KAPİ NO:1 FETHİYE
0252 612 10 51

EYÜP BOBİNAJ
EYÜP TİRİMOĞULLARI
ULUSAL EGEMENLİK CD.N:87
MARMARİS 0252 412 14 50

NEVŞEHİR
ARICAN BOBİNAJ / REİS SERVİS
ERHAN ARICAN
YENİ SANAYİ SİTESİ
36 CI DUKKANLAR NO:28 MERKEZ
0384 213 53 11

NİĞDE
GÜL BOBİNAJ / REİS SERVİS
ÖMER ÜÇGÜLLÜ
ŞAHİNALI M.H ŞEHİTBAYRAMAKSOY
SOKAK NO:18 MERKEZ
0534 386 40 09

ORDU
ERKA BOBİNAJ / REİS SERVİS
KAAN BASKIN
MUSTAFA KEMALPAŞA MAH.
PARK SOK.NO:17 İÇ KAPİ:1
0543 600 38 02

KAHVECİOĞLU ELEKTRİK
CUMHUR KAHVECİ
DURUGÖL MAHALLESİ ATATÜRK
BULVARI NO:487/A
0452 233 13 35

SİMGE SOĞUTMA
DUMLUPINAR MAH. PAZAR SK. N:35
ÜNYE 0452 233 13 35

RİZE
KOYUNCULAR TEKNİK
REİS SERVİS
EYÜP KOYUNCU
TOPHANE MAH.KAÇKAR CAD NO:9
MERKEZ 0464 217 37 31

CEMBERÇİ BOBİNAJ
MEHMET CEMBERÇİ
ENGİNERE MAH. SAN. SİT.
F BLOK: NO:20 MERKEZ
0464 217 45 00

MERKEZ BOBİNAJ -
MUHAMMET BİRİNCİ
EKREM ORHON MAH. HANİMELİ SK.
NO:4/B 0464 212 20 05

SAKARYA
ENGİN ELEKTRİK
ENGİN DURMUŞ
MALTEPE MAH. ORHAN GAZİ CAD.
(TEK YOKUŞU) ŞEHİT METİN AKKUŞ
SOK. NO:19 0264 291 05 67

İR MAKİNA
FATİH İR
FEVZİ PAŞA CAD. ÇARK SAN.
SİT.N:36 SERDİVAN 0264 279 01 81

2V MEKATRONİK / REİS SERVİS
VEDAT AMASYALI
GÜNEY MOB.SAN.SİT.1288
SK.N:11/A ERENLER
0264 666 18 19

SAMSUN
AS BOBİNAJ / KANİ ASAL
SANAYİ SİTESİ AHİEVAN CAD.
NO:38 ÇANIK
0362 238 09 66

UFUK BOBİNAJ TİCARET -
MAHMET SERKAN ŞİMGİ
YENİ MAHESKİ SANAYİ SİTESİ
1.SOK. NO:14 ÇANIK
0362 238 07 40

İŞILDAK BOBİNAJ
MELİH İŞILDAK
ALACAĞAM CD. BELEDİYE DUKKANLARI
NO:115 BAĞRA 0362 543 10 49

METİN BOBİNAJ - ADEM METİN
REİS SERVİS
ESKİ SAN. SİT. KILIÇARSLAN CAD.
NO:49 0362 228 64 25

SİVAS
DOĞAN TEKNİK ELEKTRİK
MAKİNA
KEREM DOĞAN
PAŞABEY MAH.HAYRAT SOK.
SURTAS APRT. ALTI NO:2/C
MERKEZ 0507 707 57 58

ŞANLIURFA
AKŞAN BOBİNAJ
HALİL ÇİMENÖĞLU
REİS SERVİS
SANAYİ SİT.ÇEŞUR CD.N:47 CAD.
NO:48 HALILIYE
0414 314 17 38

TEKİRDAĞ
ÇETİN ELEKTRİK BOBİNAJ
REİS SERVİS
EROL ÇETİN
100.YIL MAH. MEHMET İLHAN SOK.
NO:12/1 C SÜLEYMANPAŞA
0282 263 86 60
TRAKYA BOBİNAJ ELEKTRİK
NECATİ AKMAN
SEYHİNAN M.H.EREĞLİ SK.
KLAVUZ İŞ HANI NO:2 ÇORLU
0282 653 27 77

ÖZYL ELEKTRİK ENDÜSTRİYEL
SERVİS
KURTULUŞ YILDIRIM
GAZİ ÖSMAN PAŞA MAH. ALIAGA SK.
NO: 4 A ÇERKEZKÖY
0282 726 67 04

TOKAT
ÇETİN ELEKTRİK BOBİNAJ
MUSTAFA ÇETİN
SANAYİ SİTESİ CAMİ ALTI NO.13-18
0356 214 63 07

TRABZON
DİNÇ BOBİNAJ - AYHAN DİNÇER
REİS SERVİS
BÜYÜK SAN. SİT SOS. HİZ. BİN.
NO:3-B DEĞİRMENDERE
0462 325 22 02

MAKİNA MARKET
AHMET SALİH ŞAHİNER
SANAYİ MAHALLESİ DOST SOK.
NO:69 ORTAHİSAR
0462 328 14 80

VAN
ÇAĞRI BOBİNAJ
MUHAMMED REŞİT COŞAR
CUMHURİYET CAD.ALÇEKİÇ PAŞALI
NO:10 MERKEZ
0531 514 64 51


YALOVA
UFUK ELEKTRİK BOBİNAJ /
HÜSEYİN BALCIOĞLU
SÜLEYMAN BEY MAH.İSTİKLAL
CAD.24/D MERKEZ
0226 811 32 45

ZONGULDAK
AYTEKİN ELEKTRİK
MUSTAFA AYTEKİN
KIŞLA SAN. SİTİ BLOK NO.24
K.EREĞLİ
0372 316 39 71



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com





150mm
BUFFING MACHINE

USER MANUAL

OBP150



IMPORTANT:

For your own safety, read and follow all of the Safety Guidelines and Operating Instructions before operating this product.

SPECIFICATIONS

TECHNICAL SPECIFICATIONS

Motor	230-240V/50Hz, S1 250W
Speed	2980RPM
Wheel Size	150x8x12.7mm

SAFETY GUIDELINES

BUFFER SAFETY WARNINGS

For Your Own Safety Read Instruction Manual Before Operating Buffer.

1. Wear eye protection.
2. Use buffing wheel suitable for speed of buffer.
3. Do not buff with side of wheel.
4. DO NOT USE GRINDING WHEELS OR OTHER UNINTENDED ACCESSORIES ON THIS BUFFER.
5. Do not wear gloves, necktie, or loose clothing.
6. DO NOT OPERATE WITH ANY GUARD DISABLED, DAMAGED, OR REMOVED.
7. The use of accessories or attachments not recommended by the manufacturer may result in a risk of injury to persons.
8. When servicing use only identical replacement parts.
9. Only use safety equipment that has been approved by an appropriate standards agency. Unapproved safety equipment may not provide adequate protection. Eye protection must be ANSI-approved and breathing protection must be NIOSH-approved for the specific hazards in the work area.
10. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.
11. Industrial applications must follow OSHA guidelines.
12. Maintain labels and nameplates on the tool. These carry important safety information. If unreadable or missing, contact Harbor Freight Tools for a replacement.
13. Avoid unintentional starting. Prepare to begin work before turning on the tool.
14. People with pacemakers should consult their physician(s) before use. Electromagnetic fields in close proximity to heart pacemaker could cause pacemaker interference or pacemaker failure.
15. WARNING: Some dust created by power sanding, sawing, grinding, drilling, and other construction activities, contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Some examples of these chemicals are:
 - Lead from lead-based paints
 - Crystalline silica from bricks and cement or other masonry products
 - Arsenic and chromium from chemically treated lumberYour risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles. (California Health & Safety Code § 25249.5, et seq.)
16. WARNING: The cord of this product contains lead and/or di (2-ethylhexyl) phthalate (DEHP), chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling. (California Health & Safety Code § 25249.5, et seq.)
17. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator.

VIBRATION SAFETY


This tool vibrates during use. Repeated or long-term exposure to vibration may cause temporary or permanent physical injury, particularly to the hands, arms and shoulders. To reduce the risk of vibration-related injury:

1. Anyone using vibrating tools regularly or for an extended period should first be examined by a doctor and then have regular medical check ups to ensure medical problems are not being caused or worsened from use. Pregnant women or people who have impaired blood circulation to the hand, past hand injuries, nervous system disorders, diabetes, or Raynaud's Disease should not use this tool. If you feel any medical or physical symptoms related to vibration (such as tingling, numbness, and white or blue fingers), seek medical advice as soon as possible.
2. Do not smoke during use. Nicotine reduces the blood supply to the hands and fingers, increasing the risk of vibration-related injury.
3. Use tools with the lowest vibration when there is a choice between different processes.
4. Include vibration-free periods each day of work.
5. Let the tool do the work.
6. To reduce vibration, maintain the tool as explained in this manual. If any abnormal vibration occurs, stop use immediately.


PACKAGE CONTENTS

Check for shipping damage. Check immediately whether all parts and accessories are included. The bench buffer itself comes assembled as one unit. Additional parts (listed below) which need to be fastened to bench buffer, should be located and accounted for before assembling.

No.	Description	Qty.
1	Buffer (not shown)	1
2	Hard buffing wheel	1
3	Flannelette buffing wheel	1
4	Spacer	2
5	Hex nut	2
6	Wheel flange	4

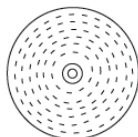

2

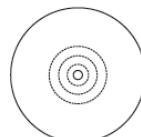

3



4



5



6


OPERATING INSTRUCTIONS

INSTALLING BUFFING WHEELS

To install the buffering wheels on the bench buffer:


1. Make sure the cord is disconnected from the power source.
 2. Remove the hex nut (5).
 3. Install spacers (1) on the shaft.
- NOTE: spacers are not needed when mounting several wheels on the shaft.
4. Slide the inner wheel flange (2) onto the shaft.
 5. Slide the buffering wheel (3) on to the shaft and butt it against the inner wheel flange.
 6. Slide the outer wheel flange (4) and butt the flat side of the flange against the buffering wheel.
 7. Tighten the hex nut (5) on to the shaft. Make sure the buffering wheel is firmly held in place and the hex nut is snug against the outer wheel flange. Use additional spacers (not supplied) if required.
 8. Install the right buffering wheel following the same procedure as above.

NOTE: "Right" and "left" are as seen from in front of the Buffer, facing the switch.

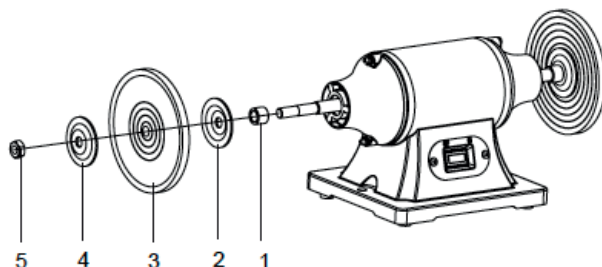

ON/OFF SWITCH

1. Press the power switch side marked "ON" to turn the grinder on.
2. Press the power switch side marked "OFF" to turn the grinder off.

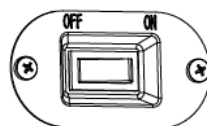


INSTALLING BUFFING WHEELS

1. Make sure that the Switch is in the off position, then plug in the tool.
 2. Turn on the tool.
 3. Using two hands, firmly hold the workpiece and gently move it into contact with the Buffering Wheel. To avoid kickback and other hazards, only buff on the lower quarter of the wheel. Note the directional arrows on the front of the Buffer.
 4. Move the workpiece with the direction of the wheel, using a medium to hard pressure.
- NOTE: The correct pressure must be applied to the workpiece to provide the best finish. Inadequate pressure will result in no significant change in the workpiece. Excessive pressure may slow down the action of the Buffering Wheel as well as cause uneven marks on the workpiece.
5. Every few minutes, check the condition and wear of the Buffering Wheels. Replace a Buffering Wheel when it is worn or damaged.
 6. When buffing is finished, remove the workpiece from the Buffering Wheel before turning Buffer OFF.
 7. To prevent accidents, turn off the tool and unplug the tool from its electrical outlet after use. Clean, then store the tool indoors out of children's reach.

Caution!

Only apply the workpiece to the area of the Buffering Wheel that is rotating away from the workpiece. Objects can be thrown forcefully away from a Buffering Wheel causing serious injury. Note the directional arrows on the front of the Buffer, and work only on the lower quarter of the Buffering Wheel.

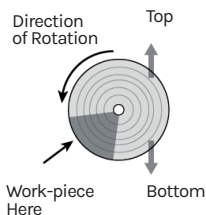

MAINTENANCE

Warning!

Always place the ON/OFF switch in the OFF position and unplug the power cord from its power source before performing any assembly or adjustment. Failure to do so could result in accidental starting resulting in possible serious personal injury.

Warning!

To prevent serious injury from tool failure, do not use damaged equipment. If abnormal noise or vibration occurs, have the problem corrected before further use.

CLEANING, MAINTENANCE, AND LUBRICATION

1. BEFORE EACH USE, inspect the general condition of the tool. Check for:

- loose hardware,
- misalignment or binding of moving parts,
- cracked or broken parts,
- damaged electrical wiring, and any other condition that may affect its safe operation.

2. AFTER USE, wipe external surfaces of the tool with clean cloth. To clean the Buffing Wheels, hand wash and air dry using only mild detergents. Do not immerse any part of the tool in liquid.

3. If a Buffing Wheel has become too hard, use a stiff wire brush (not included) to fluff it up.

4. Periodically, wear ANSI-approved safety goggles and NIOSH-approved breathing protection and blow dust out of the motor vents using dry compressed air.

5. WARNING! If the supply cord of this power tool is damaged, it must be replaced only by a qualified service technician.



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com

