



FACTOR

250mm
PARLATMA MAKİNESİ

KULLANMA KILAVUZU

OBP250



GİRİŞ

TEKNİK ÖZELLİKLER

Motor Gücü	S1 550W, S2 30dak. 750W
Gerilim Frekansı	230-240V/50Hz
Boşta Çalışma Devri	2980 dev/dak
Parlatma Disk Çapı	250 mm
Mil Çapı	20 mm
Disk Genişliği	20 mm

ELEKTRİKLİ EL ALETLERİ İÇİN GÜVENLİK UYARILARI

ÇALIŞMA ALANI

Çalışma alanını temiz ve yeterince aydınlatılmış tutun. Dağınık ve karanlık alanlar kazalara davetiye çıkarır.

Elektrikli aletleri patlayıcı ortamlarda KULLANMAYIN — örneğin yanıcı sıvılar, gazlar veya tozların bulunduğu yerlerde çalıştırmayın. Elektrikli aletler kıvılcım çıkarabilir ve bu da tozların veya gazların tutuşmasına neden olabilir.

Elektrikli aleti kullanırken çocukları ve izleyicileri uzak tutun. Dikkat dağınıklığı kontrol kaybına yol açabilir.

ELEKTRİKSEL GÜVENLİK

Elektrikli alet fişleri prize uyumlu olmalıdır. Fişi KESİNLİKLE değiştirmeyin. Topraklı (şase)li elektrikli aletlerde adaptör fiş KULLANMAYIN. Orijinal fişler ve uyumlu prizler, elektrik çarpması riskini azaltır.

Elektrikli aletleri yağmura veya ıslak ortamlara MARUZ BIRAKMAYIN. Su girişi elektrik çarpması riskini artırır.

Elektrik kablosunu kötüye kullanmayın. Elektrikli aleti taşımak, çekmek veya fişten çıkarmak için kabloyu KULLANMAYIN. Kabloyu ısıdan, yağdan, keskin kenarlardan veya hareketli parçalardan uzak tutun. Hasarlı veya dolanmış kablolar, elektrik çarpması riskini artırır.

Elektrikli aleti dış mekânda kullanıyorsanız, dış mekâna uygun uzatma kablosu kullanın. Bu tür kablolar, elektrik çarpması riskini azaltır.

Elektrikli aleti nemli bir ortamda kullanmak kaçınılmazsa, kaçak akım koruma cihazı (RCD) ile korunan bir güç kaynağı kullanın.

KİŞİSEL GÜVENLİK

Dikkatinizi verin, ne yaptığınıza odaklanın ve elektrikli aleti kullanırken sağduyulu davranın. Yorgunken, ilaç, alkol veya uyuşturucu etkisi altındayken elektrikli alet KULLANMAYIN. Elektrikli aleti kullanırken anlık dikkatsizlik ciddi yaralanmalara yol açabilir.

Koruyucu donanım kullanın. Her zaman göz koruması (koruyucu gözlük) takın. Toz maskesi, kaymaz tabanlı güvenlik ayakkabısı, baret veya kulak koruyucu gibi uygun koruyucu ekipmanların kullanımı, kişisel yaralanmaları azaltır.

Kazara çalıştırmalardan kaçının. Prizi takmadan önce butonun kapalı (OFF) konumunda olduğundan emin olun. Parmağınız tetik üzerindeyken elektrikli aleti taşımak veya anahtarı açık durumdaki bir cihazı prize takmak, kazalara neden olabilir.

Cihazı çalıştırmadan önce üzerinde takılı anahtar veya alyan bırakmayın. Dönmekte olan bir parçaya takılı kalan bir anahtar, ciddi yaralanmalara yol açabilir.

Aşırı uzanmaktan kaçının. Her zaman dengeli duruş ve sağlam basış pozisyonu sağlayın. Bu, beklenmeyen durumlarda elektrikli alet üzerinde daha iyi kontrol sağlar.

Uygun şekilde giyinin. Bol giysiler veya takı takmayın. Saçınızı, giysilerinizi ve eldivenlerinizi hareketli parçalardan uzak tutun. Bol giysiler, takılar veya uzun saçlar hareketli parçalara takılabilir.

ELEKTRİKLİ EL ALETLERİNİN KULLANIMI VE BAKIMI

Elektrikli aleti zorlamayın. Uygulamanıza uygun doğru aksesuarları kullanın. Uygun elektrikli alet, işi hem daha güvenli hem de tasarlandığı hızda daha verimli şekilde yapacaktır.

Elektrikli aleti, Aç/Kapa butonu ile açılıp kapatılamıyorsa KULLANMAYIN. Şalteri ile kontrol edilemeyen elektrikli aletler tehlikelidir ve mutlaka tamir edilmelidir.

Aksesuar değişimi veya cihazı saklama işlemi öncesinde fişi prizden çekin. Bu tür önleyici güvenlik önlemleri, elektrikli aletin kazara çalışmasını önler.

Kullanılmayan aletleri çocukların erişemeyeceği yerde muhafaza edin ve elektrikli aleti ya da bu talimatları bilmeyen kişilerin cihazı kullanmasına izin vermeyin. Elektrikli aletler, eğitimsiz kullanıcıların elinde tehlikelidir.

Elektrikli aletlerin bakımını yapın. Hareketli parçalarda hizasızlık, sıkışma, parça kırıkları veya cihazın çalışmasını etkileyebilecek diğer durumları kontrol edin. Hasar varsa, cihazı kullanmadan önce onarımını yaptırın. Kazaların çoğu, bakımı yapılmamış aletlerden kaynaklanır.

Elektrikli aleti ve aksesuarları bu talimatlara ve kullanım amacına uygun şekilde kullanın; çalışma koşulları ve yapılacak iş dikkate alınmalıdır. Cihazın, amaç dışı kullanımı tehlikeli durumlara neden olabilir.

Bu cihazın performansı, hat (şebeke) gerilimindeki dalgalanmalara bağlı olarak değişebilir. Uzatma kablosu kullanımı da performansı etkileyebilir.

SERVİS VE BAKIM

Elektrikli el aletinizi, yalnızca orijinal yedek parçalar kullanarak ve yetkili servis personeli tarafından tamir ettirin. Bu, cihazın güvenliğinin korunmasını sağlar.

PARLATICI CİHAZA ÖZEL UYARILAR

Parlatıcıyı ıslatmayın ve nemli veya ıslak ortamlarda kullanmayın.

Parlatma keçesi iş parçasına temas halindeyken cihazı çalıştırmayın.

Farklı metal türlerini aynı parlatma keçesiyle parlatmaktan kaçının; bu durum galvanik korozyona neden olabilir.

Parlatma işleminden hemen sonra iş parçasına dokunmayın, sıcak olabilir.

Cihaz çalışır durumdayken veya prize takılıyken parlatma keçesine dokunmayın.

Parlatıcıyı çalışır vaziyette başında gözetimsiz bırakmayın.

Kullanımda değilken, cihazı kapalı konuma getirin ve fişini prizden çıkarın.

GÜVENLİK SEMBOLLERİ

GÜVENLİK SEMBOLLERİ VE SİMGELERİ

Aşağıdaki güvenlik sembolleri bu ürün üzerinde yer almaktadır.



Kullanmadan önce kullanım kılavuzunu ve güvenlik talimatlarını okuyun



Kulak koruması takılmalıdır



Göz koruması takılmalıdır



Toz maskesi takılmalıdır



Tehlike: Motor ısınır



Koruyucu eldiven giyin

MONTAJ

MAKİNEİNİN MONTAJI

Parlatıcıyı, belirtilen sabitleme deliklerini kullanarak bir çalışma tezgahına cıvatalayın. Tabanın hava giriş çıkış yollarını kapatmayın. Parlatıcıyı çalıştırmadan önce montajın sağlam olduğunu kontrol edin.


PARLATMA / CİLALAMA PEDLERİNİN TAKILMASI

Boşluğu (distansiyeli) mil üzerine yerleştirin. Parlatma diskini pullar arasına yerleştirin ve tutucu somunu elle sıkacak kadar sıkın.

Milin dişli uçları sağ ve sol olarak tasarlanmıştır (LH ve RH).

Somunları, parlatma diskini ezmeden tutacak şekilde yeterince sıkın.


NOT: Kullanım sırasında diskin dönme yönü, tutucu somunun daha sıkı oturmasını sağlar.

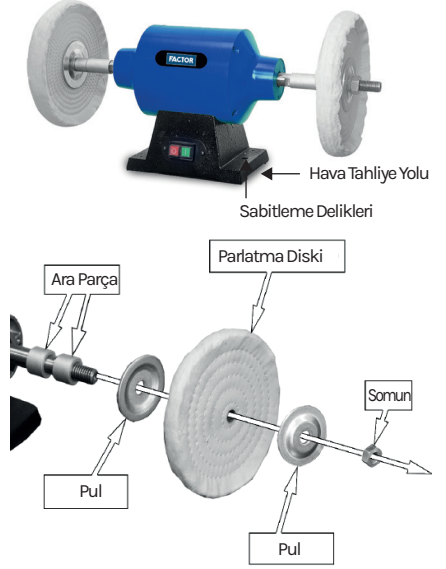

PARLATICINIZI KULLANMA

UYARI: ÇALIŞMAYA BAŞLAMADAN ÖNCE, TÜM GÜVENLİK TALİMATLARINI OKUDUĞUNUZDAN VE ANLADIĞINIZDAN EMİN OLUN.

1. Parlatıcıyı elektrik şebekesine takın.
2. Parlatıcıyı açın.
3. İş parçasını yavaşça Parlatma diskine temas ettirin.
 - Diske temas için en güvenli ve uygun pozisyonu belirlemek için sağdaki görsele bakın.
 - Diskin çeyrek daire dışındaki kısmına TEMAS ETTİRMEYİN.
4. Kullanım sonrası, parlatıcıyı elektrik şebekesinden çıkarın ve bir sonraki kullanıma hazırlamak için makineyi temizleyin.

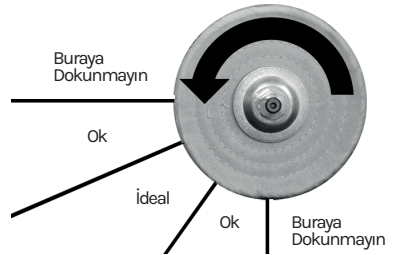

YETKİLİ SERVİSLER

ADANA

ÖZİŞİKLAR ELEK-AÇK MEKANİK
KARASOKU MH.28010 SK.N:4/1
SEYHAN 0322 359 13 33

OMSER TEKNİK / MURAT YILMAZ
YESİLOBMA MAH.46023 SOK.NO:11/A
SEYHAN-ADANA
0322 428 92 22-23-24

DEMİR ELEKTRİK
BEKTAŞ DEMİR
KARASOKU MAH. KIZILAY CAD.
28010 SK. NO:4-D-1 SEYHAN
0322 352 97 95

ADİYAMAN
EMEK TEKNİKMAKİNA
REİS SERVİS
ABDULMUSA AKASLAN BOBİNAJ
CUMHURİYET MAH. MUFTULUK CAD.
NO:43 ÇEVREYOLU ÜZERİ MERKEZ
0545 402 02 21

AFYON
EMEK-İŞ BOBİNAJ
ERMAN MANAP
CUMHURİYET MAH. MENDERES CD.
KARAHİSAR APT. 0272 212 11 32

KATAR BOBİNAJ / MUSTAFA
KATAR
SANAİY SİTESİ 6. BLOK NO:27
0272 214 48 64

AĞRI
MAK-TEK SERVİSE EL ALETLERİ
YUSUF TOKA
KACIZMAN CAD. BÜLBÜL SK. NO:52
MERKEZ 0554 006 98 97 - 0537 649
41 70

AKSARAY
MERT ELEKTRİK BOBİNAJ
ZEKİ GÜZÜYURDU
BAHÇESARAY MAH. 8637 NOLU
SOK. K6
0382 215 68 33

AMASYA
AKOTEK BOBİNAJ
GÜMÜŞLÜ MAH. SARAYDÜZÜ CAD.
NO:13 0358 218 71 19

ANKARA
GELİŞİM EL ALETLERİ
MUSTAFA ÖVEZ
31.SK. BAŞI TİCARET HAN NO:5
YENİMAHALLE 0312 385 90 98

AYDINER BOBİNAJ ELEKTRİK
SAN.VE TİC. / HÜSEYİN AYDEMİR
REİS SERVİS
1178. CAD. (2.SOK.) NO:89
OSTİM 0312 354 29 28

ANTALYA
GÖKLER MAKİNA / REİS SERVİS
GÖKHAN GÖKLER
CUMHURİYET MAH.ESKİ SAN.SİT.682
SOK.NO:37 MERKEZ 0242 343 21 29

ABALIOĞLU BOBİNAJ
MEHMET ABALI
CUMHURİYET MAH. ASAĞI SAN.
YOLU ÜZERİ ÇAMÇIÇI SİTİNO:9/A
ALANYA 0242 512 63 18

AKTİF BOBİNAJ / REİS SERVİS
HÜSEYİN SARI
SANAİY MAH. 2005 SOK. NO:25/201
MANAVGAT 0242 742 56 29

TEKNİK BOBİNAJ / AHMET KAFALI
YUKARIHİSAR MAH. HASTANE CAD.
NO:12 / A MANAVGAT
0242 746 48 57

AYDIN
KİLCİOĞLU BOBİNAJ
ERCÜMENT KİLCİOĞLU
ATA MAH. ALT. SAN. SİT. 1 CAD.
N:6 MERKEZ 0256 214 30 32

ÖZDE OTOMOTİV MAKİNA
YAŞAR AYDIN
ZEYBEK MAH. 1521 SK. NO:4-6D
EFELEİ
0546 453 78 12

ENERJİ TEKNİK BOBİNAJ
EKREM KARABULUT
YENİ MAHALLE 819 SOKAK
BİDAN APARTMANI NO:2-B
DİDİM 0256 811 43 70

AKDENİZ TEKNİK BOBİNAJ
AŞKIN AKDENİZ
CUMHURİYET MH.ALBAYRAK CD.
N:134/ SÖKE 0256 512 63 44

BALIKESİR
TEZGER BOBİNAJ / REİS SERVİS
EREN TESSER
YENİ SANAİY SİTESİ CUMHURİYET
CAD.NO:198/6 MERKEZ
266 246 23 01

SUNAY BOBİNAJ / AHMET SUNAY
YENİ SAN.SİT.19-AĞUSTOS CAD.
NO:28
0266 246 52 70

İLGİN BOBİNAJ / REİS SERVİS
HÜSEYİN İLGİN
17 EYLÜL MAH-HACI ALİ SOK.
NO:31/C BANDIRMA
0266 714 51 99

BATMAN
AKTİF BOBİNAJ / REİS SERVİS
HİKMETYAR BİLGE
YENİ MAHALLE 16.CAD. 1008 SOK.
NO:8 0488 214 56 64

BİNGÖL
ÜMİT BOBİNAJ
ABDULMELİK SUNA
ŞEHİT MUSTAFA GÜNDOĞDU
MH.BAYINDIRLIK CD.SS ESNAF
TÜCC. KOOP.GALERİCİLER SİT.
NO:38 MERKEZ 0544 842 58 00

BOLU
GARANTİ BOBİNAJ
YUNUS ZAFER AKTAŞ
SANAİY SİTESİ 28/2 MERKEZ
0374 215 51 23

BURDUR
ÇEVİKLER BOB. / ÜMİT ÇEVİK
AYDINLIKEVLER MH.KSS.2.SK.15
MERKEZ
0248 252 94 37

BURSA
CANTÜRKLER BOBİNAJ
REİS SERVİS
ADEM CANTÜRK
K-SANAİY SİTESİ YEDEK PARÇ.SİTİÇİ
48.CAD.NO:77 NİLÜFER
0224 253 15 50

TOKER MERT TEKNİK
İBRAHİM TOKER
SAKARYA MAH.1.GÜVEN SOK.
NO:12/A ÇOMANGAZI
0224 273 54 18

ÇAĞ TEKNİK BOBİNAJ
REİS SERVİS
CENGİZ ESGİN
MAH.MULYIDE MAH.ERTUĞRULGAZI-
CAD.ARMAĞAN SOK.NO:21 İNEGÖL
0224 715 57 37

ÇANAKKALE
KISAÇIK BOBİNAJ / SAMİ KISAÇIK
KAMIK KEMAL MAH.KAYNAK SOK.
NO:1-C MERKEZ 0286 217 96 71

ŞAHİN BOBİNAJ / HASAN ŞAHİN
İSTİKLAL CAD. NO:154 BIGA
0286 316 11 71

ÇANKIRI
GENÇLER ELEKTRİK&BOBİNAJ
AHMET ALABAY
BUGDAY PAZARI MAH.TAHALAT ONAY
BULVARI A- BLOK NO:11/2 MERKEZ
0376 213 60 33

ÇORUM
ÖZKAN BOBİNAJ
ÖZKAN SÖYLEYEN
GÜLABİBEY MAH. KUBBELİ CAD.
NO:77
0364 224 75 97

DENİZLİ

ÖRSLER BOBİNAJ
SANİM ÖRSÖĞLU
AHI SINAN CAD.SEDEF CARŞISI
NO:9-10 0258 261 42 74

DİYARBAKIR
İKRA BOBİNAJ / REİS SERVİS
SALİH SÜREN
1.SAN.SİT.B/5 BLOK NO:6
0412 237 60 21

DÜZCE
MOTOR MEKANİK BOBİNAJ
ZAFER ÜNAL
ESKİ SANAİY ÇARŞISI TAHIR ALTIN
SOK NO:27 0380 523 87 03

BERKE MAKİNA
AYDIN ÇETİNKAYA
KÜLTÜR MAH.793 SOKAK NO:10
MERKEZ 0380 524 83 83

ERİRNE
ERAY BOBİNAJ / M. ERAY TUĞRUL
KUÇUK SANAİY SİTESİ 4.BLOK
NO:14
MERKEZ 0284 225 26 92

ELAZIĞ
TEKSER TEKNİK
MUAMMER ATALAY
SANAİY SİT. 10. SOK. NO:4
0424 224 83 14

ERZİNCAN
BAKIRÇIOĞLU ELEK. MAK. HIRD.
İNŞ. NAK. SAN. VE TİC. LTD. ŞTİ.
HARUN SUDAŞ / REİS SERVİS
GÜLABİBEY MAH.ŞEHİT KENAN
ARDIÇ CAD.NO:44/A MERKEZ
0446 223 09 59

ERZURUM
TEKNİK MAKİNA BOBİNAJ
MÜKREMIN SEVİNDİ
REİS SERVİS
SANAİY DEMİRCİLER SİTESİ 1.BLOK
NO:46 YAKUTİYE
0442 243 17 34

ESKİŞEHİR
TEPEBAŞI TEKNİK SANAİY VE
TİC.LTD. ŞTİ.
TUNALI MAH. SEMT. SAKARYA-2
CAD. NO:96 D TEL:0222 323 59 80

GAZİANTEP
YILDIZ BOBİNAJ / REİS SERVİS
MEHMET KOÇYİĞİT
İSMETPAŞA MAH.1. NOLU CAD.
NO:23/F ŞAHİNBEY
0342 221 15 74

ÇALIKOĞLU BOBİNAJ
TOLGA ÇALIKOĞLU
KÜŞGET SAN.MAH.SEMT 60031
NOLU CD.1 ŞEHİTKAMİL
0342 235 63 09

PARLADI ELK. BOBİNAJ
2.ORGANİZE SAN. BÖLG.SOSYAL
TESİSLER B BLOK NO:4 BAŞPINAR
0342 337 74 87

GİRESUN
ÖZCAN TEKNİK BOBİNAJ
DENİZ ÖZCAN
GEDİKKAYA MAHALLESİ SANAİY
SİTESİ 6.SOKAK NO:5 MERKEZ
0454 212 17 35

HATAY

PAK İŞ ELEKTRİK
REİS SERVİS
MUZAFFER PAK
HARAPARASI MAH.
2.CAD.NO:7 ANTAKYA
0326 215 64 73 - 0326 221 15 45

PAK İŞ ELEKTRİK&ŞUBE
YENİ SANAİY SİTESİ 6.İNİŞ 4. CAD.
GÜZELBURÇ NO.10 ANTAKYA
0323 215 64 73

KAR BOBİNAJ / REİS SERVİS
ABDULLAH KAR
GÜZELBURÇ MAH. 6. İNİŞ CAD. NO:12C
ANTAKYA 0246 223 70 11

ULUSAL TEKNİK
ESREF EZBER
MURADİYE MH. 324/1 SOK. NO:29
İSKENDERUN 0326 616 09 31

İSPARTA
İZMİR BOBİNAJ / REİS SERVİS
EMİN ÖZSÖY
YENİ SANAİY SİTESİ
6.BLOK NO:28 0246 223 70 11

İSTANBUL-ANADOLU
AYKUT ELEKTRİK
REİS SERVİS
ERTAN KESKİNOĞLU
KARLIKTEPE MAH.SOĞANLIK CAD.
KESKİNOĞLU APPT.NO:78/B KARTAL
216 488 04 56/42-68

ERMAK GRUP TEK. SERVİS
REİS SERVİS
İSKENDER KÖSE
ALTINŞEHİR MAH. ALEMDAĞ CAD.
NO:626 ÜMRANİYE
216 540 46 28

PRATİK ELEKTROMEKANİK
REİS SERVİS
S. ALİ TUĞANLI
ALEMDAG CAD. RUZGARLI SOK.
NO:9/2 ÜMRANIYE
0216 344 03 50

SÖNMEZ ELEKTROMEKANİK
REİS SERVİS
NIHAT ÇELİK
AYDINTEPE MAH. YAVUZ CAD.KÖŞE
SOK.NO:5/3 TUZLA
0216 493 72 41

İSTANBUL-AVRUPA
DEMİRHAŞ MAKİNA / REİS SERVİS
SAİM DEMİRHAŞ
PERPA TİC.MERKEZİ B BLOK KAT:8
NO:995 ŞİŞLİ 0212 320 22 61

ERMAK MAKİNA / REİS SERVİS
DAVUT KÖSE
PERŞEMBE PAZARI CAD.ÖMER AĞA
SOK.NO:11 KARAKÖY
0212 252 33 95

EVREN ELEKTRİK
MUSTAFA MERŞİN
TERSAANE CAD HOCA HANIM SOK
NO:23/1 KARAKÖY
0212 254 56 77

YILMAZLAR ELEKTRİK
YILMAZ ÖMERÖĞLU
TERSAANE CAD.ABDÜLSERRAH SOK
NO:8 KARAKÖY 0212 297 15 02

KARDEŞLER BOBİNAJ
REİS SERVİS
MURAT DEMİRHAŞ
GURSEL MAH. KAĞITHANE CAD.
NO:34/A
0212 224 97 54

YETKİLİ SERVİSLER

TEZCAN BOBİNAJ / REİS SERVİS
MEHMET TEZCAN
İKTELLİ ORGANİZE SANAYİ BÖLGESİ
ESKOOP SAN. SİTESİ B2 BLOK
NO:116 BAŞAKŞEHİR
0212 671 20 93/94

NUR TEKNİK BOBİNAJ
ABDULLAH ERKAN
PIRİ MEHMETPAŞA MAH.
BURHAN SOYSALAN SOK.NO:21
SİLİVRİ
0212 727 32 03

İZMİR
İRFAN BOBİNAJ / REİS SERVİS
İRFAN MAKİNACI
1310 SOK. NO.41/B ÇANKAYA
0232 425 35 49

ÇATALSU ELEKTRİK
NURAY ŞAHBUDAK
HİRDAVATÇILAR ÇARŞISI
1145/11 SOK.NO:9 YENİŞEHİR
0232 459 58 29

YILMAZ BOBİNAJ
2822 SOK.NO:2 1. SAN. SİT.
KONAK 0232 433 80 51

KENT BOBİNAJ
ÖMER KÖMÜRCÜ
8780/33 SOK.NO:50 ATA SAN. SİT.
ÇİĞLI 0232 328 10 33

MY TEKNİK SERVİS HİZM.
İYAL ÖZER
YEDİ EYLÜL MAH.5542 SOK.NO:39
İÇ KAPİ NO:1 TORBALI
0232 856 35 34

K.MARAS
KAHRAMAN HİRDAVAT BOBİNAJ
MESUT KURU
YENİ SANAYİ SİTESİ 25. ÇARŞI NO:68
DULKADIRIOĞLU 0344 236 29 68

ONURSAL ELEKTRİK ELEKTRONİK
BOB.TA.IT.IH.SN.TIC.LTD.ŞTİ
YENİ SANAYİ SİTESİ 5.ÇARŞI NO:99
MERKEZ 0344 236 10 24

ÜSTÜN BOBİNAJ
TUĞRUL ÜSTÜN
YENİ SANAYİ SİTESİ 9.BLOK NO:14
ELBİSTAN 0344 413 64 93

KARABÜK
DAMLA ELEKTRİK
ABDULLAH ERDOĞAN
HURİYET MAH.İNÖNÜ CAD., AKTAŞ
SOK.17/B 370 412 77 00

KARAMAN
UZUN ELEKTRİK BOBİNAJ
RAMAZAN UZUN
HAMİDİYE MAH. YENİ SANAYİ SİT.
1866 SK. NO:15 MERKEZ
0338 213 70 79

MECHANİC ELEK. BOBİNAJ
DURMUŞ PANCAR
HAMİDİYE MAH. 735 SOK. NO:2
0338 213 10 20

KASTAMONU
NUR BOBİNAJ / MUSTAFA SAKAR
SAN.SİT.CAMI CAD.NO:29/A MERKEZ
0366 214 61 18

TABAKOĞLU BOBİNAJ
ALAEETTİN TİFTİK
METAL SANAYİ SİT.AZZİYE SOK.
N:1/3 TOSYA 0366 313 04 31

KAYSERİ
AKIN ELEKTRİK / REİS SERVİS
AHMET VAROL
SANAYİ BÖLGESİ
5. CAD. NO:8 0352 311 41 74

AKIN ELEKTRİK / REİS SERVİS
MEHTAP AYBEY
SANAYİ MAH.6005 CAD.8 D
KOCAŞINAN
0352 336 41 23

KIRKLARELİ
YALÇIN SOĞUTMA HAV.BOB.
MESUT YALÇIN
GÜNDOĞU MAH.FATİH CAD NO 95
LÜLEBURGAZ 0288 412 01 49

VATAN ELEKTRİK / ERTAN VATAN
KOCAŞINAN MAH.ÇAKMAK SOK.
ÇERİ APRT.NO:22/C LÜLEBURGAZ
0288 412 91 90

KOCAELİ
ÇETİNKAYA ELEKTROMEKANİK
REİS SERVİS
NECMETTİN ÇETİNKAYA
SANAYİ MAH. İZMİT SAN.SİT.12
CAD. 11.BLOK NO:1 İZMİT
0262 335 13 20

İNCE MOTOR BOBİNAJ
REİS SERVİS
ERSİN İNCE
MUSTAFA KEMALPAŞA MAH. 712 SOK.
NO:26 GEBZE
0262 646 46 15

KONYA
TEKYAMAN BOBİNAJ
REİS SERVİS
ETHEM YAMAN
FEVZİ ÇAKMAK MAHALLESİ 10563
SOK.NO:7 KARATAY
0332 342 68 50

YAVUZHAN BOBİNAJ
ADEM YAVUZ
KARATAY SANAYİ ÇOBANDEDE SOK.
NO:20 SELÇUKLU
0332 233 29 60

UĞUR SONDAJ BOB. SAN. TİC.
ZYA GÖKALP MAH. TÜRKMEN KÖYÜ
CAD. NO:36 EREĞLİ
0332 710 07 77

KÜTAYHA
KÜDRET BOBİNAJ
YENİ SAN. SİT. 19. SOK. NO: 28
MERKEZ 0274 230 00 14

MALATYA
KAPLAN BOBİNAJ
MEHMET KAPLAN
ÇAUSOĞLU MAH.YENİ SANAYİ SİTESİ
İMALAT SOK. NO:4 YEŞİLİYURT
0422 336 92 67

MANİSA
İRFAN BOBİNAJ
HAKAN MAKİNACI
GÜZELYURT MAH. M. AKİF ERSOY
CAD. 20. SK. BLOK NO:86/A
0236 236 22 96

KARDEŞLER ELEKTRİK BOBİNAJ
SANAYİ SİTESİ 4 NOLU SOK.
NO:2 ALAŞEHİR 0236 6543435

MARDİN
TENSEN BOBİNAJ / REİS SERVİS
ERSEN-ERTEN ÇELİK
YENİŞEHİR M.H.RAVZA CD.49.SK.
N:7/15 ARTUKLU
0482 213 37 62

MERSİN
COŞKUN BOBİNAJ / REİS SERVİS
SEDAT COŞKUN
SİTELER M.H.SANAYİ SİTESİ 5678 SK.
G31 BLOK N:4/K AKDENİZ
0536 940 06 93

MUĞLA
HIZIR BOBİNAJ
MURAT HIZIR
SANAYİ SİTESİ DEMİRÖZ SOKAK
NO:20 BODURUM
0252 313 61 69

MERKEZ BOBİNAJ İNŞ. LTD. ŞTİ.
TUZLA MAH. İNÖNÜ (TSY) BLV.
NO:7/B İÇ KAPİ NO:1 FETHİYE
0252 612 10 51

EYÜP BOBİNAJ
EYÜP TİRİMOĞULLARI
ULUSAL EGEMENLİK CD.N:87
MARMARİS 0252 412 14 50

NEVŞEHİR
ARICAN BOBİNAJ / REİS SERVİS
ERHAN ARICAN
YENİ SANAYİ SİTESİ
36 CI DUKKANLAR NO:28 MERKEZ
0384 213 53 11

NİĞDE
GÜL BOBİNAJ / REİS SERVİS
ÖMER ÜÇGÜL
ŞAHİNALI M.H ŞEHİTBAYRAMAKSOY
SOKAK NO:18 MERKEZ
0534 386 40 09

ORDU
ERKA BOBİNAJ / REİS SERVİS
KAAN BASKIN
MUSTAFA KEMALPAŞA MAH.
PARK SOK.NO:17 İÇ KAPİ:1
0543 600 38 02

KAHVEÇİOĞLU ELEKTRİK
CUMHUR KAHVECİ
DURUGÖL MAHALLESİ ATATÜRK
BULVARI NO:487/A
0452 233 13 35

SİMGE SOĞUTMA
DUMLUPINAR MAH. PAZAR SK. N:35
ÜNYE 0452 233 13 35

RİZE
KOYUNCULAR TEKNİK
REİS SERVİS
EYÜP KOYUNCU
TOPHANE MAH.KAÇKAR CAD NO:9
MERKEZ 0464 217 37 31

CEMBERÇİ BOBİNAJ
MEHMET CEMBERÇİ
ENGİNERE MAH. SAN. SİT.
F BLOK: NO:20 MERKEZ
0464 217 45 00

MERKEZ BOBİNAJ -
MUHAMMET BİRİNCİ
EKREM ORHAN MAH. HANİMELİ SK.
NO:4/B 0464 212 20 05

SAKARYA
ENGİN ELEKTRİK
ENGİN DURMUŞ
MALTEPE MAH. ORHAN GAZİ CAD.
(TEK YOKUŞU) ŞEHİT METİN AKKUŞ
SOK. NO:19 0264 291 05 67

İR MAKİNA
FATİH İR
FEVZİ PAŞA CAD. ÇARK SAN.
SİT:N:36 SERDİVAN 0264 279 01 81

2V MEKATRONİK / REİS SERVİS
VEDAT AMASYALI
GÜNEY MOB.SAN.SİT:1288
SK.N:11/A ERENLER
0264 666 18 19

SAMSUN
AS BOBİNAJ / KANİ ASAL
SANAYİ SİTESİ AHİEVAN CAD.
NO:38 ÇANIK
0362 238 09 66

UFUK BOBİNAJ TİCARET -
MAHMET SERKAN ŞİMGA
YENİ MAHESKİ SANAYİ SİTESİ
1.SOK. NO:14 ÇANIK
0362 238 07 40

İŞILDAK BOBİNAJ
MELİH İŞILDAK
ALACAĞAM CD. BELEDİYE DUKKANLARI
NO:115 BAĞRA 0362 543 10 49

METİN BOBİNAJ - ADEM METİN
REİS SERVİS
ESKİ SAN. SİT. KILIÇARSLAN CAD.
NO:49 0362 228 64 25

SİVAS
DOĞAN TEKNİK ELEKTRİK
MAKİNA
KEREM DOĞAN
PAŞABEY MAH.HAYRAT SOK.
SURTAS APRT. ALTI NO:2/C
MERKEZ 0507 707 57 58

ŞANLIURFA
AKSAN BOBİNAJ
HALİL ÇİMENÖĞLU
REİS SERVİS
SANAYİ SİT.ÇEŞUR CD.N:47 CAD.
NO:48 HALILIYE
0414 314 17 38

TEKİRDAĞ
ÇETİN ELEKTRİK BOBİNAJ
REİS SERVİS
EROL ÇETİN
100.YIL MAH. MEHMET İLHAN SOK.
NO:12/1 C SÜLEYMANPAŞA
0282 263 86 60
TRAKYA BOBİNAJ ELEKTRİK
NECATİ AKMAN
SEYHİSINAN M.H.EREĞLİ SK.
KLAVUZ İŞ HANI NO:2 ÇORLU
0282 653 27 77

ÖZYL ELEKTRİK ENDÜSTRİYEL
SERVİS
KURTULUŞ YILDIRIM
GAZİ ÖSMAN PAŞA MAH. ALIAGA SK.
NO: 4 A ÇERKEZKÖY
0282 726 67 04

TOKAT
ÇETİN ELEKTRİK BOBİNAJ
MUSTAFA ÇETİN
SANAYİ SİTESİ CAMİ ALTI NO.13-18
0356 214 63 07

TRABZON
DİNÇ BOBİNAJ - AYHAN DİNÇER
REİS SERVİS
BÜYÜK SAN. SİT SOS. HİZ. BİN.
NO:3-B DEĞİRMENDERE
0462 325 22 02

MAKİNA MARKET
AHMET SALİH ŞAHİNER
SANAYİ MAHALLESİ DOST SOK.
NO:69 ORTAHİSAR
0462 328 14 80

VAN
ÇAĞRI BOBİNAJ
MUHAMMED REŞİT COŞAR
CUMHURİYET CAD.ALÇEKİÇ PAŞALI
NO:10 MERKEZ
0531 514 64 51


YALOVA
UFUK ELEKTRİK BOBİNAJ /
HÜSEYİN BALÇIOĞLU
SÜLEYMAN BEY MAH.İSTİKLAL
CAD.24/D MERKEZ
0226 811 32 45

ZONGULDAK
AYTEKİN ELEKTRİK
MUSTAFA AYTEKİN
KİŞLA SAN. SİTİ BLOK NO.24
K.EREĞLİ
0372 316 39 71



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com





250mm
BUFFING MACHINE

USER MANUAL

OBP250



INTRODUCTION

TECHNICAL SPECIFICATIONS

Motor Power	S1 550W, S2 30min 750W
Rated Voltage / Frequency	230-240V/50Hz
No Load Speed	2980 rpm
Buffing Mop Diameter	250 mm
Shaft Diameter	20 mm
Mop width	20 mm

POWER TOOL SAFETY WARNINGS

WORK AREA

1. Keep the work area clean and well lit. Cluttered and dark areas invite accidents.
2. DO NOT operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
3. Keep children and bystanders away while operating a power tool.
Distractions can cause you to lose control.

ELECTRICAL SAFETY

1. Power tool plugs must match the outlet. Never modify the plug in any way.
Do not use adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
2. DO NOT expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.
3. DO NOT abuse the power cable. Never use it for carrying, pulling or unplugging the power tool. Keep the power cable away from heat, oil, sharp edges or moving parts. Damaged or entangled cables increase the risk of electric shock.
4. When operating a power tool outdoors, use an extension cable suitable for outdoor use. Use of a cable suitable for outdoor use reduces the risk of electric shock.
5. If operating the power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply.

PERSONAL SAFETY

1. Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in personal injury.
2. Use safety equipment. Always wear eye protection. Safety equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
3. Avoid accidental starting. Ensure the switch is in the off position before plugging in. Carrying power tools with your finger on the switch or plugging in power tools that have the switch on invites accidents.
4. Remove any wrench before turning the power tool on. A wrench left attached to a rotating part may result in personal injury.
5. DO NOT overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
6. Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.

POWER TOOL USE AND CARE

1. DO NOT force the power tool. Use the correct accessories for your application. The correct power tool will do the job better and safer at the rate which it was designed.
2. DO NOT use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
3. Disconnect the plug from the power source before changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
4. Store idle tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate it. Power tools are dangerous in the hands of untrained users.
5. Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.
6. Use the power tool and accessories in accordance with these instructions and in the manner intended, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from intended could result in a hazardous situation.
7. The performance of this tool may vary, depending upon variations in line voltage. Extension cable usage may also affect performance.

SERVICING

1. Have your power tool serviced by qualified service personnel using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

BUFFER SPECIFIC WARNINGS

1. DO NOT get the buffer/polisher wet or use in damp or wet locations.
2. DO NOT switch the buffer/polisher on whilst the mop is in contact with the workpiece.
3. Avoid polishing dissimilar metals with the same buffing mop; galvanic corrosion may occur.
4. DO NOT touch the workpiece immediately after polishing as it may be hot.
5. DO NOT touch the buffing mop whilst operating or whilst plugged into the mains power.
6. DO NOT leave the buffer/polisher running unattended.
7. When not in use, switch the buffer/polisher off and unplug from the power supply.

SAFETY SYMBOLS

SAFETY SYMBOLS & PICTOGRAMS

The following safety symbols are found on the product



Read the manual and safety instructions before use



Eye protection should be worn



Ear protection should be worn



Dust mask should be worn



Hazard;- motor gets hot



Wear protective gloves

ASSEMBLY

MOUNTING THE MACHINE

1. Bolt the buffer/polisher to a workbench using the securing holes shown.

- DO NOT block the ventilation paths through the base.
- Check that the installation is secure before turning the buffer on.

FITTING BUFFING/POLISHING PADS


1. Place the spacer over the shaft.

2. Place the polishing mop between the washers and secure with the retaining nut, hand tight.

The shaft threaded ends are handed LH and RH.

3. Tighten the nuts enough to grip without crushing the buffing/polishing pad.

NOTE: Wheel rotation, when in use, will tighten the retaining nut.

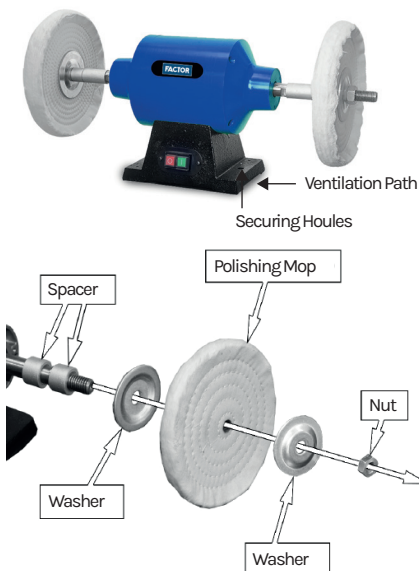

USING YOUR BUFFER/POLISHER

WARNING: BEFORE COMMENCING WORK, ENSURE YOU HAVE READ AND UNDERSTOOD ALL OF THE SAFETY INSTRUCTIONS

1. Plug the buffer/polisher into the mains power supply.


2. Switch the buffer/polisher on

3. Slowly bring the workpiece into contact with the polishing mop.

• See the image on the right to determine the safest and best position for contact with the wheel.

• DO NOT contact the wheel outside of the quadrant.

4. After use, unplug the buffer/polisher from the mains power supply, and clean the machine ready for next use.

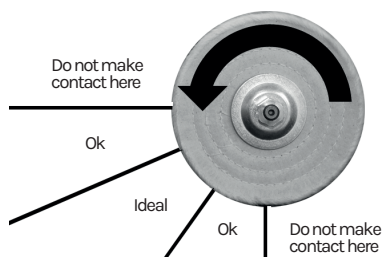



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com

