



FACTOR

ŞAMPUANLI HALI & KOLTUK YIKAMA MAKİNASI
SHAMPOO CARPET & SOFA WASHING MACHINE

KULLANMA KILAVUZU USER MANUAL

PH602



Uyarılar:

- 1) Bu ürün fiziksel olarak zayıf, zihinsel engellelilerin ve çocukların kullanabilmesi üzerine tasarlanmamıştır. Bu dökümanda yazarlar kendi güvenliklerinin sorumluluğunu alabilecek kişilere hitap etmektedir.
- 2) Çocuklarınıza bu ürünle oynamamaları gerektiği noktasında gerekli bilgilendirmeleri yapınız.
- 3) Ürünü temizlerken veya bakımını yaparken fişini çektiğinizden emin olunuz.
- 4) Güç kablosu hasar gördüğünde veya gevşediğinde bunu satıcınızın bildirdiği bir serviste veya vasıflı bir teknisyene yaptırınız. Y-tipi bağlantı vardır.
- 5) Ürünle çalışmanız bittikten sonra fişini çekiniz.
- 6) Güç kaynağı ile ürünün voltaj ve frekansının uyuşması gerekir.

İÇERİK

Kullanım Öncesi Uyarılar	4
Emniyetli Kullanım	4
Ürün Tanıtımı	5
Ana Yapı	5
Düzenli Bakım	6
Teknik Parametreler	6
Olası Sorunlar ve Çözümleri	7
Açılım Şemaları	8

KULLANIM ÖNCESİ UYARILAR

Factor Halı ve Koltuk Yıkama Makinamızı tercih ettiğiniz için teşekkürler. Ürünü kullanmadan önce lütfen kullanım kılavuzunu okuyunuz. Bu kılavuz, ürünün emniyetli kullanımı ve bakımı ile ilgili önemli bilgiler içermektedir. Kullanım kılavuzu okunmadan ürünün kullanılması size ve diğer insanlara tehlike yaratabilir veya ürüne ve çevreye zarar verebilir. Bu nedenlerden dolayı, kullanıcı ürünü kullanmadan önce gerekli eğitimi almış olması gerekmektedir.

EMNİYETLİ KULLANIM

UYARI: Kullanım kılavuzu okunmadan ürünün kullanılması size ve diğer insanlara tehlike yaratabilir veya ürüne ve çevreye zarar verebilir. Bu nedenlerden dolayı, kullanıcı ürünü kullanmadan önce gerekli eğitimi almış olması gerekmektedir.

UYARI: Ürünü yanıcı yada patlayıcı maddelerin yakınında kullanmayınız. Asla ürüne yanıcı madde ilaveetmeyiniz.

UYARI: Güç kablosunun arızalı olduğu durumlarda elektrik çarpmasını engellemek için ürünün durdurulması gerekmektedir. Bu durumda, satıcıyla yada ürün hakkında yeterli bilgi sahibi olan personelle irtibata geçiniz.

UYARI: Ürünün bakımı yada temizliği sırasında, elektrik çarpmasını önlemek için ürünü fişten çıkartın.

UYARI: Herhangi bir sıvı taşması yada sızıntısı yaşanırsa, ürünü durdurup gücünü kesin. Sonrasında sorunu tespit edip, sızıntıyı engelleyin.

UYARI: Ürün ağırdır. Bu yüzden ürünü eğimli zeminlerde durdurmayın ve çalıştırmayın.

UYARI: Yıkama yaparken 60C'den (140F) daha sıcak su kullanmayınız, ürüne zarar verir.

ÜRÜN TANITIMI

Factor Halı ve Koltuk Yıkama makinası, halı temizleme amacıyla üretilmiş bir üründür. Tek temizleme hareketinde ürünümüz, üç ayrı işlemi gerçekleştirmektedir. Püskürtme, temizleme ve kurutma. Ürünümüz estetik tasarını ve kolay kullanımıyla; koridor, restoran, konferans salonu gibi geniş alanların temizlenmesi için uygundur.

ANA YAPI



- 1- Üst tutamaç
- 2- Üst ünite
- 3- Yan tutamaç
- 4- Sıvı tankı
- 5- Fan Açma/Kapama
- 6- Su Pompası Açma/Kapama
- 7- Hızlı Bağlantı
- 8- Çelik Boru
- 9- Hava emme Borusu
- 10- Çelik Hazne (60L/80L)
- Plastik Hazne (60L)
- 11- Su Emici Başlık (Büyük)
- 12- Kirli Su Hortumu
- 13- Şasi
- 14- Su Emici Başlık (Küçük)

DÜZENLİ BAKIM

1. Makinayı daima temiz tutun.
2. Temiz su tankına 50°C'den daha sıcak olmayan 7,5 litre su koyun. Sonrasında makineyi 1 dakika boyunca çalıştırın. Bu işlem ürünün içerisinde alkali birikmesini engeller.
3. Kirli su tankındaki topu kirlerden ve yünlerden temizleyin. Hava akımının kesilmemesi için yünlerin temizlenmesi gereklidir.
4. Temiz su tankının içerisindeki filtreyi kontrol edin. Eğer yün veya kirle tıkanırsa temizleyin.
5. İçeride kalan alkali sıvısını temizlemek için sirke kullanın (sirke ve su karışımı oranı 1:3) Ayda en az bir kere temizleyin.
6. Makinayı uzun süre kullanmayacaksanız tahliye vanasını açtığınızdan emin olun.

TEKNİK PARAMETRELER

Güç	2800W
Tank Kapasitesi	Temiz/25Lt - Kirli/80Lt
Volta j	220V
Vakum Gücü	300mbar / 30 kpa
Soğutma	By-Pass
Hava Debisi	3000L/s
Kablo	10m
Hortum	EVA Ø38mm, 240cm
Ölçüler	48x63x98
Ağırlık	25 Kg


OLASI SORUNLAR VE ÇÖZÜMLERİ

Belirti	Sebeup	Çözüm
Makinada güç yok	Güç kablosu zarar görmüştür	Güç kablosunu yenileyin
	Binadaki güç kaynağı bozulmuştur	Kontrol edin, tamir edin veya değiştirin
Güç düğmesi açık olduğu halde motorlar kesintili çalışır	Güç kablosu sorunludur	Tamir edin veya değiştirin
	Açma-kapama düğmesi bozulmuştur	
	Elektrik bağlantısı iyi yapılmamıştır veya zayıftır	
Emme gücü yok veya zayıf	Tahliye vanası açıktır	Tahliye vanasını kapatın
	Kirli su tankının kapağı uygun şekilde kapatılmamıştır	Sıkıca kapatın
	Vakum hortumu zayıf bağlanmıştır	Yerine yeniden sıkıca yerleştirin
	Vakum hortumu tıkanmıştır	Hortumu yıkayın
	Kirli su tankındaki topta kir birikmiştir	Kirleri temizleyin
	Vakum hortumu zarar görmüştür	Vakum hortumunu yenileyin
	Vakum motorunun bağlantısı zayıflamıştır	Vidaları sıkıştırın
Püskürtme motoru çalışıyor fakat su püskürtmüyor	Püskürtme ucu tıkalıdır	Püskürtme ucunu temizleyin
	Makinanın altındaki filtre tıkanmıştır	Filtreyi temizleyin
	Püskürtme motoru zarar görmüştür	Tamir edin veya değiştirin
	Motorun içerisinde yabancı cisim vardır	Tamir edin


AÇILIM ŞEMALARI

Not : Bu açılım şeması AC602CP, AC-802CS, AC-603CS, AC-603CP ve AC-803CS ürünleri için aynıdır. AC-603CS, AC-603CP VE AC-803CS ürünlerinde 3 motor vardır.


1	TAH4*20	6 adet
2	Çekiş kolu	1 adet
3	KM5*20	4 adet
4	TAH4*20	4 adet
5	Kapak	1 adet
6	½ dişi Çap 10 Pagoda düz bağlantısı	1 adet
7	Çap 10*20*1 Pul	1 adet
8	1/3 dişi çap 10 pagoda düz bağlantısı	3 adet
9	13-19 hortum kısıkaçı	4 adet
10	Çap 10 Yüksek basınçlı boru	1 adet
11	Tuş	1 adet
12	1/1 hızlı bağlayıcı (dişi)	1 adet
13	1/1 dişi düz bağlayıcı	1 adet
14	1/1 çap 6 düz bağlayıcı	1 adet
15	8*12 silikon boru	1 adet
16	220V devir daim su motoru	1 adet
17	Çap 5*10*1 pul	4 adet
18	M5 somun	4 adet

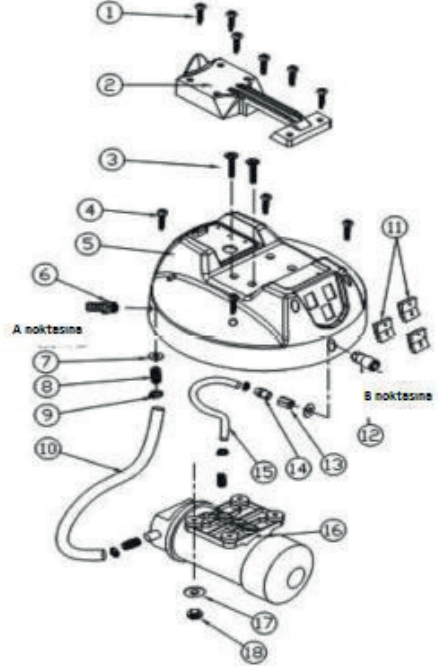

19	Güç şeridi	1 adet
20	Güç şerit kılıfı	1 adet
21	Terminal	2 adet
22	Filtre kapasitörü	2 adet
23	Kablo kıskacı	1 adet
24	Duvar	1 adet
25	Motor kapağı	1 adet
26	Motor pulu	4 adet
27	Motor	2 adet
28	8 bacaklı kapak	2 adet
29	Motor izolasyon yapağı	3 adet
30	Motor temeli	1 adet
31	Filtre	1 adet
32	Conta bileziği	1 adet
33	Yüzer bilya	1 adet
34	Yüzer bilya desteği	1 adet
35	Toz izolasyon desteği	1 adet
36	Toz izolasyon desteği	1 adet
37	Makara bağlantısı	2 adet
38	Pis su borusu	1 adet
39	Dairesel conta	1 adet
40	Dairesel konektör	1 adet
41	60L çelik makara	1 adet
	80L çelik makara	1 adet
	60L plastik makara	1 adet
42	8*12 silikon boru	1 adet
43	½ dişi çap 10 pigoda düz konektör	1 adet
44	Su tankı	1 adet
45	Vida 6*30	8 adet
46	Çap 6*12*1.2 pul	8 adet
47	Su tankı destek kolu	4 adet
48	Su tankı desteği	1 adet
49	Tutma kolu	1 adet
50	Şase	1 adet
51	Ön tekerlek	2 adet
52	Arka teker kombinasyonu	1 çift

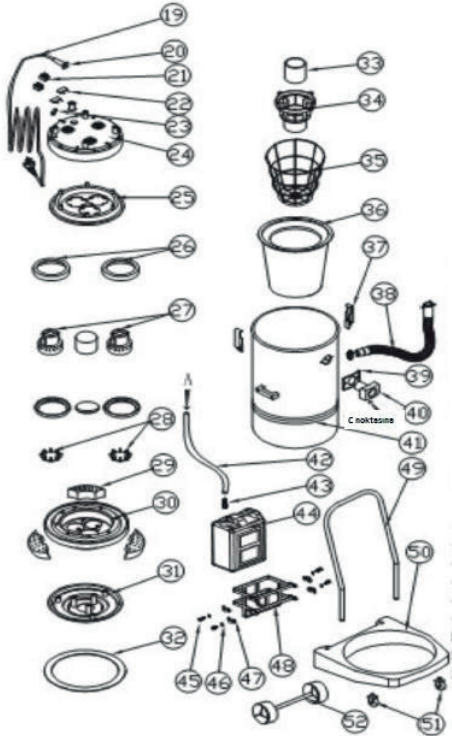

1	1/1 hızlı konektör (dişi)	1 adet
2	1/1 dişi düz konektör	1 adet
3	1/1 çap 6 düz konektör	2 adet
4	Çap 5*8 kauçuk pipe	1 adet
5	Paslanmaz çelik boru	1 adet
6	CM5*25	1 adet
7	Sabitleyici halka	1 adet
8	M5 somun	1 adet
9	Plastik emici	1 adet
10	Spray siviç yeri	1 adet
11	Spray siviç yayı	1 adet
12	Conta halkası	1 adet
13	Spray siviç somunu	1 adet
14	Spray siviç mili	1 adet
15	Spray siviç kolu	1 adet
16	Çap 4*8*1 pulu	1 adet
17	PM4*20	1 adet
18	M4 çekme somunu	1 adet
19	Spray siviçe boru bağlantı civatası	1 adet
20	Spray siviçe boru bağlantı somunu	1 adet
21	Spray siviç üzerine boru somun	1 adet
22	Hortum oturtma yeri	2 adet
23	M4 çekme somunu	1 adet
24	Spray siviç hortumu	1 adet
25	Hortum	1 adet
26	PM4*10	2 adet

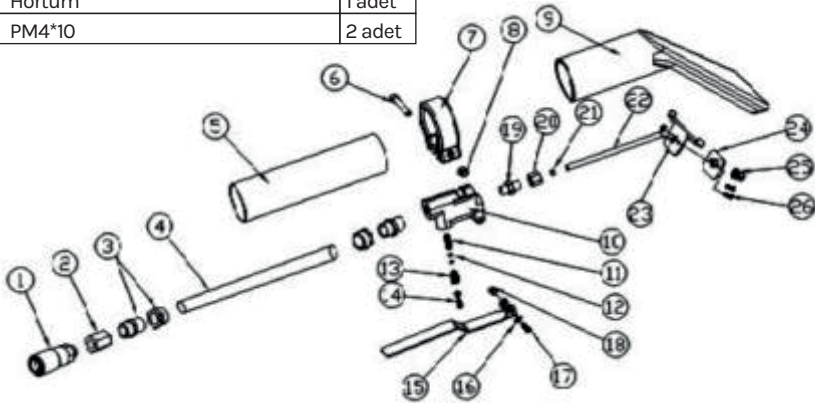

1- Hava emme borusunu ürünün arkasından çıkarın ve düz esneyebilen kauçuk boruyu ürüne takın
2- Su borusunu ürünün altında bulunan hızlı konektöre bağlayın.

This diagram shows the exploded view of a bicycle headlight assembly. The components are numbered as follows: 1. Headlight body, 2. Lens, 3. Mounting bracket, 4. Headlight tube, 5. Mounting bracket, 6. Mounting bracket, 7. Mounting bracket, 8. Mounting bracket, 9. Mounting bracket, 10. Mounting bracket, 11. Mounting bracket, 12. Mounting bracket, 13. Mounting bracket, 14. Mounting bracket, 15. Mounting bracket, 16. Mounting bracket, 17. Mounting bracket, 18. Mounting bracket. The letters A, B, C, D, and E indicate specific assembly points or features.

YETKİLİ SERVİSLER

ADANA
BARJET END.TEM.MAK.
SEYYETTİN BARAN
KIZILAY CAD.KARASOKU MAH.28010
SOK.NO:11/A SEYHAN
0322 352 20 21

TORİK MAKİNA
MİKAIL AKYILDIZ
ULUCAMI MAH. 25021 SOK. NO:14
MERKEZ - ADANA
0530 148 36 46

ADİYAMAN
EMEK TEKNİK MAKİNA
REİS SERVİS
ABDULLMUSA AKASLAN
CUMHURİYET MAH.
MUHTULUK CAD.NO:43
ÇEVREYOLU ÜZERİ MERKEZ
0545 402 02 21

ANKARA
PUDAS PETROL
RECEP ÇELEN
1263 SOK NO:30 OSTİM
0312 395 86 00

BARİM MAKİNA
ABDULLAH SÜTÇÜ
ALİNTERİ BULVARI 1161/1 SK.
(ESKİ 223 SK.NO:18/A OSTİM
0312 384 06 45

DEMİRDEM MAKİNA LTD.ŞTİ.
MURAT DEMİR
1234 SK. (ESKİ 57 SK.) NO:153 OS-
TİM 0 312 385 93 85

DURU END. TEMİZLİK MAK. VE
MATBA. SAMED PULAT
DEMETGÜL MAH.422 SOK.HIKMET
APT.NO:22/D DEMETEVLER
0312 346 96 56

ANTALYA
ÖZCAN GÜLÜĞÜ-SONER PROF.
TEM.MAK.TEK.SERV MURATPAŞA
MAH.561 SOK.4.AĞAÇ APT.NO:40 A
0242 248 08 00

GÖKLER MAKİNA
GÖKHAN GÖKLER
CUMHURİYET MAH.ESKİ SAN.SİT.682
SOK.NO:37 MERKEZ 0242 343 21 29

AKTİF BOBİNAJ
HÜSEYİN SARI
SANAYİ MAH. 2005 SOK. NO:25/201
MANAVGAT 0242 742 56 29

KARADUMAN ZİRAİ ALETLER
SABRİ KARADUMAN
SANAYİ SİTESİ AHMET AYIK CAD.G
BLOK NO:43 ALANYA
0242 515 06 76

AYDIN
ÖZDE OTOMOTİV MAKİNA
YAŞAR AYDIN
ZEYBEK MAH. 1521 SK. NO:4-6D
EFELER 0546 453 78 12

BALIKESİR
EMEK MOTOR
YILMAZ GÜNDOĞAN
YENİ SAN SİT 8.SOK.NO:26 2. KAPI
GİRİŞİ KARŞISI MERKEZ
0266 246 10 47

MUTLU MOTOR / SEDAT MUTLU
ATATÜRK CAD.NO:257
BANDIRMA 0266 715 44 43

BATMAN
AKTİF BOBİNAJ / REİS SERVİS
HİKMETYAR BİLGE
YENİ MAHALLE 16.CAD.
1008 SOK. NO:8
0488 214 56 64

BURDUR
ÇEVİKLER BOB.
ÜMIT ÇEVİK
AYDINLIKEVLER MAH.KSS.2.SK.15
MERKEZ 0248 252 94 37

BURSA
ATES MAKİNA / HARUN ATEŞ
SAKARYA MH 4.DUZ SK NO NO: 7/A
OSMANGAZI 0224 272 33 11

MAKTEM MAKİNA SAN. VE TİC. LTD. ŞTİ.
SAKARYA MAH. KIBRIS SEHİTLERİ
CD. NO:63 A IÇ KAPI NO:1 OS-
MANGAZI 0224 256 63 92

CANAKKALE
KISACIK BOBİNAJ
SAMI KISACIK
NAMIK KEMAL MAH.KAYNAK SOK.
NO:1-C MERKEZ
0286 217 96 71

SAHİN BOBİNAJ
HASAN SAHİN
İSTIKLAL CAD. NO:154 BİGA
0286 316 11 71

ÇORUM
ÖZKAN BOBİNAJ
ÖZKAN SÖYLEYEN
GÜLABİBEY MAH. KUBBELİ CD.
NO:77
0364 224 75 97

DENİZLİ
ÖRSLER BOBİNAJ
SAHİM ÖRSGÜL
AHI SINAN CAD.SEDF CARSISI
NO.9-11 0258 261 42 74

DIYARBAKIR
İKRA BOBİNAJ / REİS SERVİS
SALİH SÜREN
1.SAN.SİTİB/5 BLOK NO.6
0412 237 60 21

DÜZCE
MOTOR MEKANİK BOBİNAJ
ZAFER ÜNAL
ESKİ SANAYİ ÇARŞISI TAHRİR ALTIN
SOK.NO:17/B 0380 523 87 03

EDİRNE
ERAY BOBİNAJ
M. ERAY TUĞRUL
KÜÇÜK SANAYİ SİTESİ 4.BLOK
NO:14 MERKEZ
0284 225 26 92

ELAZIĞ
TEKSER TEKNİK
MUAMMER ATALAY
SANAYİ SİT. 10. SOK. NO:4
0424 224 83 14

ERZİNCAN
BAKIRÇIOĞLU ELEK. MAK. HİRD.
İNS. YALÇIN CAN. VE TİC. LTD. ŞTİ.
HARUN SUDAŞ / REİS SERVİS
GÜLABİBEY MAH.ŞEHİT KENAN
ARDIÇ CAD.NO:44/A MERKEZ
0446 223 09 59

ERZURUM
TEKNİK MAKİNA BOBİNAJ
MÜKREMIN SEVİDİ
SANAYİ DEMİROLER SİTESİ 1.BLOK
NO.46 0442 243 17 34

ESKİŞEHİR
TEPEBAŞI TEKNİK SANAYİ VE
TİC.LTD. ŞTİ.
TUNALI MAH. SEMT. SAKARYA-2
CAD. NO:96 D TEL:0222 323 59 80

GAZİANTEP
FATİH TEKNİK MAKİNA
EMİRHAN KAVCI
KÜLSİĞET SANAYİ SİTESİ
ANAFARTALAR BULV. SOSYAL TESİSLER
4.ADA 2.TIP NO:10 ŞEHİTKAMİL
0342 235 37 18

MERCAN KOCAOĞLAN
SARIGÜLLÜK MAH.KILIÇ ALI CAD.
NO:10/A ŞEHİTKAMİL
0342 338 74 76

HATAY
PAK İS ELEKTRİK
MUZAFFER PAK
HARAPARASI MAH.2.CAD.NO:7
ANTAKYA
0326 215 64 73-0326 221 15 45

ŞUBE
YENİ SANAYİ SİTESİ 6. İNİŞ 4. CAD.
ÇİLEBURÇ NO:10 ANTAKYA
0323 215 64 73

İSTANBUL-ANADOLU
MC TEMİZLİK MAKİNALARI
MUSTAFA TAYLAN
MIMAR SINAN MAH.
KEMALPAŞA CAD. KIBAR SOK.
NO:33/A ATAŞEHİR
0216 660 12 85

İSTANBUL-AVRUPA
SERVICE MACRO MAK.
TURGUT İPKIRMAZ
İKTELLİ OSB MH.GÜNGÖREN MET.
RO AVM B BLOK 1 NO: 36
BAŞAKŞEHİR
0212 703 33 10

AS MAKİNA / SELÇUK ACAR
FETHİ TEPE MAH.TEPE ÜSTÜ SOK.
NO.55 HASKÖY BEYOĞLU
0212 235 25 26

İZMİR
OLMO TEMİZLİK
HÜSEYİN GÖKOĞLU
1203/3 SOK.NO:5 GIDA CARSISI/
YENİŞEHİR 0232 433 01 93

K.MARAS
KAHRAMAN BOBİNAJ
MESUT KURU
YENİ SANAYİ SİTESİ 25. ÇARŞISI NO:8
DÜŞÜKADIROĞLU 0344 236 29 68

ÜSTÜN BOBİNAJ / MURAT ÜSTÜN
YENİ SANAYİ SİTESİ 9.BLOK NO:14
ELBİSTAN 0344 413 64 93

KARAMAN
UZUN ELEKTRİK BOBİNAJ
RAMAZAN UZUN
HAMİDİYE MAH. YENİ SANAYİ SİT.
1966 SK. NO:15 MERKEZ
0338 213 70 79

KASTAMONU
NUR BOBİNAJ / MUSTAFA SAKAR
SAN.SİT.CAMI CAD.NO:29/A MERKEZ
0366 214 61 18

KAYSERİ
POLMER SERVİS
ALPER DEMİR
KEYKUBAT MAH.OSMAN KAVUNCU
BULVARI NO:313 MELİKGAZİ
0352 332 30 11

KIRKLARELİ
YALÇIN SOĞUTMA LTD.ŞTİ.
GÜNDOĞDU MAH. FATİH CD.NO:95
LÜLEBURGAZ KIRKLARELİ
0288 412 01 49

KOCAELİ
AKPET TİCARİET
CAN YEGİN
İSTASYON MH. ÇİLEM SK. KARTEPE
SAN.
E BLOK N:174
0262 321 07 85

DURSAN ELKTRİK
İHSAN DURMUŞ
KARABAŞ MAH.KÖSEÖĞLU SOK.
FUAR APT. NO:24 İZMİT
0262 325 91 41

KONYA
BOLLUCA TEKSTİL TEMİZLİK VE
KİMYA LTD. ŞTİ.
SAFA BOTSALI
TOPTANCILAR ÇAR. GÖKÇEBEY SK.
NO:32 SELÇUKLU
0332 238 77 20

TEKYAMAN BOBİNAJ / REİS
SERVİS
ETHEM YAMAN
FEVZİ ÇAYIRMAK MAH. 10563 SOK.
NO:7 KARATAY
0332 342 68 50

KÜTAHYA
KUDRET BOBİNAJ
YENİ SAN. SİT. 19. SOK. NO: 28
MERKEZ 0274 230 00 14

MALATYA
SK TEMİZLİK MALZEMELERİ
ERSİN KAYA
SANCAKTAR MAH.KÖPRÜ SOK.
NO:18/B BATTALGAZİ
0422 322 23 77

MANİSA
ERCOYM TEKN.SERV. HİZ.
EVREN ÇOŞKUN
ATATÜRK MAH.162 SOK.NO:8/A
AKHISAR TEL:0236 413 44 44

MERSİN
ÇOŞKUN BOBİNAJ / REİS SERVİS
SEDAT ÇOŞKUN
MAH.MUJDEYİ MAH.4810 SOK.NO:69
0325 337 31 61

MUĞLA
EYÜP BOBİNAJ
EYÜP TIRIMOĞULLARI
ULUSAL EĞEMENLİK CD.NO:67
MARMARİS 0252 412 14 50

MERKEZ BOBİNAJ
EMRAH HAYTA
İNOUL BULVARI NO:74 FETHİYE
0252 612 10 51

ÜNMAK TEKNİK-İDRİS ÜNAL
YAKARÖY MAH.ÇİLEK CAD.NO:86
BODRUM 0543 939 11 55

NIĞDE
GÜL BOBİNAJ / REİS SERVİS
ÖMER UÇUL
ŞAHİNALI MH SEHİTBAYRAMAKSOY
SOKAK NO:18 MERKEZ
0534 386 40 09

ORDU
KAHVEÇİĞÜLÜ ELEKTRİK
CUMHUR KAHVECİ
DURUGÖL MAH.ATATÜRK BULVARI
NO:487/A 0452 233 13 35

SAKARYA
İR MAKİNA - FATİH İRFEVZİ PAŞA
CAD. ÇARK SAN. SİT.
NO:38 SERDİVAN 0264 279 01 81

SAMSUN
METİN BOBİNAJ / REİS SERVİS
ADEM METİN
ESKİ SAN.SİT.YENİ MAH.ULUS CAD.
NO:42 0362 228 64 25

ISILDAK BOBİNAJ
MELİH ISILDAK
ALACAAM CD. BELEDİYE DUKKANLARI
NO:115 BAFFRA 0362 543 10 49

SANLIURFA
ELSAN BOBİNAJ/ NURETTİN
GÜLER
CUMHURİYET CAD.1
VAATAN SOK.NO.33 0414 313 02 62

TEKİRDAĞ
AKYÜZ TEMİZLİK MAKİNELERİ
BAHATTİN AKYÜZ
KIZILPINAR GÜLTEPE MAH. OS-
MANLI CAD. NO:6 İÇ KAPI NO:203
ÇERKEZKÖY
0505 376 46 30

ÖZYL ELEKTRİK ENDÜSTRİYEL
SERVİS
KURTULUŞ YILDIRIM
GAZİ OSMAN PAŞA MAH. ALAĞA SK.
NO:4 ÇERKEZKÖY 0282 726
67 04

TOKAT
CETİN ELEKTRİK BOBİNAJ
MUSTAFA CETİN
SANAYİ SİTESİ CAMI ALTI NO:13-18
0356 214 63 07

TRABZON
DIÑÇ BOBİNAJ / REİS SERVİS
AYHAN DİNCER
BUYUKSANAYİ SİTESİ. SOSYAL HİZ-
MET BİNASI NO:3-B
0462 325 22 02

MAKİNA MARKET
AHMET SALİH SAHİNER
SARAYCI MAH.İZZET ÖST SOK.
NO:69 ORTAHİSAR
0532 498 14 80

VAN
MASTER MEKANİK MAKİNA
SEYRANTEPE MAH.SAN.SİT.
23.SOK.NO:4 B TUŞBA..
0432 223 28 47

GARANTİ BELGESİ

İTHALATÇI FİRMANIN

UNVANI : REİS MAKİNA TİCARET VE SANAYİ A.Ş.
MERKEZ ADRESİ : ABDURRAHMANÇİFTELİ MH. EBUBEKİR CD. İSTANMOĞLU SK.
NO: 2 34887 SAMANDIRA / SANCAKTEPE / İSTANBUL
TEL / FAX : +90 444 73 47 / +90 (216) 561 46 88
E-MAIL : info@reismakina.com

FİRMA YETKİLİSİNİN

İMZASI- KAŞESİ:


MUSTAFA YILMAZ
FİRMA MÜDÜRÜ

MALLARIN

CİNSİ : ŞAMPUANLI HALI & KOLTUK YIKAMA MAKİNASI
MARKASI : FACTOR
MODELİ : PH602

BANDROL VE SERİ NO :

TESLİM TARİHİ/YERİ : 2 YIL

GARANTİ SÜRESİ : 2 YIL

AZAMI TAMİR SÜRESİ : 20 iş günü

SATICI FİRMANIN:

UNVANI :

ADRESİ :

TEL / FAX :

E-MAIL :

FATURA TARİHİ/NO :

TARİH İMZA-KAŞE :


GARANTİ ŞARTLARI

1) Garanti süresi, malın teslim tarihinden itibaren bağlar ve tüketici için 2 yıldır.	
2) Malın bütün parçaları dahil olmak üzere tamamı garanti kapsamındadır.	
3) Malın ayıplı olduğunun anlaşılması durumunda tüketici, 6502 sayılı Tüketicinin Korunması Hakkında Kanunun 11 nci maddesinde yer alan hükümlere göre işlem yapabilir.	
a) Ücretsiz onarım talebi.	
b) Satış bedelinden indirim isteme,	
c) Ücretsiz onarım isteme,	
d) Ücretsiz onarım isteme,	
e) Satış bedelinden indirim isteme,	
f) Ücretsiz onarım isteme,	
g) Ücretsiz onarım isteme,	
h) Ücretsiz onarım isteme,	
i) Ücretsiz onarım isteme,	
j) Ücretsiz onarım isteme,	
k) Ücretsiz onarım isteme,	
l) Ücretsiz onarım isteme,	
m) Ücretsiz onarım isteme,	
n) Ücretsiz onarım isteme,	
o) Ücretsiz onarım isteme,	
p) Ücretsiz onarım isteme,	
q) Ücretsiz onarım isteme,	
r) Ücretsiz onarım isteme,	
s) Ücretsiz onarım isteme,	
t) Ücretsiz onarım isteme,	
u) Ücretsiz onarım isteme,	
v) Ücretsiz onarım isteme,	
w) Ücretsiz onarım isteme,	
x) Ücretsiz onarım isteme,	
y) Ücretsiz onarım isteme,	
z) Ücretsiz onarım isteme,	



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com





FACTOR

ŞAMPUANLI HALI & KOLTUK YIKAMA MAKİNASI
SHAMPOO CARPET & SOFA WASHING MACHINE

KULLANMA KILAVUZU USER MANUAL

PH602



Cautions:

1. This machine is not intended for use by the physically weak, intellectually obtuse or mentally disabled people (including children), unless it is safely used under the help or instructions of those who are responsible for their safety.
2. The children shall be supervised to ensure that they will not play the machine.
3. Be sure to remove the power plug from the socket before cleaning or repairing the machine.
4. In the event that the power cables are damaged or loose, please have them replaced by the manufacturer's service station or qualified technician. The connection is Y-type connection.
5. Remove the power plug after stopping the machine.
6. Power supply must be matched with the power voltage and frequency of the machine.

CONTENTS

Pre-Use Warnings	4
Safe Use	4
Product Introduction	5
Main Structure	5
Regular Maintenance	6
Technical Parameters	6
Possible Problems and Solutions	7
Expansion Diagrams	8

CAUTIONS BEFORE OPERATION

Welcome to buy and use Factor Carpet and Upholstery Cleaning. Before use, please be sure to read this User Manual thoroughly. This manual provides important information on safe operation and maintenance of the machine.

If you try to operate the machine or perform any maintenance without reading this Manual, it might cause danger to you or other people, or cause damage to the machine or other substances. Therefore, the operators must accept adequate training before they are allowed to operate this machine.

SAFETY CONSIDERATIONS

DANGER: Operation or maintenance of the machine without reading the User Manual might cause injury to you or other people, or cause damage to the machine or other substances. The operators must accept adequate training before they are allowed to operate this machine.

DANGER: Please do not use this machine close to the inflammable or explosive substances. Never add any inflammable substances into this machine.

DANGER: To avoid electric shock, please immediately stop this machine when the power cord is damaged. In this case, please immediately seek help from the manufacturer's service agency or equivalent qualified personnel for replacement.

DANGER: To avoid electric shock, please cut off the power supply during care or maintenance of the machine.

WARNING: When there is any foam or liquid overflowing, please immediately disconnect the machine from the power supply. Then, find out the cause and eliminate it.

WARNING: The machine is very heavy. Therefore, do not stop the machine on slope or inclined face, and never start the machine on slope.

WARNING: Do not clean with the water higher than 60 °C (140 °F); otherwise the machine will be damaged.

PRODUCT INTRODUCTION

The Factor Carpet and Upholstery Cleaning is a type of machine intended for cleaning the carpet. With one wash, the machine completes the three processes of spraying, purge and drying, resulting in thorough cleaning of the carpet. The machine is fashion in design and easy to use, especially suitable for cleaning of the large-area carper in corridor, conference hall and restaurant. Sure without doubt it is

MAIN STRUCTURE



- 1. Lift Handle
- 2. Head Unit
- 3. Grab Handle
- 4. Liquid Tank
- 5. Fan Switch
- 6. Water Pump Switch
- 7. Quick Connector
- 8. Steel Pipe
- 9. Air Suction Pipe
- 10. 60L/80L Steel Drum
- 60L Plastic Drum
- 11. Big Water Sucker
- 12. Sewage Pipe
- 13. Chassis
- 14. Small Water Sucker

ROUTINE MAINTENANCE

1. Always keep the machine clean.
2. Add 2 gallons of clean warm water below 50 ° into the clear water tank. Then, start the water pump, nozzle and sucker to run for 1 minute. This can prevent the deposit of alkali substances.
3. Wash off the dirt and wool on the floating ball support in sewage tank. The wool must be thoroughly eliminated to ensure that the air flow outlet will not be obstructed.
4. Check the filter at the inlet of clear water tank for any wool or dirt. If any, remove them.
5. To eliminate the residual alkali liquid, please purge with vinegar solution (mixture of vinegar and water at 1 : 3). Purge at least every month.
6. Be sure to open the drain valve before putting the machine for storage.

TECHNICAL PARAMETERS

Power	2800W
Tank Capacity	Clean/25L – Dirty/80L
Voltage	220V
Vacuum Power	300 mbar / 30 kPa
Cooling System	By-Pass
Airflow	3000 L/s
Cable Length	10 m
Hose	EVA Ø38mm, 240 cm
Dimensions	48 x 63 x 98 cm
Weight	25 kg


MAIN TROUBLES AND HOW TO SOLVE THEM

Symptom	Cause	How to Solve
No power supply	The power cord is damaged.	Replace the power cord.
	The power supply in the house or building is disconnected or tripped.	Check, repair or replace.
The power is switched on, but all the motors run intermittently.	Power cord problem	Repair or replace
	The switch is damaged.	
	The terminal is loose or the contact is poor.	
No sucking force or the sucking force is low.	The drain valve is open.	Close the drain valve.
	The sewage tank is not well sealed to its cover.	Tighten and seal it.
	Connection of vacuum pipe is loose.	Insert and tighten it.
	The water suction pipe is blocked.	Wash the water suction pipe.
	There is dirt deposited on floating ball support.	Remove the dirt.
	The vacuum suction pipe is damage.	Replace the water suction pipe.
	The vacuum motor installation is loose.	Tighten the screws.
The pump motor is started, but there is no liquid sprayed from the nozzle	The nozzle is blocked.	Wash the nozzle
	The filter at the machine bottom is blocked.	Clean the filter.
	The pump motor is damaged.	Repair or replace
	There is foreign substance inside the pump body.	Repair


AÇILIM ŞEMALARI

Note: This Exploded View is same as that for AC602CP, AC-802CS, AC-603CS, AC-603CP and AC-803CS.
In which: there are 3 motors on AC-603CS, AC-603CP and AC-803CS


1	X-41# (CB Utility-Type Arm)	4 pcs
2	Steel KM5*20	4 pcs
3	AC-42# (Utility-Type Head Cover)	1pc
4	1/2 street elbow	1 pc
5	1/2 Female $\Phi 10$ Pagoda Straight Connector	1 pc
6	$\Phi 113*26*1.5$ Washer	1 pc
7	1/2 Female $\Phi 10$ Pagoda Straight Connector	3pcs
8	13-19 Hose Clamp	4 pcs
9	$\Phi 10$ oil hose	1pc
10	1/3 Female $\Phi 10$ Pagoda Straight Connector	2pcs
11	Switch (Black)	2pcs
12	Switch (Red)	1 pc
13	1/1 Quick Connector (female)	1 pc
14	1/1 Female $\Phi 10$ Pagoda Straight Connector	1pc
15	$\Phi 10$ Oil Hose	1 pc
16	220V Circulating Water Pump	1 pc
17	$\Phi 5*16*1$ Washer	4 pcs
18	Steel M5 Tapping Nut	4 pcs

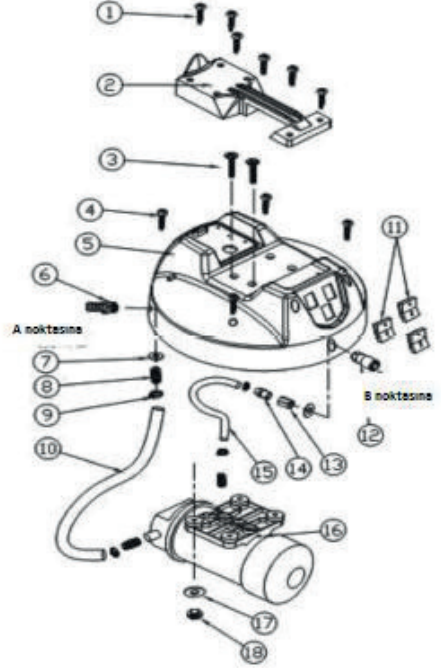

19	Power Cord	1 pc
20	Outlet Rubber	1 pc
21	Terminal	2 pcs
22	Capacitance 2	pcs
23	Wire Clamp	1 pc
24	X-43# (Frame)	1 pc
25	X-45#	1 pc
26	X-46# (Motor Cover)	1 pc
27	T-type Motor Gasket	2 pcs
28	X-47#	1 pc
29	Motor	2 pcs
30	Motor Gasket	2 pcs
31	X-49# (Dustproof Gasket)	2 pcs
32	X-48#	1 pc
33	X-4 Sponge	3 pcs
34	X-410# Motor Base	1 pc
35	X-411# Filter	1 pc
36	CB Utility-Type Seal Ring	1 pc
37	X-413# (CB) Floater	1 pc
38	X-412# (Windshield)	1 pc
39	X-67# (Dustproof Support)	1 pc
40	Ladder-Shaped Dust Partition	1 pc
41	Barrel Lug Clasp	2 pcs
42	Water Discharge Fork	1 pc
43	Water Discharge Pipe	1 pc
44	Square Joint Gasket	1 pc
45	Square Joint	1 pc
46	60L Steel Drum	1 pc
	80L Steel Drum	1 pc
	60L Plastic Drum	1 pc
47	8*12 Silicone Tube (33CM)	2 pcs
48	1/2 Female $\Phi 10$ Pagoda Straight Connector	1pc
49	Water Tank	1 pc
50	$\Phi 13 \times 26 \times 1.5$ Washer	1 pc
51	1/2 Female $\Phi 10$ Pagoda Straight Connector	1pc
52	Steel Hexagonal 6*30	1pc

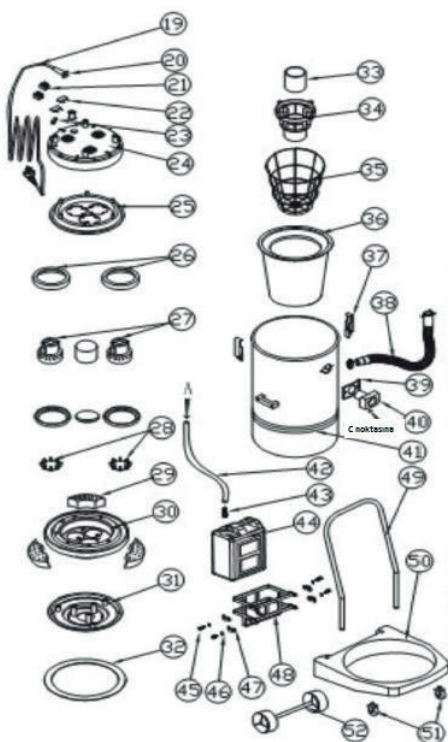

1	1/1 Quick Connector (female)	1 pc
2	1/1 Φ6 Female Straight Connector	1 pc
3	Φ4*8 Rubber Pipe(12cm)	1 pc
4	1/1 Male Φ6 Straight Connector	1 pc
5	Stainless Steel Pipe	1 pc
6	Steel CM5*25	1 pc
7	Fixing ring on spray switch seat	1 pc
8	Steel M5 Nut	1 pc
9	Plastic Sucker	1 pc
10	Spray Switch Seat	1 pc
11	Spray Switch Spring	1 pc
12	7*2Sealing Ring	2 pcs
13	Copper Nut on Spray Switch	1 pc
14	10*2 OSealing Ring	1 pc
15	12*20 Sealing Ring e	1 pc
16	Copper Rod on Spray Switch	1 pc
17	Spray Switch Handle	1 pc
18	SteelΦ4*8*1 Washer	1 pc
19	Smart 3*3*20*Φ3.4	1 pc
20	M3 Tapping Nut	1 pc
21	Spray Switch Nozzle	1 p c
22	Spray Switch Nozzle	1 p c
23	Steel Pipe Nut on Spray Switch	1 pc
24	Nozzle Fixing Seat	1 pc
25	M4 Tapping Nut	2 pcs
26	Spray Switch Nozzle	1 pc

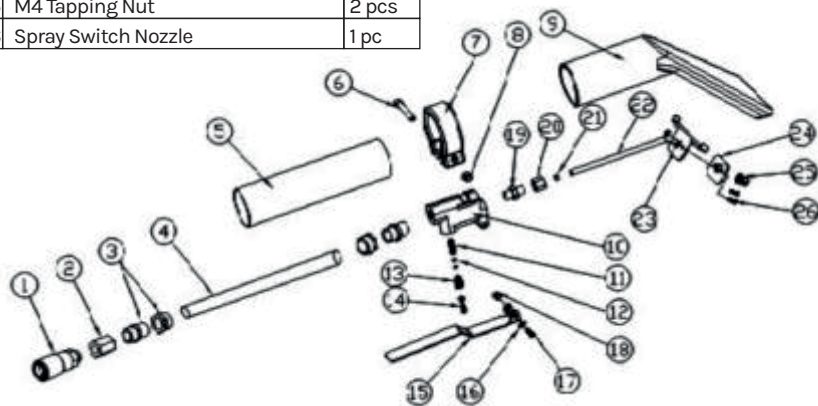


Operating Instructions for Portable Sucker

1. Pull out the air suction pipe from the back of machine and insert the straight flexible rubber pipe into the portable sucker.

2. Connect the water pipe to the quick connector at the bottom of machine.

1	Φ40 Air Pipe Connector A	1 pc
2	Φ40 Air Pipe	1 pc
3	Φ40 Air Pipe Connector B	1 pc
4	Hose Clamp	3 pcs
5	Steel Water Sucker	1 set
6	Steel KM4*16	2 pcs
7	7*20 Ring	1 pc
8	DTJIA Nozzle	1 pc
9	Steel PM4*10	2 pcs
10	Spray Switch Nozzle Plate	1 pc
11	Steel M4 Tapping nut	4 pcs
12	Nozzle Fixing Seat 2	1 pc
13	Φ7 Hose Clamp	1 pc
14	Φ4*8 Rubber Pipe (104cm)	1 set
15	1/1 Male Φ6 Straight Connector	2 pcs
16	Spray Switch Seat Set	1 set
17	Φ4*8 Rubber Pipe (20cm)	1 set
18	1/1 Female Φ6 Straight Connector	1 pc
19	1/1 Quick Connector (female)	1 pc

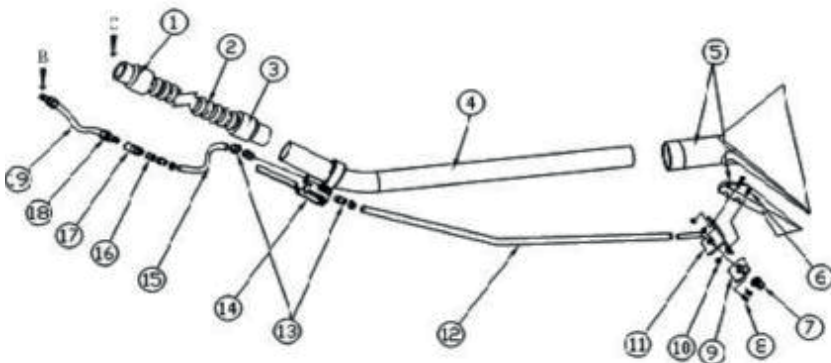



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com

