



FACTOR

DİKEY TİP ELEKTRİKLİ SÜPÜRGE KULLANMA KILAVUZU

PR30U



İÇİNDEKİLER

Ana yapı	4
Kullanım talimatları	5
Teknik Parametreler	9

Ürün Açıklaması

PS520BU dik tip elektrikli süpürgeyi satın aldığınız ve kullandığınız için teşekkür ederiz. Bu makine kompakt bir tasarıma sahiptir ve kullanımı kolaydır. Bu sayede emlak ve temizlik şirketleri maliyetlerden tasarruf edebilir ve verimliliği artırabilir. Halı süpürme işlemi, tüm endüstriyel ve ticari ortamlar için uygundur.

Örneğin: otellerde ve misafirhanelerdeki halılar.


Büyük ölçekli fuarlar, sergi salonlarındaki halılar vb.

Tüm süpürme işlemleri mükemmel ve verimli bir şekilde gerçekleştirilir.

ANA YAPI

PR30U dik tip elektrikli süpürge'nin ana çalışma yapısının şematik diyagramı:

1. Vakum bağlantı borusu
2. Motor anahtarı
3. 2X0.75mm² * 12m kablo
4. Toz torbası kapağı anahtarı
5. Toz torbası kapağı
6. Düğme
7. Işık kılavuz levhası
8. Ayak ayar anahtarı
9. Işık anahtarı
10. Kullanım sapı
11. Hortum bağlantıları
12. Uzun düz uçlu aparat
13. Üçgen Izgara
14. Sap ayar anahtarı
15. Vakum borusu

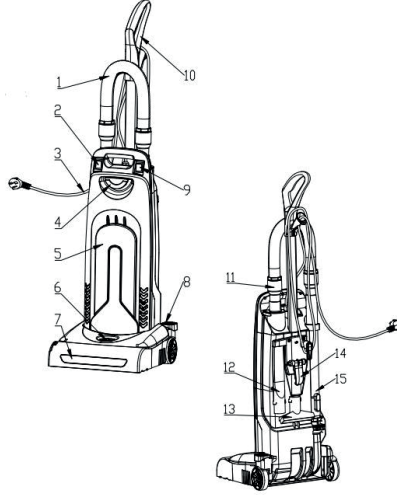

⚠ Tehlike

Makineyi, ambalaj malzemelerinin veya yanıcı maddelerin (örneğin benzin, tiner, motor yağı vb.) depolandığı veya biriktiği odalarda kullanmayın. Makinenin elektrikli veya mekanik parçaları bu maddelerin yanmasına neden olabilir.

⚠ Tehlike

Güç kablosunu düzenli olarak yıpranma veya yırtılma açısından kontrol edin; makine güvenli ve uygun durumda değilse, çalıştırmayın ve yetkili bir uzmana tamir ettirin.

⚠ Tehlike

Makine arızalı veya hasarlıysa, servise geri verilmeden önce bir uzman tarafından tamir edilmelidir.

⚠ Tehlike

Bu makine yalnızca kullanımı hakkında yeterince eğitilmiş kişiler tarafından kullanılabilir.

⚠ Uyarı

Güç fişini ıslak ellerle takmayın veya çekmeyin. Bu makine ıslak halılarda kullanıma uygun değildir.

⚠ Uyarı

Bu makine iç mekan kullanımı için uygundur ve nemli ya da dış mekan ortamlarında kullanılamaz.

⚠ Uyarı

Bu makineyi kullanırken, güç kablosunun zarar görmesini önlemek için makinenin güç kablosunun üzerinden geçmemesine dikkat edin; güç kablosunun bükülmesine, yırtılmasına veya zarar görmesine neden olan yağ veya keskin cisimlerden kaçınınız.

⚠ Uyarı

Prizin voltaj değerinin makinenin etiketinde belirtilen voltajla eşleştiğinden emin olun.

⚠ Uyarı

Makine, kuru, tozsuz ve aşındırıcı olmayan bir odada saklanmalıdır. Sıcaklık 10 derece Santigrat'tan düşük veya 35 derece Santigrat'tan yüksek olmamalıdır. Düşük sıcaklıklar, nem ve toz, elektrikli bileşenlerin ömrünü ciddi şekilde kısaltabilir.

⚠ Uyarı:


Aşağıdaki durumlarda, lütfen makinenin gücünü kapatın ve fişini çekin.

- Temizlik, bakım, tamir veya makinenin parçalarının değiştirilmesi sırasında.
- Makine geçici olarak kullanılıyorsa veya başıboş bırakıldıysa.
- Makine saklandığında.

KULLANIM TALİMATLARI

Kullanım öncesi hazırlık:

1. Makinenin kutusunu açın, makinenin tüm parçalarını çıkarın ve yere düz bir şekilde yerleştirin (Şekil 1).
2. Makineyi ters çevirin ve bir "pop" sesi duyun (Resim 2).
3. Tutma sapının alüminyum borusunu gövdenin ilgili deliğine takın (Şekil 3), tutma sapının teleskopik sabitleme mandalını yukarı doğru çevirin, alüminyum borunun mandalını sıkıca bastırın ve tutma sapının alüminyum borusunu gövdenin ilgili deliğine iterek yerleştirin. Son olarak tutma sapı teleskopik olarak sabitlenmiş olur. Mandalı kapatın ve tutma sapının alüminyum borusunu sabitlemek için çevirin (Şekil 4, 5).
4. Vakum bağlantı borusunun bir ucunu prize, diğer ucunu vakum borusuna takın (Resim 6).

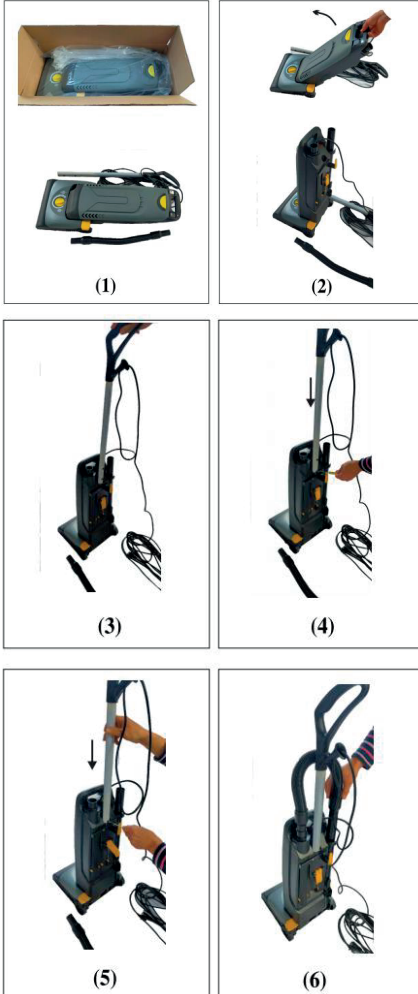

Doğru kullanım yöntemleri ve prosedürleri:

1. Toz torbası kapağını açın, toz torbasını şekilde gösterildiği gibi takın ve toz torbası kapağını kapatın (Şekil 7, 8, 9, 10).
2. Güç kaynağını takın (Şekil 11).
3. Halı tüyünün uzunluğuna göre ayar düğmesini döndürerek silindir fırçanın uygun yüksekliğini ayarlayın (Şekil 12).
4. Aydınlatma için ışık anahtarını açın (Şekil 13). Güç anahtarını açın (Şekil 14).
5. Ayak ayar anahtarına basın ve gövdeyi aşağı doğru döndürün (Şekil 15).
6. Kullanım sapını tutun ve temizleme işlemini tamamlamak için halı üzerinde ileri geri itip çekin (Şekil 16).
7. Üçgen ızgara veya uzun düz ızgara kullanmanız gerektiğinde, gövdeyi yukarı doğru döndürün ve bir "pop" sesi duyun, vakum borusunu çıkarın ve gerektiği gibi uzunluğunu ayarlayın (Şekil 17, 18).
8. Üçgen ızgarayı veya uzun düz ızgarayı çıkarın (Resim 19).
9. Temizlik için gereken üçgen ızgarayı veya uzun düz ızgarayı takın (Şekil 20, 21).

⚠ Dikkat:

Vakum hortumu ile süpürürken, dönen silindir fırçaya sahip fırça başlığı ünitesi halının üzerine konmamalıdır. Çünkü dönen fırça halı yüzeyi ile ne kadar çok temas ederse, halıya verilen zarar o kadar büyük olur.



(7)



(8)



(9)



(10)



(11)



(12)



(13)



(14)



(15)



(16)



(17)



(18)



(19)




(20)



(21)

Toz torbasının nasıl takılacağı ve çıkarılacağı:

1. Gövdeyi yukarı doğru çevirin ve bir "pop" sesi duyun, makinenin yere dik durmasını sağlayın (Şekil 22).
2. Güç anahtarını kapatın ve güç fişini çekin (Şekil 23).
3. Toz torbası kapağını açın, kaldırma çerçevesini saat yönünde döndürün ve toz torbasını çıkarın (Şekil 24, 25, 26).
4. Yeni bir toz torbası takın ve toz torbası kapağını kapatın (Şekil 27, 28).



Filtre tutucusunun çıkarılması

1. Gövdeyi yukarı doğru çevirin ve bir "pop" sesi duyun, böylece makine yere dik durur (Şekil 29).
2. Güç anahtarını kapatın ve güç fişini çekin (Şekil 30).
3. Toz torbasının dış kapağını açın, toz tutucu sabitleme düğmesini kaldırın ve toz tutucuyu çıkarın (Şekil 31, 32, 33).
4. Toz tutucu sabitleme düğmesini yukarı kaldırın, yeni toz tutucuyu yerleştirin ve toz tutucu sabitleme düğmesini aşağı itin, toz tutucuyu sabitleyin ve toz torbası kapağını kapatın (Şekil 34, 35).



Kare susturucunun nasıl takılacağı ve çıkarılacağı

1. Gövdeyi yukarı doğru çevirin ve bir "pop" sesi duyun, makinenin yere dik durmasını sağlayın (Şekil 36).
2. Güç anahtarını kapatın ve güç fişini çekin (Şekil 37).
3. Toz torbasının dış kapağını açın, sünger kapağını yukarı çekin, sünger kapağını çıkarın ve kare susturucuyu çıkarın (Şekil 38, 39, 40, 41).
4. Yeni kare susturucu pamukunu yerine koyun, sünger kapağını geri takın ve toz torbası kapağını kapatın (Şekil 42, 43, 44).



(36)



(37)



(38)



(39)




(40)



(41)



(42)

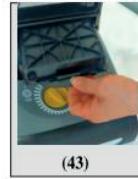

(43)



(44)

Rulo fırçalarının değiştirilmesi

1. Gövdeyi yukarı doğru çevirin ve bir "pop" sesi duyun, böylece makine yere dik şekilde durur (Şekil 45).
2. Güç anahtarını kapatın ve güç fişini çekin (Şekil 46).
3. Makineyi ters çevirin ve vidaları açmak için bir tornavida kullanın. Rulo fırçasının sağ tutucusunu çıkarın (Şekil 47, 48, 49).
4. Yeni rulo fırçayı makineye takın, rulo fırçasının sağ sabitleme yuvasını kapatın ve vidalarla sabitleyin (Şekil 50, 51, 52, 53).



(45)




(46)



(47)



(48)

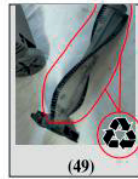

(49)



(50)



(51)



(52)



(53)

Ana teknik parametreler

Kapasite	5,5 L
Voltaj	220VAC
Frekans	50Hz
Vakum motorunun nominal gücü	1200W
Rulo fırça motorunun nominal gücü	200W
Temizleme genişliği	30mm
Vakum derecesi	190mbar
Gürültü	80dB
Net ağırlık	9.2Kg
Brüt ağırlık	10.7Kg
Paket boyutları	847x335x215mm

Yaygın Arızalar:

1. Makine çalışmıyor: Lütfen güç kablosunun bağlı olup olmadığını ve güç kablosunun hasar görüp görmediğini kontrol edin.
2. Makinenin emiş gücü yetersiz: Lütfen hava borularının ve hortum makinesi bağlantılarının tıkalı olup olmadığını kontrol edin. Toz torbası kapağının kapalı olup olmadığını ve toz torbasının dolu olup olmadığını kontrol edin.
3. Temizlik yeterince temiz değil: En iyi temizlik etkisini elde etmek için ayar düğmesini ayarlayarak rulo fırçanın halıyla tam temas etmesini sağlayın.

Tehlike

Bu makinenin yanıcı ve patlayıcı gaz ortamında kullanılması yasaktır.

Önlemler

1. Bu makine, sakat, tepkisiz veya zihinsel engelli kişiler (çocuklar dahil) tarafından, güvenlikleri için sorumlularının rehberliği veya yardımı olmadan kullanılmamalıdır.
2. Çocukların makineyle oynamalarını sağlamak için gözetim altında tutulmalıdırlar.
3. Makineyi temizlerken veya tamir ederken, güç fişini prizden çektiğinizden emin olun.
4. Güç kablosu zarar görmüş veya gevşekse, güç kablosu üreticinin servis organizasyonu veya kalifiye bir kişi tarafından değiştirilmelidir ve bağlantısı Y-tipi bağlantı olmalıdır.
5. Makine durduktan sonra güç fişini çekin.
6. Makinenin voltaj ve frekansına uygun bir güç kaynağı kullanın.

SERVİS LİSTESİ

ADANA
BARJET END.TEM.MAK.
SEYFETTİN BARAN
KIZILAY CAD.KARASOKU MAH.28010 SOK.
NO:11/A SEYHAN
0322 392 20 21

TORK MAKİNA
MİKAIL AKYILDIZ
KARASOKU MH.280/14 SOK.NO.1/D 0322 352 25 45

ADİYAMAN
EMEK BOBİNAJ
MEHMET NURİ AKASLAN
MIMAR SINAN MAH. ATATÜRK BULV.191/A
0415 216 75 05

EMEK TEKNİK MAKİNA
ABDULMUSA AKASLAN
YAVUZ SELİM MAH.ARZUMKENT CAD.NO.20/B
MERKEZ
TEL: 0545 402 02 21

ANKARA
DURALLAR TEMİZLİK MAK.
SARPIN DURAL
ÖZANKARA TOPTANCILAR SİTESİ 1.BLOK
NO:5 MACUNKÖY YENİMAHALLE
0312 215 31 52

AK HİLAL TEMİZLİK MAKİNALARI
AHMET PULAT
422.SOK.NO.24/C DEMETEVLER
0312 346 96 55

BARIM MAKİNA
ABDULLAH SÜTÇÜ
ALINTERİ BULVARI 116/11 SK.
(EŞKİ 223 SK.)NO:18/A OSTİM
0312 384 06 45

DEMİRDEN MAKİNA LTD.ŞTİ.
MURAT DEMİR
1234 SK. (EŞKİ 57 SK.) NO:153 OSTİM
0 312 385 93 85

PÜDAS PETROL/ REÇEP ÇELEN
1263 SOK.NO.30 OSTİM
0312 396 86 00

ANTALYA
GÖKKER MAKİNA
GÖKHAN GÖKKER
CUMHURİYET MAH.EŞKİ SAN.SİT.682 SOK.
NO:37 MERKEZ 0242 343 21 29

AKTİF BOBİNAJ / HÜSEYİN SARI
SANAYİ MAH. 2005 SOK. NO:25/Z01
MANAVGAT 0242 742 56 29

KARADUMAN ZİRRA ALETLER
SABRİ KARADUMAN
SANAYİ SİTESİ AHMET AYIK CAD.G BLOK
NO:43 ALANYA
0242 515 06 76

MC TEMİZLİK HİZM.
ÖZCAN GÜLÖĞLU
MURAT PAŞA MAH.576 SK.NO:3
MURATPAŞA
0242 248 08 00
KOYUNCU MAKİNA
HAYRİ KOYUNCU
MURATPAŞA MAH 561 SOK H.AYDEMİR APT.
NO 46/A-B MURATPAŞA
0242 345 58 59

AYDIN
KILIOĞLU BOBİNAJ
ERCÜMENT KILIOĞLU
ATA MAH. ALT. SAN. SİT. 1 CAD.
N:6 EFELER 0256 214 30 32

HÜSEYİN ÖZDEMİR
ZEYBEK MAH.3.SAN.SİT.1521 SOK.NO:31/7
EFELER
TEL:0533 644 82 03

BALIKESİR
EMEK MOTOR
YILMAZ GÜNDÖĞAN
YENİ SAN SİT 8.SOK.NO:26 2. KAPI GİRİŞİ
KARŞIŞ MERKEZ
0266 246 10 47

MUTLU MOTOR
SEDAT MUTLU
ATATÜRK CAD.NO:257
BANDIRMA 0266 715 44 43

BATMAN
AKTİF BOBİNAJ
HİKMETYAR BİLGE
YENİ MAHALLE 16.CAD.
1008 SOK. NO:8
0488 214 56 64

BURDUR
ÇEVİKLER BOB.
ÜMIT ÇEVİK
AYDINLIKEVLER MH.KSS.2.SK.15
MERKEZ 0248 252 94 37

BURSA
AŞE MAKİNA
Harun ATEŞ
SAKARYA MH 4.DUZ SK NO. NO: 7/A
OSMANGAZI 0224 272 33 11

ÇANAKKALE
KISACIK BOBİNAJ
SAMİ KISACIK
NAMIK KEMAL MAH.KAYNAK SOK.NO.1-C
MERKEZ
0286 217 96 71

DENİZLİ
ÖRSLER BOBİNAJ
SAMİM ÖRSÖĞLU
AHI SINAN CAD SEDEF CARŞISI
NO.9-11 0258 261 42 74

DIYARBAKIR
IKRA BOBİNAJ
SAHİL SÜREN
1.SAN.SİT.B/5 BLOK NO.6
0412 237 60 21

DÜZCE
MOTOR MEKANİK BOBİNAJ
ZAFER ÜNAL
ESKİ SANAYİ ÇARŞISI TAHIR ALTIN SOK
NO:17/B 0380 523 87 03
EDİRNE
ERAY BOBİNAJ
M.ERAY TUĞRUL
ESKİ SAN.SİT.12 BLOK NO.10
0284 225 26 92

ELAZIĞ
TEKSER TEKNİK
MUHAMMER ATALAY
SANAYİ SİT. 10. SOK. NO:4
0424 224 83 14

ERZİNCAN
BAKIRÇIOĞLU ELEKTRİK
HARUN SUDAŞ
KARAAĞAÇ MH.İŞMERBANK CD.N:18/4
MERKEZ
0446 224 42 19

ERZURUM
TEKNİK MAKİNA BOBİNAJ
MÜKREMIN SEVİNDİ
SANAYİ DEMİRCİLER SİTESİ 1.BLOK NO.46
0442 243 17 34

GAZİANTEP
FATİH TEKNİK MAKİNA
EMİRHAN KAYCI
KÜLTÜR SANAYİ SİTESİ
ANAFARTALAR BULV. SOSYAL TESİSLER
4.ADA 2.TİP NO:10
ŞEHİTKAMİL
0342 235 37 18

M.ERCAN KOCAOĞLAN
SARIGÖLLÜK MAH.KILIÇ ALI CAD.NO:10/A
ŞEHİTKAMİL
0342 338 74 76
HATAY
PAK İŞ ELEKTRİK
MUZAFFER PAK
HARAPINASI MAH.2.CAD.NO:7 ANTAKYA
0326 215 64 73-0326 221 15 45

İSTANBUL-ANADOLU
MC TEMİZLİK MAKİNALARI
MUSTAFA TAYLAN
YENİ ÇAMLIÇA MAH.KEMALPAŞA CAD.NO:7/C
ATAŞEHİR
0216 660 12 85

İSTANBUL-AVRUPA
SERVICE MACRO MAK.
TURGUT İPKIRMAZ
KİTELLİ OSGH MH.GÜNGÖREN METRO AVM B
BLK.1 NO: 36 BAŞAKŞEHİR
0212 703 33 10

AS MAKİNA
SELÇUK ACAR
FETİH TEPE MAH.TEPE ÜSTÜ SOK.NO.55
HASKÖY
BEYOĞLU
0212 235 25 26

İZMİR
OLMO TEMİZLİK
HÜSEYİN GÖKOĞLU
1203/3 SOK.NO:5 GIDA CARŞISI/YENİŞEHİR
0232 433 01 93
K.MARAS
KAHRAMAN BOBİNAJ
MESUT KURU
YENİ SANAYİ SİTESİ 25. ÇARŞI NO:8 DULKAD-
IROĞLU 0344 236 29 68

ÜSTÜN BOBİNAJ
MURAT ÜSTÜN
YENİ SANAYİ SİTESİ 9.BLOK NO:14 ELBİSTAN
0344 413 64 93

KARS
AYRIM ELEKTRİK
HAMİT AYRIM
MERKEZ MAH. İSMAIL AYTEMİZ CAD. NO:23
MERKEZ 0474 223 82 95

KASTAMONU
NUR BOBİNAJ
MUSTAFA SAKAR
SAN.SİT.CAMİ CAD.NO.29/A MERKEZ
0366 214 61 18

KAYSERİ
POMSAN SERVİS
ALPER DEMİR
KEYKUBAT MAH.OSMAN KAVUNCU
BULVARI NO.313
MELİKGAZI
0352 332 30 11

KIRKLARELİ
YALÇIN SOĞUTMA LTD.ŞTİ.
GÜNDOĞDU
MH.1. FATİH CD.NO:195 LÜLEBURGAZ
KIRKLARELİ
0288 412 01 49

KOCAELİ
AKPET LTD.ŞTİ.
MUHAMMER YEĞİN
İSTASYON MH.ÇİLEM SK.KARTEPE SAN.
E BLOK N:174
0262 321 07 85

DURSAN ELKTRİK
İHSAN DURMUS
KARPAZAS MAH.KÖSEÖĞLU SOK.FUAR APT.
NO:24 İZMİT
0262 325 91 41

KONYA
TEKYAMAN BOBİNAJ
ETHEM YAMAN
FEVZİ ÇAKMAK MAH. 10563 SOK.NO:7
KARATAY
0332 242 68 50

BOLLUCA TEKSTİL TEMİZLİK VE KİMYA
LTD. ŞTİ.
SAFA BOTSALI
TOPTANCILAR ÇAR. GÖKÇEBEY SK. NO:32
SELÇUKLU
0332 238 77 20

MALATYA
SK TEMİZLİK MALZEMELERİ
ERŞİN KAYA
SANCAKKAR MAH.KÖPRÜ SOK.NO:18/B
BATTALGAZI
TEL: 0422 322 23 77

MANİSA
ERCOM TEKN.SERV. HİZ.
EVREN ÇOŞKUN
ATATÜRK MAH.162 SOK.NO:8/A AKHİSAR
TEL:0236 413 44 44

MERSİN
ÇOŞKUN BOBİNAJ
SEDAT ÇOŞKUN
MAH.MALİYE MAH.4810 SOK.NO:69
0325 337 31 61

MUĞLA
EYÜP BOBİNAJ
EYÜP TIRIMOĞULLARI
ULUSAL EĞEMENLİK CD.N:67 MARMARIS
0252 412 14 50

MERKEZ BOBİNAJ
EMRAH HAYTA
İNÖNÜ BULVARI NO:74 FETHİYE
0252 612 10 51

ÖNMAK TEKNİK-İDRİS ÜNAL
YAKAKÖY MAH.ÇİLEK CAD.NO:86 BODRUM
0543 939 11 55

ORDU
KAHVECİOĞLU ELEKTRİK
CUMHUR KAHVECİ
DURUGÖL MAH. ATATÜRK BULVARI NO:205
0452 233 13 35

SAKARYA
İR MAKİNA -
FATİH İR
FEVZİ PAŞA CAD. ÇARK SAN. SİT
N:36 SERDİVAN
0264 279 01 81

MTS POMPA
MEHMET DÜMLÜ
MODERN SAN.SİT.İNÖNÜ CAD.
86.YOL.NO.29
0264 275 43 87

SAMSUN
METİN BOBİNAJ / ADEM METİN
ESKİ SAN.SİT.YENİ MAH.ULUS CAD.NO:42
0362 228 64 25

İŞILDAK BOBİNAJ
MELİH İŞILDAK
ALAÇAM CD. BELEDİYE DUKKANLARI NO:115
BAFRA 0362 543 10 49

ŞANLIURFA
ELİSAN BOBİNAJ
NURETTİN GÜLER
CUMHURİYET CAD.1. VATAN SOK.NO.33 0414
315 02 62

TEKİRDAĞ
EFSA TEMİZLİK MAKİNALARI
CÜNEYT MURATOĞLU
100.YIL SANAYİ SİTESİ TİT İŞ MERKEZİ NO:49
MERKEZ
0262 263 59 91

M-MAK END.TEM.EKP.TİC.LTD.ŞTİ.
NO:18/B ÇORLU
TEL:0282 653 80 90

TOKAT
ÇETİN ELEKTRİK BOBİNAJ
MUSTAFA ÇETİN
SAN.SİT.CAMİ ALTI NO.13
0356 214 63 07


TRABZON
DIÑÇ BOBİNAJ / AYHAN DIÑÇER
BUYUKSANAYİ SİTESİ. SOSYAL HİZMET
BİNASI NO:3-B
0222 225 22 02

VAN
TÜTÜNÇÜOĞLU
İBRAHİM HAKKI YAŞAR
YENİ OTOSANAYİ SİTİP BLOK NO.4
0432 223 28 47



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com





FACTOR

UPRIGHT VACUUM CLEANER

USER MANUAL

PR30U



CONTENTS

The main structure	4
Operation instructions	5
Technical parameters	9


Product description

Welcome to purchase and use the CB30 upright vacuum cleaner. The machine has a compact design and is easy to operate, which can help property and cleaning companies save costs and improve efficiency. Carpet vacuuming suitable for all industrial and commercial environments. For example: carpets in hotels and guesthouses. Large-scale exhibitions, carpets in exhibition halls, etc. All vacuuming works perfectly and efficiently.

THE MAIN STRUCTURE

Schematic diagram of the main operating structure of the PR30U upright vacuum cleaner:

1. Vacuum connection pipe
2. Motor switch
3. 2X0.75mm2*12m wire
4. Dust bag cover switch
5. Dust bag cover
6. Knob
7. Light guide sheet
8. Foot adjustment switch
9. Light switch
10. Operating handle
11. Hose fittings
12. Long flat steak
13. Triangle Grill
14. Handle adjustment switch
15. Vacuum pipe

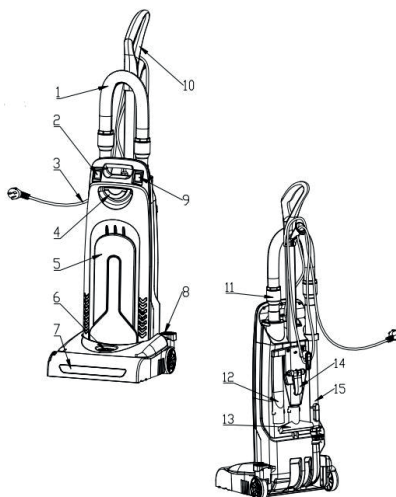

Danger

Do not use the machine in rooms where packaging or flammable materials (eg gasoline, thinner, fuel oil, etc.) are stored, accumulated. Electrical or mechanical parts of the machine may cause these items to burn.

Danger

Regularly check the power cord for tears or aging; if the machine is not in a safe and proper condition, do not start the machine and have it repaired by an authorized professional.

Danger

The machine is faulty or damaged and must be repaired by a professional before being put back into service.

Danger

This machine may only be used by persons who have been adequately trained in its use.

Warning

Do not insert or unplug the power plug with wet hands. This machine is not suitable for use on wet carpets.

Warning

This machine is suitable for indoor use and cannot be used in a humid or outdoor environment.

Warning

When operating this machine, it is necessary to avoid the machine rolling over the power cord to avoid damage to the power cord; avoid oil or sharp objects that cause the power cord to be bent, torn or damaged.

Warning

Make sure that the voltage rating in the outlet matches the voltage specified on the machine label.

Warning

The machine should be stored in a dry, dust-free, non-corrosive room. The temperature is not lower than 10 degrees Celsius or more than 35 degrees Celsius. Low temperatures, humidity and dust can severely shorten the life of electrical components.

Warning: In the following situations, please turn off the power of the machine and unplug it.

When cleaning, maintaining, repairing, or replacing parts of the machine.


When the machine is in use temporarily or is left unattended.

When the machine is stored.

OPERATION INSTRUCTIONS

Preparation before operation:

1. Open the carton of the machine, take out all parts of the machine and lay it flat on the ground (Figure 1).
2. Turn the machine over and hear a "pop" sound (Picture 2).
3. Insert the handle aluminum tube into the corresponding hole of the fuselage (Figure 3), turn the handle telescopic fixing clip upward, press the aluminum tube shrapnel firmly and push the handle aluminum tube into the corresponding hole of the fuselage, and finally the handle is telescopic and fixed. Clamp down and flip the handle aluminum tube to fix it (Figure 4, 5).
4. Insert one end of the vacuum connection tube into the plug and the other end into the vacuum tube (Picture 6).

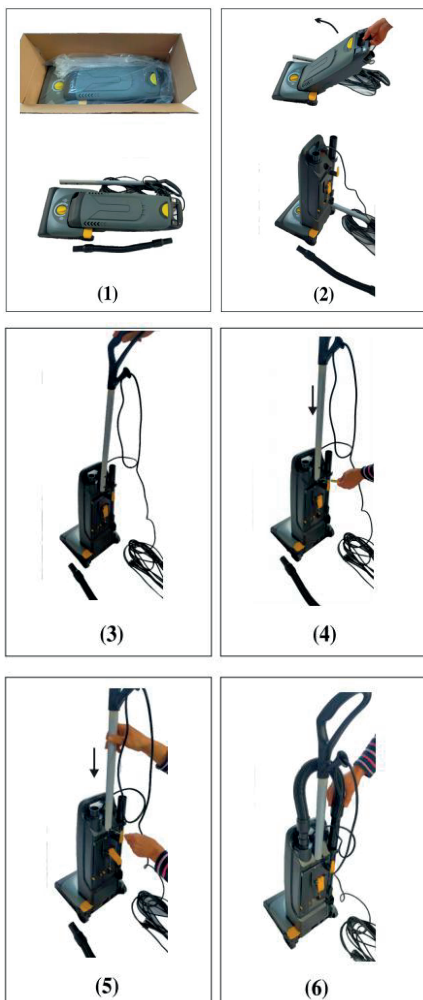

Correct operation methods and procedures:

1. Open the dust bag cover, install the dust bag as shown in the figure and close the dust bag cover (Figure 7, 8, 9, 10).

2. Plug in the power supply (Figure 11).

3. Rotate the adjustment knob according to the length of the carpet hair to adjust the proper height of the roller brush (Figure 12).

4. For lighting, please turn on the lighting switch (Figure 13). Turn on the power switch (Figure 14).

5. Depress the foot adjustment switch and rotate the body downward (Figure 15).

6. Hold the operating handle and push and pull back and forth on the carpet to complete the cleaning work (Figure 16).

7. When you need to use triangle grill or long flat grill. Rotate the body upwards and hear a "pop" sound, remove the vacuum tube and adjust the length as needed (Figure 17, 18).

8. Remove the triangular grill or the long flat grill (Picture 19).

9. Insert a triangular grill or a long flat grill as required for cleaning (Figure 20, 21).


Notice:

The brush head unit with the rotating roller brush should not be placed on the carpet when vacuuming with a vacuum hose, because the longer the rotating brush is in contact with the surface of the carpet, the greater the damage to the carpet.




How to install and remove the dust bag:

1. Turn the body up and hear a "pop" sound, and make the machine stand on the ground (Figure 22).
2. Turn off the power switch and pull out the power plug (Figure 23).
3. Open the dust bag cover, rotate the lift frame clockwise and take out the dust bag (Figure 24, 25, 26).
4. Install a new dust bag and close the dust bag cover (Figure 27, 28).

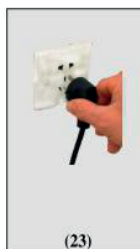

Removal of filter holder

1. Rotate the body up and hear a "pop" sound, so that the machine stands on the ground (Figure 29).
2. Turn off the power switch and pull out the power plug (Figure 30).
3. Open the outer cover of the dust bag, lift up the dust trap fixing button and take out the dust trap (Figure 31, 32, 33).
4. Lift the dust trap fixing button up, put the new dust trap in and push the dust trap fixing button down, fix the dust trap and cover the dust bag cover (Figure 34, 35).

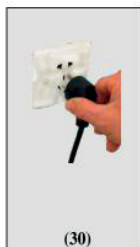

How to install and remove square muffler

1. Rotate the body up and hear a "pop" sound, and make the machine stand on the ground (Figure 36).
2. Turn off the power switch and pull out the power plug (Figure 37).
3. Open the outer cover of the dust bag, pull up the sponge cover, take out the square muffler (Figure 38, 39, 40, 41).
4. Replace the new square muffler cotton, put the sponge cover back, and cover the dust bag cover (Figure 42, 43, 44).



(36)



(37)



(38)



(39)



(40)



(41)



(42)



(43)



(44)

Replacement of roller brushes

1. Rotate the body up and hear a "pop" sound, so that the machine stands on the ground (Figure 45).
2. Turn off the power switch and pull out the power plug (Figure 46).
3. Turn the machine over and use a screwdriver to unscrew the screws. Take out the right holder of the roller brush (Figure 47, 48, 49).
4. Install the new roller brush on the machine, cover the right fixing seat of the roller brush and fasten it with screws (Figure 50, 51, 52, 53).



(45)



(46)



(47)



(48)



(49)



(50)



(51)



(52)



(53)

The main technical parameters

Capacity	5.5 L
Voltage	220VAC
Frequency	50Hz
Rated power of vacuum motor	1200W
Rated power of roller brush motor	200W
Cleaning width	30mm
Vacuum degree	190mbar
Noise level	80dB
Net weight	9.2Kg
Gross weight	10.7Kg
Package dimensions	847x335x215mm

Common malfunctions:

1. The machine does not work: Please check whether the power cord is powered on and whether the power cord is damaged.
2. Insufficient suction of the machine: Please check whether the air pipes and hose machine interfaces are blocked. Whether the dust bag cover is closed and the dust bag is full.
3. The cleaning is not clean: Please adjust the adjustment knob to make the roller brush fully contact with the carpet to achieve the best cleaning effect.

Danger

**It is forbidden to use this machine
in the environment of flammable
and explosive gas.**

Precautions

1. This machine is not intended to be used by persons (including children) who are infirm, unresponsive or mentally handicapped, unless they are used safely under the guidance or assistance of those responsible for their safety.
2. Children should be supervised to ensure that they do not play with the machine.
3. When cleaning or repairing the machine, be sure to unplug the power plug from the socket.
4. When the power cord is damaged or loose, the power cord should be replaced by the manufacturer's service organization or a qualified person, and its connection is Y-type connection.
5. Unplug the power plug after the machine is stopped.
6. Use a power supply that matches the voltage and frequency of the machine.



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com

