



FACTOR

HALI TEMİZLİK OTOMATI

KULLANMA KILAVUZU

PS40



Dikkat !

1. Bu cihaz fiziksel olarak yetersiz durumda olan, zihinsel sorunları bulunan ve çocukların kullanımı için üretilmemiştir.
2. Çocukların cihazla oynamadıklarından emin olmak için sürekli gözlemleyin.
3. Cihazın temizlenmesi ya da bakımı gibi işlemlerden önce mutlaka fişi prizden çekin.
4. Elektrik kablosu hasar gördüğünde tamir ettirin ya da benzer değerlerde yeni bir kabloyla değiştirin. Elektrik kablosu X bağlantılıdır.
5. Cihazı kapattıktan sonra fişi prizden çekin.
6. Şebeke voltajı ve frekansı, cihaz etiketi üzerinde bulunan değerlerle uyumlu olmalıdır.

İÇİNDEKİLER


Ürün Tanıtımı	4
Çalıştırma Talimatları	5
Rulo Fırçasını Değiştirme	6
Problemler ve Çözümleri	6
Bakım	7
Teknik Veriler	7
Teknik Şema	8

ÜRÜN TANITIMI

PS40 halı temizleme makinası özel bir halı temizleme makinasıdır. Ürün zemine püskürtme yaptığında aynı zamanda vakümlama yaparak halı yüzeyinin kurumasını sağlayarak sorunsuz bir temizlik sunmaktadır. Genel yapısı itibarıyla kompakt,kullanışlı ve esnek kullanıma elverişli olması ile birlikte koridorlar, konferans salonları ve halı zemini bulunan tüm alanlarda en iyi temizlik için tasarlanmıştır.

Ürün Yapısı

1. Kontrol Paneli
2. Güç kablosu
3. Tahliye hortumu
4. Taşıma teker
5. Silindir fırça
6. Portatif vakum aparatı girişi
7. Kirli su tankı kapağı
8. Kirli su tankı
9. Temiz su tankı kapağı
10. Temiz su tankı
11. Vakum başlığı

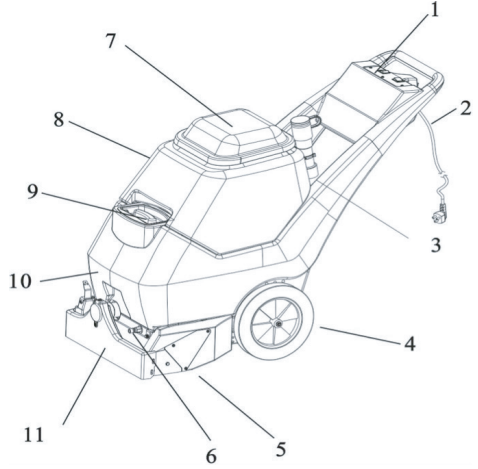

ÇALIŞTIRMA TALİMATI

Kullanımdan Öncesi Dikkat

PS40 Halı temizlik otomatını tercih ettiğiniz için teşekkür ederiz. Lütfen ürünü kullanmadan önce kullanım kılavuzunu dikkatlice okuyunuz. Kullanım kılavuzu ürün kullanımı ve bakımı ile ilgili önemli bilgiler içermektedir. Kullanım kılavuzunu okumadan ürünü çalıştırmanız sizin için tehlikeli ve ürüne zarar verecek sonuçlara sebep olabilir.

Çalıştırma Güvenlik Kuralları

TEHLİKE: Kullanım kılavuzunu okumadan makinenin çalıştırılması veya bakımı, sizin veya başkalarının yaralanmasına, makede veya diğer parçalarda hasara neden olabilir. Kullanmadan önce, operatör makinenin çalıştırılmasına izin vermeden önce operasyonel eğitim almalıdır.

TEHLİKE: Bu makineyi yanıcı veya patlayıcı maddelerin yakınında kullanmayın, bu makineye yanıcı maddeler ekleyemezsiniz.

TEHLİKE: Elektrik kablosu hasar gördüğünde, derhal, elektrik çarpmasından kaçınmak için ve hemen fabrika servis ajanlarına lütfen makineyi kullanmayı bırakın. veya yardım için benzer nitelikli personel, değiştirmek için

TEHLİKE: Makinenin bakımı veya onarımı durumunda, elektrik çarpmasını önlemek için lütfen gücü kesin.


TEHLİKE: Köpük veya sıvı taşması durumunda, derhal makineyi kapatın, nedenini kontrol edin ve tamir.

TEHLİKE: Makine ağır olduğu için, makineyi yokuşlarda veya yokuşlarda park etmeyin ve makineyi yokuşlarda çalıştırmayın.

TEHLİKE: Temizlik için 60 C üzerindeki sıcaklıklarda su kullanmayın, aksi takdirde makineye zarar verir çalıştırmanız sizin için tehlikeli ve ürüne zarar verecek sonuçlara sebep olabilir.


Çalıştırma Talimatları

1. Makineyi paketinden çıkardıktan sonra, makinenin tamamlanıp tamamlanmadığını, aksesuarların eksiksiz olduğunu kontrol edin.
2. Temizlerken, temiz su tankına temiz su ve deterjan eklemeniz gerekir.
3. Gücü takın, sırasıyla kontrol panelindeki kontrol paneline basın. işlevin düzgün çalışıp çalışmadığını kontrol edin.
4. Makineyi temizlemeye hazır halıya doğru bastırın.
5. Temiz çalışmadan sonra, fi şi prizden çekin. Su haznesi ve su sırasındaki atık su haznesi temizlenir ve temiz su haznesi ve emme borusuyla suyu temizleyin

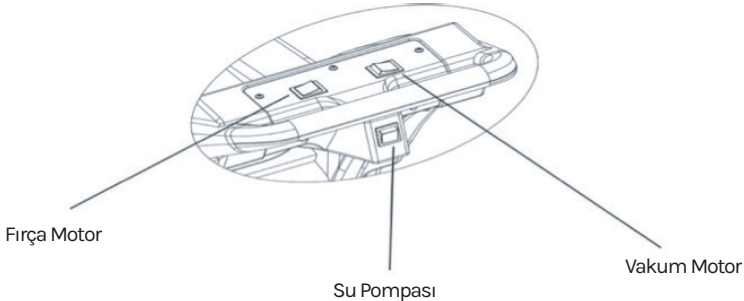

RULO FIRÇASINI DEĞİŞTİRME

1. Lütfen rulo fırçasını değiştirmeden önce makineyi kapatın ve koruyucu eldiven kullanın.
2. Zemindeki kol dayaması, yerden fırçalı fırça.
3. Gövde çekme silindiri limit sürgüsünün önüne alıp silindir fırçasını çıkarabilirsiniz.

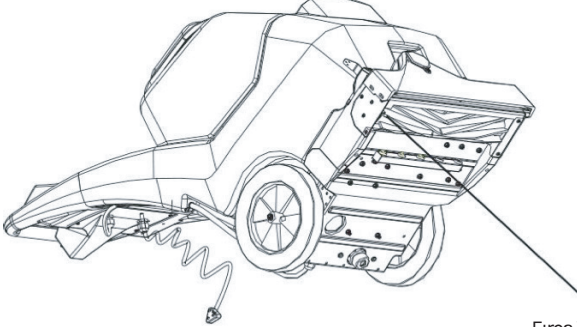

Fırça Yükseklik Ayarı

PROBLEM VE ÇÖZÜMLERİ

Sorun	SebeP	Çözüm
Elektrik yok	Elektrik kablosu hasarlı	Elektrik kablosunu değiştirin
	Kısa devre	Kontrol edin yada değiştirin
Siviç açık fakat motora giden güç kaynağı kesiliyor	Elektrik kablosu hasarlı Siviç hasarlı Zayıf bağlantı	Tamir edin yada değiştirin
Yetersiz vakum	Tahliye valfi açık	Tahliye valfini kapatın
	Atık su depo arasında sızdırma	Vidaları sıkın,hava sızdırmasını önleyin
	Gevşek vakum bağlantısı	Kesin ve vidalayın
	Emme borusu tıkalı	Emme borusunu yıkayın
	Vakum borusu anızalı	Yenisı ile değiştirin
	Vakum motor bağlantısı gevşek	Vidalayıp sabitleyin
Pompa motoru çalışıyor Su püskürtmüyor	Nozul tıkalı	Nozulu temizleyin
	Filtre tıkalı	Filtre temizleyin
	Tahliye valfi çalışmıyor	Tamir edin yada değiştirin
	Pompa motoru anızalı	Tamir edin yada değiştirin
Fırça düzgün çalışmıyor	Kayış gevşek yada anızalı	Tamir edin yada değiştirin
	Fırça motoru anızalı	Tamir edin yada değiştirin


BAKIM

1. Makineyi temiz tutun.
 2. Temiz su deposuna 50 galon sıcak sudan 2 galon ekleyin, pompayı ve memeyi çalıştırın, alkalin maddelerin birikmesini önlemek için emerek 1 dakika emip çalıştırın. hava ihracatının engellenmemesini sağlamak için açık ve temiz. kir ve temizleyin. Sulu çözelti (sirke ve su içinde 1: 3) ve en az 3 kez durulayın.
 3. Kir ve tiftik çıkışındaki atık su tankını temizleyin, pamuk olmalıdır.
 4. Su tankının kontrol edildiği tankın içini kontrol edin.
 5. Artık alkalin temizleme solüsyonunu gidermek için 6 numaralı sirke ile durulayın.
- Tüm sıvılar uzaklaştırılmalıdır.


TEKNİK VERİLER

Ürün ölçüsü	111x55x94,5 cm
Brüt ağırlık	65 kg
Net ağırlık	46,2 kg
Volta j	220/50hz
Güç	2300w
Güç kablosu uzunluk	18 mt
Fırça devri	1400 rpm
Fırça motor güç	150w
Fırça uzunluk	400mm
Vakum motor	1000w X 2
Vakum çapı	460mm
Su pompası güç	130w
Su basıncı	120 Psi
Temiz su tank	21LT
Kirli su tankı	38LT

TEKNİK ŞEMALAR

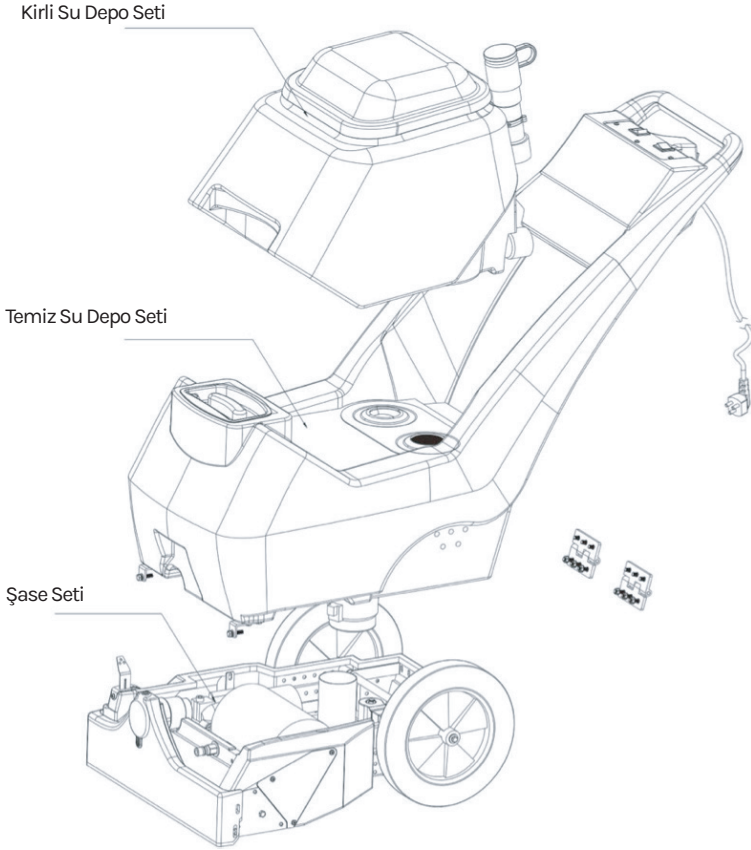


Kirli Su Depo Seti

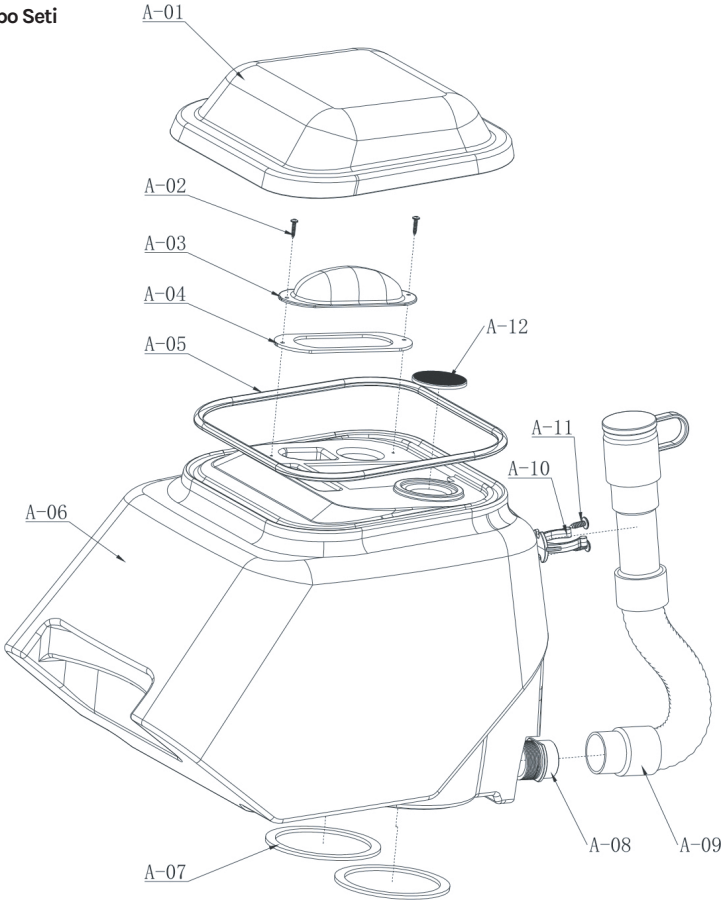

A-01	Depo Kapağı	1 adet
A-02	Vida 5*16	2 adet
A-03	Üst Kapak	1 adet
A-04	Conta	1 adet
A-05	Kapak Contası	1 adet
A-06	Kirli Su Deposu	1 adet
A-07	Alt conta	2 adet
A-08	Hortum Bağlantı Adaptörü	1 adet
A-09	Kirli Su Hortumu	1 adet
A-10	Hortum Kelepçesi	1 adet
A-11	Vida	2 adet
A-12	Kapak	1 adet


Temiz Su Depo Seti

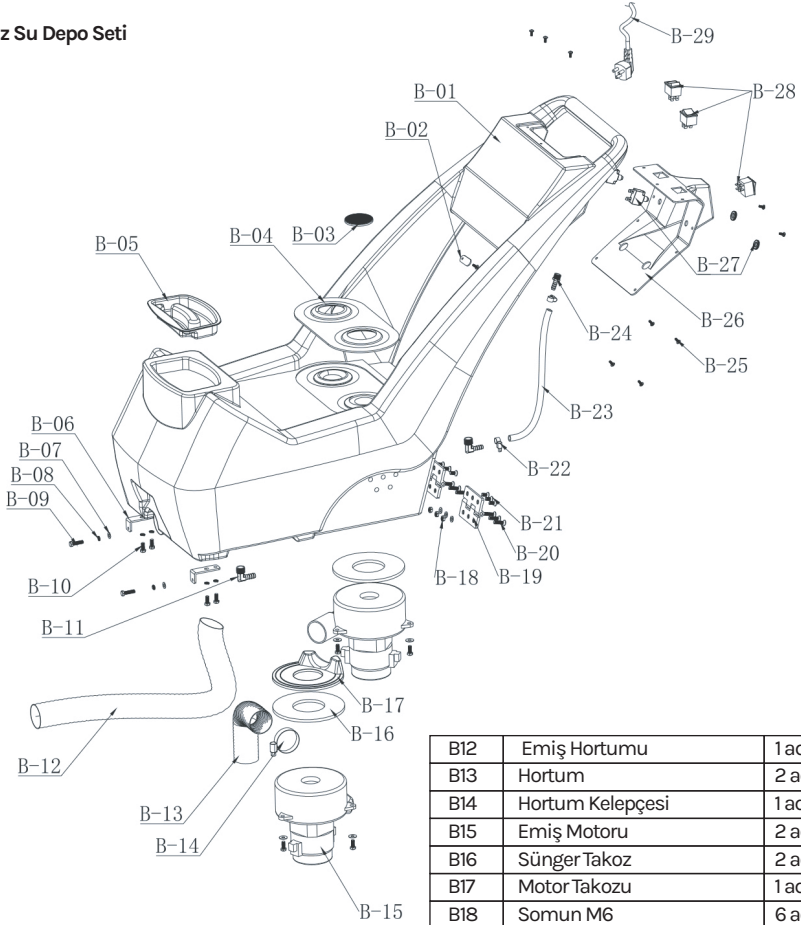

B1	Temiz Su Deposu	1 adet
B2	Plaka	2 adet
B3	Kapak	1 adet
B4	Conta	1 adet
B5	Depo Kapağı	1 adet
B6	Depo Kitleme	2 adet
B7	O-ring	13 adet
B8	O-ring	6 adet
B9	Vida M6*25	2 adet
B10	Vida M6*15	9 adet
B11	Dirsek	2 adet

B12	Emiş Hortumu	1 adet
B13	Hortum	2 adet
B14	Hortum Kelepçesi	1 adet
B15	Emiş Motoru	2 adet
B16	Sünger Takoz	2 adet
B17	Motor Takozu	1 adet
B18	Somun M6	6 adet
B19	Plaka	2 adet
B20	Vida	6 adet
B21	Vida	6 adet
B22	Hortum Kelepçesi	2 adet
B23	Hortum	1 adet
B24	Nipel	1 adet
B25	Vida	9 adet
B26	Kontrol Paneli	1 adet
B27	Sigorta / Termik	2 adet
B28	Şalter	3 adet
B29	Güç Kablosu	1 adet

Şase Seti

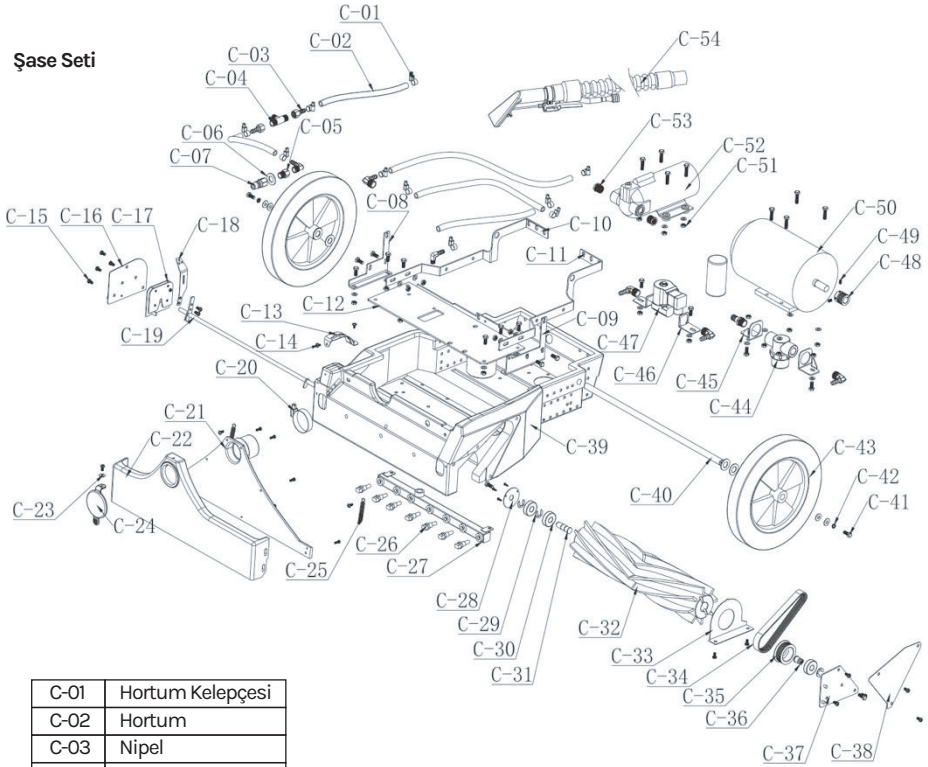


C-01	Hortum Kelepçesi
C-02	Hortum
C-03	Nipel
C-04	By-pass
C-05	Somun
C-06	O-ring
C-07	Mafsall
C-08	Sol Plaka
C-09	Sağ Plaka
C-10	Şase Plaka Sol
C-11	Şase Plaka Sağ

C-12	Şase Plaka Alt
C-13	Kol
C-14	Vida 4*12
C-15	Cida 5*10
C-16	Fırça Plaka
C-17	Fırça Plaka
C-18	Kol
C-19	Mil
C-20	Fırça Kelepçesi
C-21	Emici Arka Plaka

C-22	Emiş Paneli
C-23	O-ring
C-24	Kapak
C-25	Yay
C-26	Nozul
C-27	Nozul Yatağı
C-28	Segman
C-29	Segman
C-30	Rulman
C-31	Rulman Yatağı A
C-32	Rulo Fırça
C-33	Plaka Sağ
C-34	Kayış

C-35	Kasnak
C-36	Rulman Yatağı B
C-37	Plaka Sol
C-38	Kasnak Kapağı
C-39	Şase

C-40	Mil
C-41	Vida
C-42	O-ring
C-43	Teker
C-44	Filtre
C-45	Filtre Yatağı
C-46	Valf Plakası
C-47	Valf
C-48	Kasnak
C-49	Vida
C-50	Fırça Motoru
C-51	Somun M6
C-52	Su pompası
C-53	Masfal
C-54	Manuel Emiş Takımı

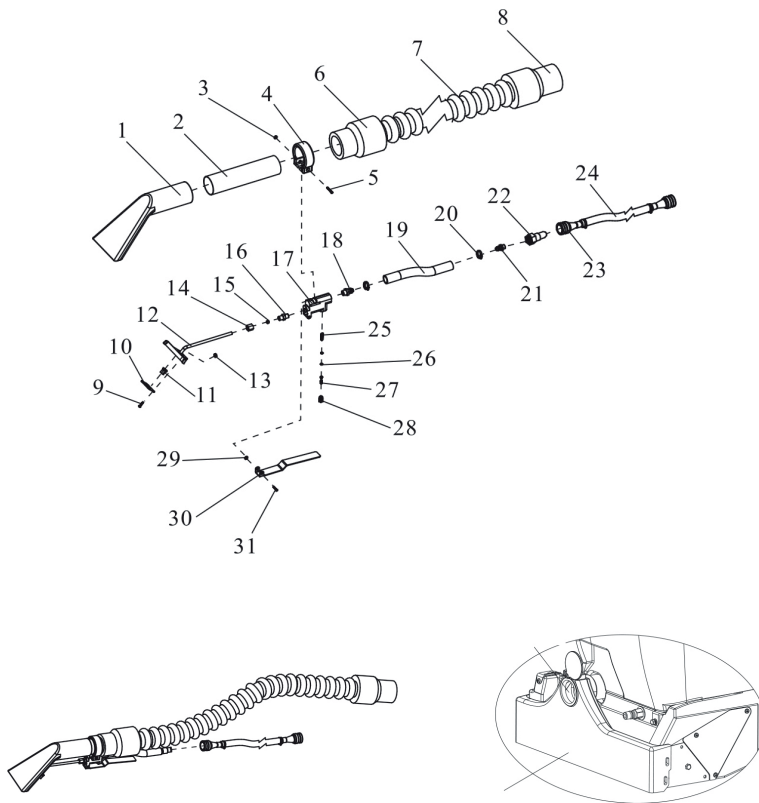

1	Emici Başlık
2	Boru
3	Somun M5
4	Kelepçe
5	Vida
6	Hortum Adaptörü
7	Hortum
8	Hortum Adaptörü
9	Vida M4x10
10	Nozul
11	Enjektör
12	Nozul Yatağı
13	Somun M4
14	Somun
15	Somun

16	Cıvata
17	Şalter Yatağı
18	Nozul
19	Hortum
20	Kelepçe
21	Nozul
22	Masfal
23	Adaptör
24	Hortum
25	Yay
26	Keçe
27	Burç
28	Somun
29	Somun M4
30	Şalter Kolu
31	Vida M4x20

SERVİS LİSTESİ

ADANA
BARJET END.TEM.MAK.
SEYFETTİN BARAN
KIZILAY CAD.KARASOKU MAH.28010 SOK.
NO:11/A SEYHAN
0322 352 20 21

TORK MAKİNA
MIKAIL AKYILDIZ
KARASOKU M.H.280/114 SOK.NO.1/D 0322 352 25 45

ADİYAMAN
EMEK BOBİNAJ
MEHMET NURİ AKASLAN
MIMAR SINAN MAH. ATATÜRK BULVARI 191/A
0416 216 75 66

EMEK TEKNİK MAKİNA
ABDULLAH AKASLAN
YAVUZ SELİM MAH.ARZUMKENT CAD.NO:20/B
MERKEZ
TEL: 0545 402 02 21

ANKARA
DURALLAR TEMİZLİK MAK.
SARPIN DURAL
ÖZANKARA TOPTANCIILAR SİTESİ 1.BLOK
NO:6 MACUNKÖY YENİMAHALLE
0312 213 31 52

AK HİLAL TEMİZLİK MAKİNALARI
AHMET PULAT
422.SOK.NO:24/C DEMETEVLER
0312 346 96 56

BARIR MAKİNA
ABDULLAH SÜTÇÜ
ALINTI BULVARI 1161/1 SK.
(ESKİ 223 SK.NO:19/A ÖSTİM
0312 384 05 45

DEMİRDEN MAKİNA LTD.ŞTİ.
AHMET DEMİR
1234 SK. (ESKİ 57 SK. NO:153 ÖSTİM
0 312 395 93 85

PÜDAŞ PETROL / REÇEP ÇELEEN
1263 SOK.NO:30 ÖSTİM
0312 395 86 00

ANTALYA
GÖKLER MAKİNA
GÖKHAN GÖKLER
CUMHURİYET MAH.ESKİ SAN.SİT.682 SOK.
NO:37 MERKEZ 0242 343 21 29

AKTİF BOBİNAJ / HÜSEYİN SARI
SARAY MAH. 2005 SOK. NO:25/Z01
MANAVGAT 0242 742 56 29

KARADUMAN ZİRAİ ALETLER
SABRİ KARADUMAN
SARAYİ SİTESİ AHMET AYIK CAD.G BLOK
NO:43 ALANYA
0242 515 06 76

MC TEMİZLİK HİZM.
ÖZCAN GÜLOĞLU
MURAT PAŞA MAH.576 SK.NO:3
MURATPAŞA
0242 248 08 00
KOYUNCU MAKİNA
HAYRİ KOYUNCU
MURATPAŞA MAH 561 SOK HAYDEMİR APT.
NO 46/A-B MURATPAŞA
0242 345 58 59

AYDIN
KILCIOĞLU BOBİNAJ
ERCUMENT KILCIOĞLU
ATA MAH. ALT SAN. SİT. 1 CAD.
N:6 EFELER 0256 214 30 32

HÜSEYİN ÖZDEMİR
ZEYBEK MAH.3.SAN.SİTİ:1521 SOK.NO:31/7
EFELER
TEL:0533 644 82 03

BALIKESİR
EMEK MOTOR
YILMAZ GÜNDÖĞAN
YENİ SAN SİT 8 SOK NO:26 2. KAPI GİRİŞİ
KARŞISI MERKEZ
0266 246 10 47

MUTLU MOTOR
SEDAT MUTLU
ATATÜRK CAD.NO:257
BANDIRMA 0266 715 44 43

BATMAN
AKTİF BOBİNAJ
HİKMETYAR BİLGE
YENİ MAHALLE 16.CAD.
1008 SOK. NO:8
0488 214 56 64
BURDUR
ÇEVİKLER BOB.
ÜMIT ÇEVİK
AYDINLIKEVLER M.H.KSS.2.SK.15
MERKEZ 0248 252 94 37

BURSA
ATES MAKİNA
Harun ATEŞ
SAKARYA MH 4.DUZ SK NO. NO: 7/A
OSMANGAZI 0224 272 33 11

ÇANAKKALE
KISACIK BOBİNAJ
SAMI KISACIK
NAMIK KEMAL MAH.KAYNAK SOK.NO.1-C
MERKEZ
0286 217 96 71

DENİZLİ
ÖRSLER BOBİNAJ
SAMİM ÖRSÖĞÜL
AHI-SINAN CAD.SEDEK CARŞISI
NO 9-11 0258 261 42 74

DIYARBAKIR
IKRA BOBİNAJ
SAHİL SÜREN
1.SAN.SİT.B/5 BLOK NO.6
0412 237 60 21

DÜZCE
MOTOR MEKANİK BOBİNAJ
ZAFER ÜNAL
ESKİ SARAYI CARŞISI TAHRİR ALTIN SOK
NO:17/B 0380 523 87 03
EDİRNE
ERAY BOBİNAJ
M.ERAY TUĞRUL
ESKİ SAN.SİT.12 BLOK NO.10
0284 225 26 92

ELAZIĞ
TEKSER TEKNİK
MUAMMER ATALAY
SARAY SİT. 10. SOK. NO:4
0424 214 83 14

ERZİNCAN
BAKIRCIOĞLU ELEKTRİK
HARUN SUDAŞ
KARAAĞAÇ M.H.ŞÜMERBANK CD.N:18/4
MERKEZ
0446 224 42 19

ERZURUM
TEKNİK MAKİNA BOBİNAJ
MÜKREMIN SEVİDİ
SARAYİ DEMİRCİLER SİTESİ 1.BLOK NO.46
0442 243 17 34

GAZİANTEP
FATİH TEKNİK MAKİNA
EMİRHAN KAVCI
KÜŞEET SARAYI SİTESİ
ANAFARTALAR BULV. SOSYAL TESİSLER
4.ADA 2.TİP NO:10
ŞEHİTKAMİL
0242 235 37 18

MİERCAN KOCAOĞLAN
SARIÇOLLUK MAH.KILIÇ ALI CAD.NO:10/A
ŞEHİTKAMİL
0342 338 74 76
HATAY
PAK İŞ ELEKTRİK
MUZAFFER PAK
HARAPARASI MAH.2.CAD.NO:7 ANTAKYA
0326 215 64 73-0326 221 15 45

İSTANBUL-ANADOLU
MC TEMİZLİK MAKİNALARI
MUSTAFA TAYLAN
YENİ ÇAMLIÇA MAH.KEMALPAŞA CAD.NO:7/C
ATAŞEHİR
0216 660 12 85

İSTANBUL-AVRUPA
SERVICE MACRO MAK.
TURGUT İPKIRMAZ
İKTELLİ OSB M.H.ĞÜNGÖREN METRO AVM B
BLK.1 NO: 36 BAŞAKŞEHİR
0212 703 33 10

AS MAKİNA
SELÇUK ACAR
FETİH TEPE MAH.TEPE ÜSTÜ SOK.NO.55
HASKÖY
BEYOĞLU
0212 235 25 26

İZMİR
OLMO TEMİZLİK
HÜSEYİN GÖKOĞLU
1203/3 SOK.NO:5 GIDA CARŞISI/YENİSEHİR
0232 433 01 93
K.MARAŞ
KAHRAMAN BOBİNAJ
MESUT KURU
YENİ SARAY SİTESİ 25. ÇARŞI NO:8 DULKAD-
İROĞLU 0344 236 29 68

ÜSTÜN BOBİNAJ
MURAT ÜSTÜN
YENİ SARAY SİTESİ 9.BLOK NO:14 ELBİSTAN
0344 413 64 93

KARS
AYRIM ELEKTRİK
HAMİT AYRIM
MERKEZ MAH. İSMAIL AYTEMİZ CAD. NO:23
MERKEZ 0474 223 82 95

KASTAMONU
NUR BOBİNAJ
MUSTAFA SAKAR
SAN.SİT.CAMI CAD.NO.29/A MERKEZ
0366 214 61 18

KAYSERİ
POMSAN SERVİS
ALPER DEMİR
KEYKUBAT MAH.OSMAN KAVUNCU
BULVARI NO.313
MELİKGAZI
0352 332 30 11

KIRKLARELİ
YALÇIN SOĞUTMA LTD.ŞTİ.
GÜNDOĞDU
M.H.FATİH CD.NO:95 LÜLEBURGAZ
KIRKLARELİ
0288 412 01 49

KOCAELİ
AKPET LTD.ŞTİ.
MUHAMMER YEGİN
İSTASYON M.H.ÇİLEM SK.KARTEPE SAN.
E BLOK N:174
0262 321 07 85

DURSAN ELEKTRİK
İHSAN DURMUŞ
KARAAĞAŞ MAH.KÖSEÖĞLU SOK.FUAR APT.
NO:24 İZMİT
0262 325 91 41

KONYA
TEKYAMAN BOBİNAJ
ETHEM YAMAN
FEVZİ ÇAKMAK MAH. 10563 SOK.NO:7
KARATAY
0332 942 68 50

BOLLUCA TEKSTİL TEMİZLİK VE KİMYA
LTD. ŞTİ.
SAFA BOTSAL
TOPTANCIILAR ÇAR. GÖKÇEBEY SK. NO:32
SELÇUKLU
0332 238 77 20

MALATYA
SK TEMİZLİK MALZEMELERİ
ERSİN KAYA
SANCARTAR MAH.KÖPRÜ SOK.NO:18/B
BATTALGAZİ
TEL: 0422 322 23 77

MANİSA
ERCOM TEKN.SERV. HİZ.
EYREN COŞKUN
ATATÜRK MAH.162 SOK.NO:8/A AKHİSAR
TEL:0236 413 44 44

MERSİN
COŞKUN BOBİNAJ
SEDAT COŞKUN
MAHMUDİYE MAH.4810 SOK.NO:69
0325 337 31 61

MUĞLA
EYÜP BOBİNAJ
EYÜP TIRIMOĞULLARI
LULUSAL EĞİTİM ENLİK CAD.NO:67 MARMARİS
0252 412 14 50

MERKEZ BOBİNAJ
EMRAH HAYTA
İNÖNÜ BULVARI NO:74 FETHİYE
0252 612 10 51

ÜNMAK TEKNİK-İDRİS ÜNAL
YAKARÖY MAH.ÇİLEK CAD.NO:86 BODRUM
0543 338 11 55

ORDU
KAHVECİOĞLU ELEKTRİK
CUMHUR KAHVECİ
DURUGÖL MAH. ATATÜRK BULVARI NO:205
0452 233 13 35

SAKARYA
İR MAKİNA -
FATİH İR
FEVZİ PAŞA CAD. ÇARŞI SAN. SİT
N:36 SERDİVAN
0264 279 01 81

MTS POMPA
MEHMET DUMLU
MODERN SAN.SİTİNİNÖNÜ CAD.
86.YOL NO:29
0264 275 43 87

SAMSUN
METİN BOBİNAJ / ADEM METİN
ESKİ SAN.SİTİYENİ MAH.LULUS CAD.NO:42
0362 228 64 25

İŞLIDAK BOBİNAJ
MELİH İŞLIDAK
ALÇAAM CD. BELEDİYE DUKKANLARI NO:115
BAFRA 0362 543 10 49

ŞANLIURFA
ELSAN BOBİNAJ
NURETTİN GÜLER
CUMHURİYET CAD.1.VATAN SOK.NO.33 0414
313 02 62

TEKİRDAĞ
EFSA TEMİZLİK MAKİNALARI
CÜNEYT MURATOĞLU
100.YIL-SARAY SİTESİ TİM İŞ MERKEZİ NO:49
MERKEZ
0282 263 59 91

M-MAK END.TEM.EKP.TİC.LTD.ŞTİ.
REŞADİYE MAH. MANDIRACI CAD. 3.SOK.
NO:18/B ÇORLU
TEL:0282 653 80 90

TOKAT
CETİN ELEKTRİK BOBİNAJ
MUSTAFA ÇETİN
SAN.SİT.CAMI ALTI NO.13
0356 214 63 07


TRABZON
DIÑÇ BOBİNAJ / AYHAN DIÑÇER
BÜYÜKSARAY SİTESİ SOSYAL HİZMET
BİNASI NO:3-B
0462 325 22 02

VAN
TÜTÜNCÜOĞLU
İBRAHİM HAKKI YAŞAR
YENİ OTOSARAY SİTİ F.BLOK NO.4
0242 223 28 47



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com





THREE-IN-ONE CARPET CLEANER
USER MANUAL

PS40



Caution!

1-This device is not designed for use by persons with physical or mental disabilities, or by children.

2-Always supervise to ensure that children do not play with the device.

3-Unplug the power cord before performing any cleaning or maintenance operations.

4-If the power cord is damaged, have it repaired or replaced with a cord of similar specifications. The power cord has an X-connection.

5-Unplug the power cord after switching off the device.

6-The mains voltage and frequency must match the values specified on the device label.



CONTENTS

Product Introduction 4

Operating Instructions..... 5

Replacing the Roller Brush..... 6

Problems and Solutions 6

Maintenance 7

Technical Data 7


Technical Diagram 8

PRODUCT INTRODUCTION

PS40 carpet cleaning machine is a specialized carpet cleaner. When the product sprays the floor, it simultaneously vacuums, enabling the carpet surface to dry quickly and providing a seamless cleaning experience. Its overall design is compact, practical, and suitable for flexible use, making it ideal for corridors, conference halls, and all areas with carpeted floors, ensuring optimal cleaning performance.

Product Structure

- 1 Control Panel
- 2 Power Cord
- 3 Drain Hose
- 4 Carrying Wheel
- 5 Cylinder Brush
- 6 Portable Vacuum Attachment Inlet
- 7 Dirty Water Tank Lid
- 8 Dirty Water Tank
- 9 Clean Water Tank Lid
- 10 Clean Water Tank
- 11 Vacuum Head

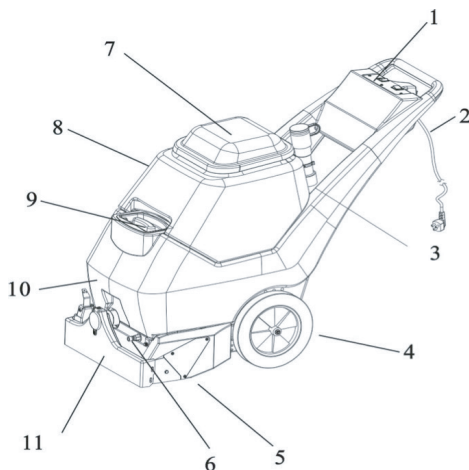

OPERATING INSTRUCTIONS

Pre-Use Precautions

Thank you for choosing the PS40 carpet cleaning machine. Please read the user manual carefully before operating the device. The manual contains important information regarding the use and maintenance of the product. Operating the machine without reading the manual may be dangerous and could cause damage to the device.

Operating Safety Rules

DANGER: Operating or maintaining the machine without reading the manual can cause injury to yourself or others, and damage to the machine or other components. The operator must receive operational training before being authorized to use the machine.

DANGER: Do not use this machine near flammable or explosive materials, and do not add flammable substances to the machine.

DANGER: If the power cord is damaged, immediately stop using the machine to avoid electric shock, and contact authorized service personnel or qualified technicians for replacement.

DANGER: During maintenance or repair, disconnect power to prevent electric shock.

DANGER: In case of foam or liquid overflow, immediately turn off the machine, check the cause, and repair it.

DANGER: Due to the machine's weight, do not park it on slopes or hills, and do not operate it on inclines.

DANGER: Do not use water above 60°C for cleaning; doing so may damage the machine and create hazardous conditions.

Operating Instructions


After unpacking, check if the machine is complete and all accessories are included.

When cleaning, fill the clean water tank with clean water and detergent

Connect the power, then press the control panel buttons to check if all functions operate properly.

Press the machine gently onto the carpet to start cleaning.

After cleaning, unplug the power cord. Clean the waste water tank, clean water tank, and suction hose thoroughly.

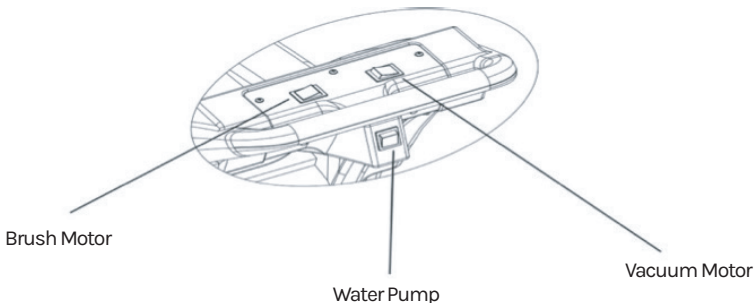


REPLACING THE ROLLER BRUSH

Please turn off the machine and wear protective gloves before replacing the roller brush.

The floor has an armrest and a brush with bristles.

Pull the body cylinder in front of the limit slider to remove the cylinder brush.

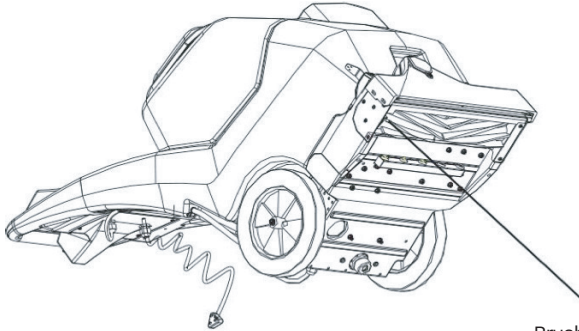

Brush Height Adjustment

PROBLEMS AND SOLUTIONS

Problem	Cause	Solution
No electric	Electric cord damaged	Electric cord damaged
	Short circuit	Check or replace it
Switch is on, but power supply to the motor is cut off	Electric cord damaged Switch faulty Loose connection	Repair or replace it
Insufficient vacuum	Drain valve is open	Close the drain valve
	Leakage between the wastewater tank and the container.	Tighten the screws to prevent air leaks.
	Loose vacuum connection.	Seal and screw tightly.
	Suction hose is clogged.	Wash the suction hose.
	Vacuum hose is damaged.	Replace it with a new one.
	Vacuum motor connection is loose.	Screw it in and secure it.
Pump motor is running No water spray	Nozzle is clogged.	Clean the nozzle.
	Filter is clogged.	Clean the filter.
	Drain valve is not working	Repair or replace it
	Pump motor malfunctioning	Repair or replace it
Brush is not working properly	Belt is loose or faulty.	Repair or replace it
	Brush motor malfunctioning	Repair or replace it

MAINTENANCE

Keep the machine clean.

Add 2 gallons of hot water to 50 gallons in the clean water tank, run the pump and nozzle, and operate the suction for 1 minute to prevent the buildup of alkaline substances. Ensure the air outlet is open and clean.

Clean dirt and residue with a water solution (1 part vinegar to 3 parts water) and rinse at least 3 times.

Clean the wastewater tank at the dirt and lint outlet; it should be free of cotton residue.

Check the inside of the water tank regularly.


Rinse with vinegar (No. 6) to remove any remaining alkaline cleaning solution.

All liquids must be completely removed.


TECHNICAL DATA

Product Dimensions	111 x 55 x 94.5 cm
Gross Weight	65 kg
Net Weight	46.2 kg
Voltage	220 V / 50 Hz
Power	2300 W
Power Cord Length	18 m
Brush Speed	1400 rpm
Brush Motor Power	150 W
Brush Length	400 mm
Vacuum Motor Power	1000 W x 2
Vacuum Diameter	460 mm
Water Pump Power	130 W
Water Pressure	120 Psi
Clean Water Tank	21 L
Dirty Water Tank	38 L

TECHNICAL DIAGRAMS

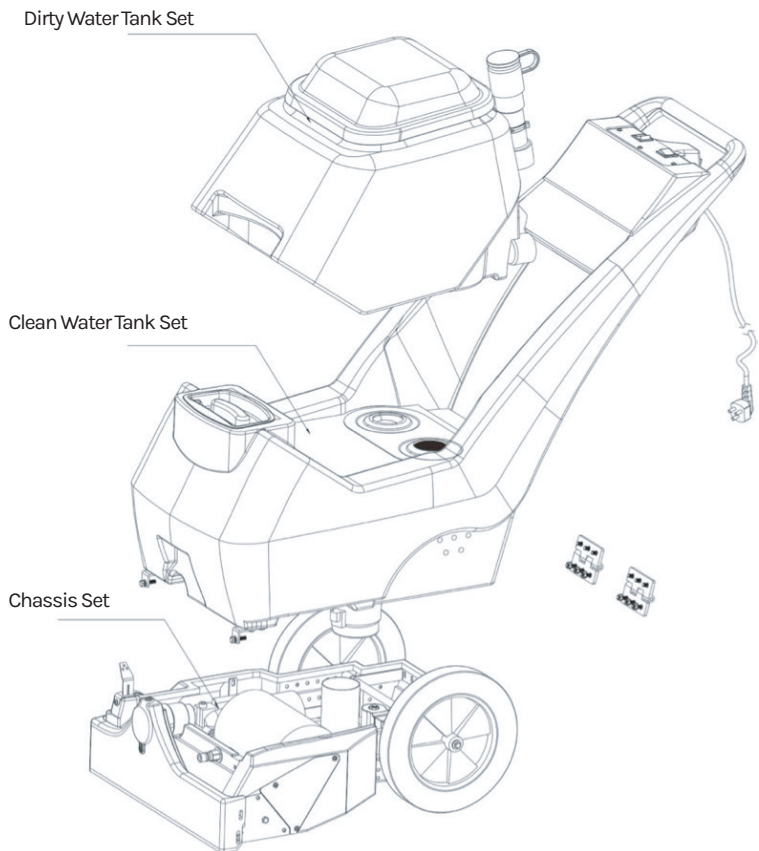


Dirty Water Tank Set

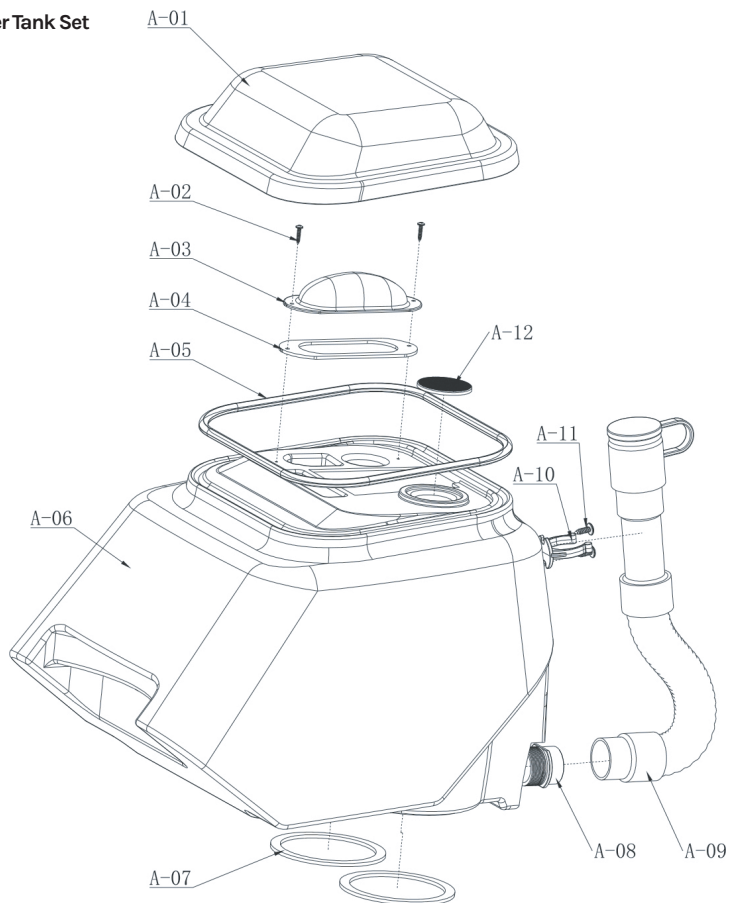

A-01	Tank Lid	1 piece
A-02	Screw 5*16	2 pieces
A-03	Upper Cover	1 piece
A-04	Gasket	1 piece
A-05	Lid Gasket	1 piece
A-06	Dirty Water Tank	1 piece
A-07	Lower Gasket	2 pieces
A-08	Hose Connection Adapter	1 piece
A-09	Dirty Water Hose	1 piece
A-10	Hose Clamp	1 piece
A-11	Screw	2 pieces
A-12	Cover	1 piece


Clean Water Tank Set

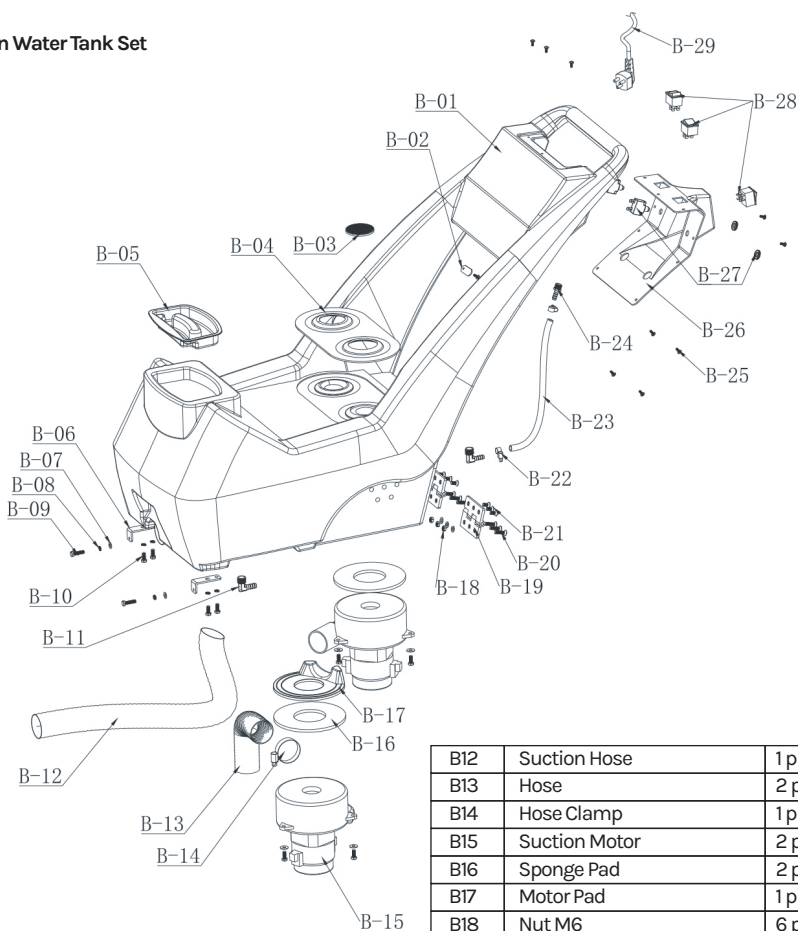

B1	Clean Water Tank	1 piece
B2	Plate	2 pieces
B3	Cover	1 piece
B4	Gasket	1 piece
B5	Tank Lid	1 piece
B6	Tank Lock	2 pieces
B7	O-ring	13 pieces
B8	O-ring	6 pieces
B9	Screw M6*25	2 pieces
B10	Screw M6*15	9 pieces
B11	Elbow	2 pieces

B12	Suction Hose	1 piece
B13	Hose	2 pieces
B14	Hose Clamp	1 piece
B15	Suction Motor	2 pieces
B16	Sponge Pad	2 pieces
B17	Motor Pad	1 piece
B18	Nut M6	6 pieces
B19	Plate	2 pieces
B20	Screw	6 pieces
B21	Screw	6 pieces
B22	Hose Clamp	2 pieces
B23	Hose	1 piece
B24	Nipple	1 piece
B25	Screw	9 pieces
B26	Control Panel	1 piece
B27	Fuse / Thermic	2 pieces
B28	Switch	3 pieces
B29	Power Cord	1 piece

Chassis Set

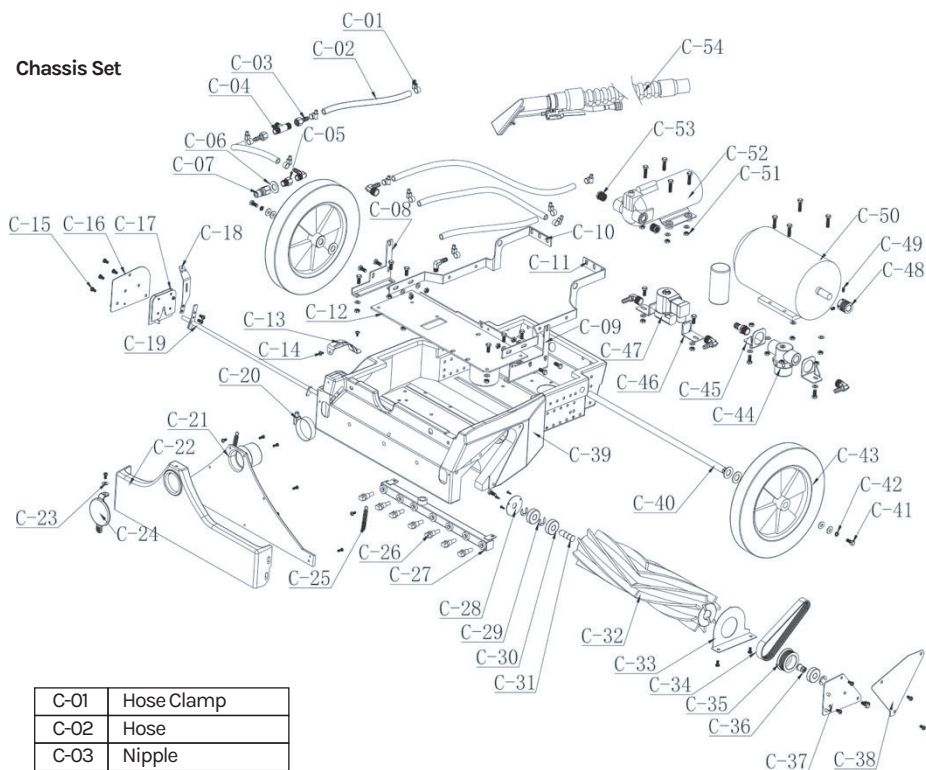


C-01	Hose Clamp
C-02	Hose
C-03	Nipple
C-04	By-pass
C-05	Nut
C-06	O-ring
C-07	Joint
C-08	Left Plate
C-09	Right Plate
C-10	Left Chassis Plate
C-11	Right Chassis Plate

C-12	Lower Chassis Plate
C-13	Arm
C-14	Screw 4*12
C-15	Screw 5*10
C-16	Brush Plate
C-17	Brush Plate
C-18	Arm
C-19	Shaft
C-20	Brush Clamp
C-21	Rear Suction Plate

C-22	Suction Panel
C-23	O-ring
C-24	Cover
C-25	Spring
C-26	Nozzle
C-27	Nozzle Seat
C-28	Snap Ring
C-29	Snap Ring
C-30	Bearing
C-31	Bearing Seat A
C-32	Roller Brush
C-33	Right Plate
C-34	Belt

C-35	Pulley
C-36	Bearing Seat B
C-37	Left Plate
C-38	Pulley Cover
C-39	Chassis

C-40	Shaft
C-41	Screw
C-42	O-ring
C-43	Wheel
C-44	Filter
C-45	Filter Seat
C-46	Valve Plate
C-47	Valve
C-48	Pulley
C-49	Screw
C-50	Brush Motor
C-51	Nut M6
C-52	Water Pump
C-53	Joint (Masfal)
C-54	Manual Suction Assembly

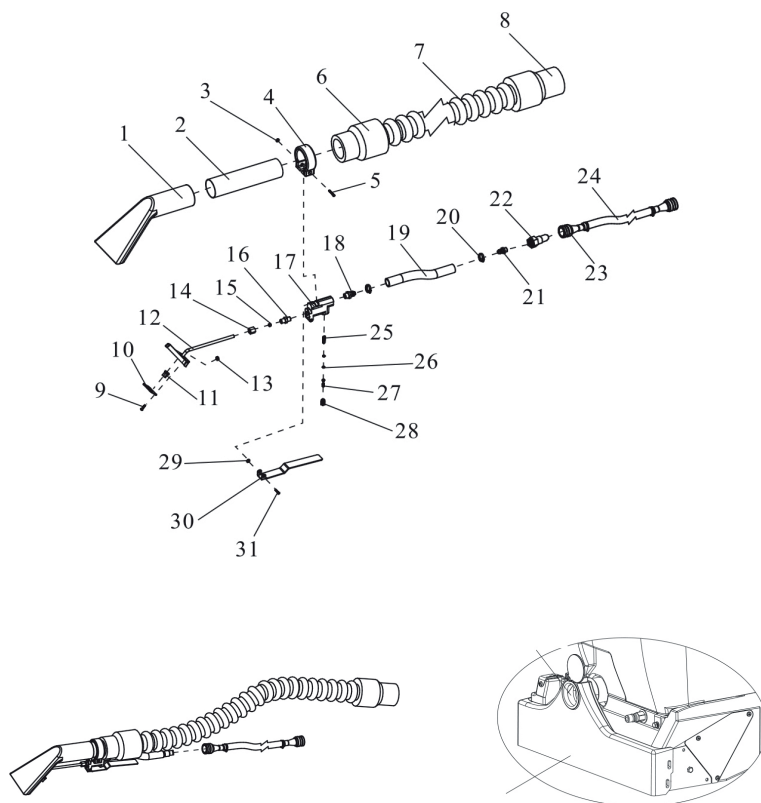

1	Suction Head
2	Pipe
3	Nut M5
4	Clamp
5	Screw
6	Hose Adapter
7	Hose
8	Hose Adapter
9	Screw M4x10
10	Nozzle
11	Injector
12	Nozzle Seat
13	Nut M4
14	Nut
15	Nut

6	Bolt
17	Switch Seat
18	Nozzle
19	Hose
20	Clamp
21	Nozzle
22	Joint (Masfal)
23	Adapter
24	Hose
25	Spring
26	Seal
27	Bushing
28	Nut
29	Nut M4
30	Switch Lever
31	Screw M4x20



reismakina
“Kalitenin Yapı Merkezi”

Reis Makina Ticaret ve Sanayi A.Ş.
Abdurrahmangazi Mh. Ebubekir Cd. İmamoğlu Sk.
No: 2 34887 Samandıra / Sancaktepe / İSTANBUL / TÜRKİYE
Tel: +90 444 73 47 (REIS) Faks: +90 (216) 561 4688
www.reismakina.com

